



Philips  
wireless portable speaker

**Bluetooth®**

Built-in microphone for calls  
Rechargeable battery  
2W

**BT100A**

## Keep your tunes close

Go anywhere compactness meets great sound and a range of colors. Combined with built-in Bluetooth wireless streaming, the BT100 is ideal for the globetrotting fashionista in everyone.

### **Impressive sound**

- Advanced audio performance with a compact design
- Anti-clipping function for loud, distortion free music

### **Designed for grab and go**

- Built-in rechargeable battery for music playback anywhere

### **Simplicity in use**

- Built-in microphone for hands-free phone calls
- Audio-in for easy connection to almost any electronic device
- Wireless music streaming via Bluetooth


# PHILIPS

wireless portable speaker  
Bluetooth® Built-in microphone for calls, Rechargeable battery, 2W

BT100A/00


# Highlights

## Wireless music streaming

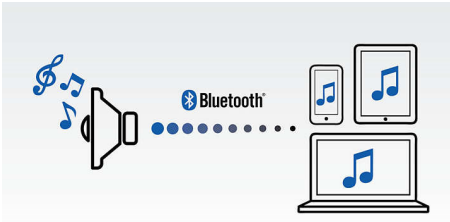

Bluetooth is a short range wireless communication technology that is both robust and energy-efficient. The technology allows easy wireless connection to iPod/iPhone/iPad or other Bluetooth devices, such as smartphones, tablets or even laptops. So you can enjoy your favorite music, sound from video or game wireless on this speaker easily.

## Anti-clipping function

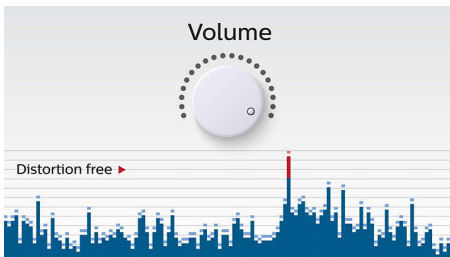

Anti-Clipping lets you play music louder and keeps it high quality, even when the battery is low. It accepts a range of input signals, from 300mV to 1000mV and keeps your speakers

safe from damage by distortion. This built-in function monitors the musical signal as it goes through the amplifier and keeps peaks within the amplifier's range, preventing the audio distortion caused by clipping without affecting loudness. A portable speaker's ability to reproduce musical peaks decreases along with battery power, yet anti-clipping reduces peaks caused by low battery, keeping music distortion free.

## Built-in microphone

With its built-in microphone, this speaker also works as a speaker phone. When a call comes in, the music is put on pause and you can talk via the speaker. Call for a business meeting. Or, call your friend from a party. Either way, it works great.

## Audio-in



Audio-in for easy connection to almost any electronic device

## Built-in rechargeable battery



Play music out loud - anytime, anywhere. The built-in rechargeable battery lets you enjoy your personal music without the fuss of entangled power cords and the inconvenient search for an electrical outlet. Enjoy great music with the freedom of portability now.

## Advanced audio performance

Advanced audio performance with a compact design

wireless portable speaker  
Bluetooth® Built-in microphone for calls, Rechargeable battery, 2W

BT100A/00

# Specifications

## Sound

- Output power (RMS): 2W
- Sound System: Mono

## Design and finishing

- Color: Aqua

## Loudspeakers

- Speaker driver: 1 x 1.75"

## Connectivity

- Bluetooth profiles: A2DP, AVRCP, HFP
- Bluetooth range: Line of sight, 10M or 30FT
- Audio in (3.5mm)
- USB charging

## Convenience

- Built-in microphone: for speaker conference

## Compatibility

- Android tablets & smartphones: with Android 2.1 and Bluetooth 2.1 or above

- iPod touch: 3rd generation or later
- iPad: iPad 1, iPad 2, new iPad, iPad mini, iPad with Retina display
- iPhone: iPhone 3, iPhone 3GS, iPhone 4, iPhone 4S, iPhone 5, iPhone 5C, iPhone 5S
- other Bluetooth-enabled device
- work with: Bluetooth 4.0 or below

## Power

- Battery type: lithium polymer (built-in)
- Operating time on battery: 8 hour(s)

## Accessories

- Included accessories: USB cable for PC charging, World Wide Warranty leaflet, Quick install guide

## Dimensions

- Weight incl. Packaging: 0.3 kg
- Product dimensions (WxDxH): 63 x 63 x 82 mm
- Packaging dimensions (WxDxH): 99 x 99 x 121 mm
- Product weight: 0.18 kg



Issue date 2024-03-24

Version: 3.0.4

EAN: 87 12581 72068 1

© 2024 Koninklijke Philips N.V.  
All Rights reserved.

Specifications are subject to change without notice.  
Trademarks are the property of Koninklijke Philips N.V.  
or their respective owners.

[www.philips.com](http://www.philips.com)