

Philips
5.1 Home theater

DVD

USB 2.0 Karaoke

HTD3540



Powerful surround sound from compact speakers

Home theater sound

Pump up your home entertainment experience with the Philips home theater HTD3540. Exposed speaker drivers offering 300W powerful surround sound and DVD video upscaling to 1080p via HDMI for near-HD images.

Great listening experience

- 300W RMS power delivers great sound for movies and music
- Dolby Digital for ultimate movie experience
- Exposed speaker drivers for powerful surround sound

Simply enjoy all your entertainment

- DivX Ultra Certified for enhanced DivX video playback
- EasyLink to control all HDMI CEC devices via a single remote
- HDMI for high definition movies
- Audio in to enjoy music from iPod/iPhone/MP3 player
- Plays DVD, VCD, CD and USB devices
- Karaoke for endless singing entertainment at home


Designed to enhance your cinema at home

- Modern design to complement your home environment

PHILIPS
sense and simplicity

Highlights

Dolby Digital

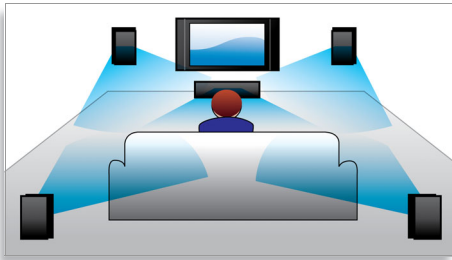

Because Dolby Digital, the world's leading digital multi-channel audio standards, make use of the way the human ear naturally processes sound, you experience superb quality surround sound audio with realistic spatial cues.

Exposed speaker drivers



Exposed speaker drivers for powerful surround sound

Plays it all



Play virtually any disc and any media devices you want - whether they be DVDs, VCDs, CDs or USB devices. Experience the unbeatable convenience of great playability, and the luxury of sharing media files on your TV or home theater system.

DivX Ultra Certified



With DivX support, you are able to enjoy DivX encoded videos and movies from the Internet, including purchased Hollywood films, in the comfort of your living room. The DivX media format is an MPEG-4 based video compression technology that enables you to save large files like movies, trailers and music videos on media like CD-R/RW and DVD recordable disc for playback on your DivX Ultra Certified Philips Blu-ray or DVD player. DivX Ultra combines DivX playback with great features like integrated subtitles, multiple audio languages, multiple tracks and menus into one convenient file format.

HDMI for HD movies



HDMI is a direct digital connection that can carry digital HD video as well as digital multichannel audio. By eliminating the conversion to analog signals it delivers perfect picture and sound quality, completely free from noise. Movies in standard definition can now be enjoyed in true high definition resolution - ensuring more details and more true-to-life pictures.

Audio in



Audio in allows you to easily play your music directly from your iPod/iPhone/iPad, MP3 player, or laptop via a simple connection to your home cinema. Simply connect your audio device to the Audio in jack to enjoy your music with the superior sound quality of the Philips home cinema system.

EasyLink



EasyLink lets you control multiple devices like DVD players, Blu-ray players, TV's etc. with one remote. It uses HDMI CEC industry-standard protocol to share functionality between devices through the HDMI cable. With one touch of a button, you can operate all your connected HDMI CEC enabled equipment simultaneously. Functions like standby and play can now be carried out with absolute ease.

300W RMS power



300W RMS power delivers great sound for movies and music



Specifications

Sound

- Sound System: Dolby Digital 5.1
- Equalizer settings: Gaming, Movie, Music, News, Original
- Sound Enhancement: Night Mode
- Center speaker output power: 50 W
- Satellite speaker output power: 2 x 50 W
- Tallboy speaker output power: 2 x 50 W
- Subwoofer output power: 50 W
- Total Power RMS @ 30% THD: 300 W

Loudspeakers

- Loudspeaker types: 1 x Centre speaker, 2 x Satellite speakers, 2 x Tallboy speakers
- Drivers per Center speaker: 1 x 2.5" Full range woofer
- Center speaker impedance: 4 ohm
- Center speaker freq range: 150 - 20k Hz
- Drivers per Satellite speaker: 1 x 2.5" woofer
- Satellite speaker impedance: 4 ohm
- Satellite speaker freq range: 150 - 20k Hz
- Drivers per Tallboy speaker: 1 x 2.5" woofer
- Tallboy speaker impedance: 4 ohm
- Tallboy speaker freq range: 150 - 20k Hz
- Subwoofer type: Passive
- Subwoofer driver: 1 x 6.5" woofer
- Subwoofer impedance: 4 ohm
- Subwoofer freq range: 20 - 150 Hz

Optical Playback Media

- Playable Discs: CD, CDDA, CD-R/CD-RW, DVD, DVD +R/+RW, DVD -R/-RW, SVCD, VCD

Video Playback

- Compression formats: DivX Ultra, MPEG1, MPEG2, MPEG4

Picture/Display

- Picture enhancement: Video upscaling

Audio Playback

- Compression format: MP3, WMA
- MP3 bit rates: 32 - 320kbps

Still Picture Playback

- Picture Enhancement: Rotate, Zoom
- Picture Compression Format: BMP, GIF, JPEG, TIFF

File Format

- Audio: mp3, wma
- Picture: JPEG, BMP, GIF
- Video: avi, divx, mpeg, mpg

Karaoke Playback

- Standard functions: Echo level control, Mic volume control, Pitch control

Convenience

- EasyLink (HDMI-CEC): Audio Return Channel, Automatic audio input mapping, One touch play, One touch standby, Remote Control-Passthrough, System standby
- HDMI Features: Audio Return Channel (ARC)

Connectivity

- Front Connections: Microphone In, Hi-Speed USB, Audio in
- Rear Connections: Composite video (CVBS) output, Digital optical in, HDMI 1.4 output (ARC), Mini Easy-Fit Speaker Jacks, AUX in

Tuner/Reception/Transmission

- Tuner Bands: FM
- Number of Preset Channels: 40

Power

- Power supply: 110-240V, 50/60 Hz
- Power consumption: 50 W
- Standby power consumption: < 0.5 W

Accessories

- Compatible accessories: STS3001 Speaker stand
- Included accessories: Power cord, Remote Control, 1 x AAA Battery, Safety & Legal Leaflet, Trademarks Sheet, User Manual, World Wide Warranty leaflet, HDMI cable

Dimensions

- Center Speaker (W x H x D): 185 x 90 x 82 mm
- Center Speaker Weight: 0.35 kg
- Centre Speaker cable length: 1.2 m
- Front Speaker (W x H x D): 85 x 159 x 80 mm
- Front Speaker Weight: 0.35 kg
- Front Speaker cable length: 2 m
- Rear Tallboy Speaker (WxHxD): 220 x 1006 x 220 mm
- Rear Speaker Weight: 1.6 kg
- Rear Speaker cable length: 7 m
- Subwoofer (W x H x D): 195 x 265 x 265 mm
- Subwoofer Weight: 2.82 kg
- Subwoofer cable length: 3 m

Outer Carton

- EAN: 87 12581 67860 9
- Gross weight: 12.77 kg
- Outer carton (L x W x H): 90.5 x 37.7 x 27.6 cm
- Nett weight: 11.24 kg
- Number of consumer packagings: 1
- Tare weight: 1.53 kg

Packaging dimensions

- Packaging dimensions (W x H x D): 90.5 x 27.6 x 37.7 cm
- EAN: 87 12581 67860 9
- Gross weight: 12.77 kg
- Nett weight: 11.24 kg
- Number of products included: 1
- Packaging type: Carton
- Tare weight: 1.53 kg
- Type of shelf placement: Laying

Product dimensions

- Product dimensions (W x H x D): 36 x 5.8 x 33.5 cm
- Weight: 2.15 kg



Issue date 2013-04-18

Version: 3.0.2

12 NC: 8670 001 00433
EAN: 87 12581 67860 9

© 2013 Koninklijke Philips Electronics N.V.
All Rights reserved.

Specifications are subject to change without notice.
Trademarks are the property of Koninklijke Philips Electronics N.V. or their respective owners.

www.philips.com

* DivX, DivX Certified, and associated logos are trademarks of DivXNetworks, Inc. and are used under license.

* Dolby and the double-D symbol are registered trademarks of Dolby Laboratories Inc.