

Philips  
Portable DVD Player

17.8 cm (7") LCD  
Dual screens



PD7012



## Enjoy your movies on the road

with two widescreen LCDs

Play your movies and music in car! The Philips PD7012 featuring two 7" TFT LCD display screens let you indulge in enjoying your DVD movies, music and photos on the road. Install and mount easily for in-car enjoyment.

### Play your movies, music and photos on the go

- DVD, DVD+/-R, DVD+/-RW, (S)VCD, CD compatible
- MP3-CD, CD and CD-RW playback
- View JPEG images from picture disc

### Enrich your AV entertainment experience

- 17.8 cm/7" TFT color LCD display in 16:9 wide screen format
- Expand movie enjoyment with dual TFT LCD screens
- Built-in stereo speakers

### Extra touches for your convenience

- Car adaptor and mounting strap included
- Full Resume on Power Loss
- AC/DC adapter included
- Stereo headphone jack for better personal music enjoyment

# PHILIPS

# Highlights

## 18 cm/7" TFT color LCD (16:9)




The color LCD display brings images to life, showing off your treasured photos, favorite movies and music with the same 'real life' rich detail and vibrant colors as high quality prints. The 16:9 widescreen aspect ratio is standard for universal to high-definition digital television. A native 16:9 aspect ratio means video display without bars at top and bottom of the picture and without the quality loss that comes from scaling, altering an image to fit on a different screen size.

## Car adaptor and mounting strap



It comes with convenient in-car accessories to enhance your movie enjoyment on the road. A car adaptor allows you to power your portable DVD player using the cigarette charger, while a mounting strap allows you to attach the player to your car headrest for passenger viewing. Setting up a portable player has never been easier.

## DVD, DVD+/-RW, (S)VCD, CD

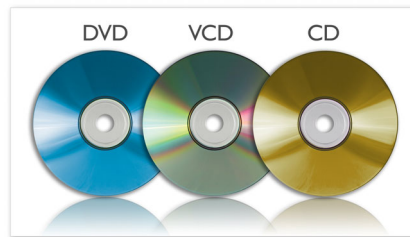

The Philips Portable DVD player is compatible with most DVD and CD discs available in the market. DVD, DVD+/-R, DVD+/-RW, (S)VCD, and CD – all of them can play on the DVD player. DVD+/-R is a shorthand term for

a DVD drive that can accept both of the common recordable DVD formats. Likewise, DVD+/-RW handles both common rewritable disc types.

## Dual TFT LCD display screens



Dual screens allow you to display same videos or images from the portable DVD players. Simply plug in and mount the screens on the headrests in your car. Now you can enjoy your favorite DVD movies and JPEG photos with family and friends at the backseats easily and comfortably.

## Power Resume

The DVD-Video player remembers where you stop watching last time when it is powered off directly or when the power supply discontinued. If you did not switch to play another disc, your player will resume play where you have stopped the movie last time just by reloading the disc. Making your life a lot easier!



# Specifications

## Product dimensions

- Cable length: 0 cm
- Cable length: 0 inch
- Product dimensions (W x H x D): 15.5 x 20 x 3.9 cm
- Product dimensions (W x H x D): 6.1 x 7.9 x 1.5 inch
- Weight: 0.63 kg
- Weight: 1.389 lb

## Packaging dimensions

- Packaging dimensions (W x H x D): 36 x 29.5 x 7.2 cm
- Packaging dimensions (W x H x D): 14.2 x 11.6 x 2.8 inch
- Nett weight: 1.57 kg
- Nett weight: 3.461 lb
- Gross weight: 2 kg
- Gross weight: 4.409 lb
- Tare weight: 0.43 kg
- Tare weight: 0.948 lb
- UPC: 6 09585 18981 2
- Number of products included: 1
- Packaging type: Carton

## Outer Carton

- Outer carton (L x W x H): 37 x 23 x 30.5 cm
- Outer carton (L x W x H): 14.6 x 9.1 x 12.0 inch
- Nett weight: 4.71 kg
- Nett weight: 10.384 lb
- Gross weight: 6.28 kg
- Gross weight: 13.845 lb
- Tare weight: 1.57 kg
- Tare weight: 3.461 lb
- GTIN: 1 06 09585 18981 9
- Number of consumer packagings: 3

## Picture/Display

- Display screen type: LCD TFT
- Diagonal screen size (inch): 7 inch
- Resolution: 480(w)x234(H)x3(RGB)

## Sound

- Output Power: 250mW RMS(built-in speakers)
- Output power (RMS): 10mW RMS(earphone)
- Signal to noise ratio: >80dB(earphone),

>62dB(built-in speakers)

## Video Playback

- Playback Media: DVD, Picture CD, SVCD, Video CD, DVD-R/-RW, MP3-CD, CD-R/CD-RW, DVD+R/+RW, CD
- Disc Playback Modes: Disc Menu, Fast Backward, Fast Forward, OSD, Repeat, Shuffle Play, Zoom, Resume Playback from Stop
- Video disc playback system: NTSC, PAL

## Audio Playback

- Compression format: Dolby Digital, MP3
- MP3 bit rates: 32 - 320 kbps
- Playback Media: CD, CD-RW, MP3-CD, CD-R
- File systems supported: ISO-9660, Joliet

## Connectivity

- DC in: 9V, 0.8A
- Headphone jack: 3.5mm Stereo Headphone x 2
- AV output: Composite (CVBS) x1

## Accessories

- AC/DC Adaptor: DC-in 9V, 0.8A (110-240v, 50/60Hz)
- Cables: 3.5mm AV cable
- Car kit: cigarette charger, headrest mounting straps x 2
- User Manual: Multi Languages
- Second LCD screen: 7" TFT LCD (PAC134) x 1 pcs

## Convenience

- Shock proof

## Dimensions

- Master carton dimensions: 230 x 305 x 370 mm
- Master carton quantity: 3
- Master carton weight: 6.28 kg
- Packaging dimensions (W x H x D): 360 x 295 x 72 mm
- Product dimensions (W x H x D): 199 x 38 x 153 mm
- Product weight: 1 kg
- Packaging type: D-box



Issue date 2017-04-05

Version: 1.1.5

12 NC: 8670 000 59125  
UPC: 6 09585 18981 2

© 2017 Koninklijke Philips N.V.  
All Rights reserved.

Specifications are subject to change without notice.  
Trademarks are the property of Koninklijke Philips N.V.  
or their respective owners.

[www.philips.com](http://www.philips.com)