

3 Enjoy

Local scan (in the UK):

1 In DAB mode, press **SCAN**.

→ The clock radio scans all available local DAB radio stations and broadcasts the first available station.

Program DAB radio stations

You can program a maximum of 20 preset DAB radio stations.

1 Tune to a DAB radio station.

2 Press **PRESET▲▼** to select a preset number.

3 Press and hold **SELECT** for two seconds.

→ The preset number of the saved station appears.

Listen to a preset DAB radio station

1 Press **SOURCE** repeatedly to select **[DAB]**.

2 Press **PRESET▲▼** to select a preset number.



Welcome to Philips!
Register your product and get support at
www.philips.com/welcome

DAB CLOCK RADIO
AJB4500



What's in the box



AJB4500




Quick Start Guide




User Manual

PHILIPS
Eng

1 Connect

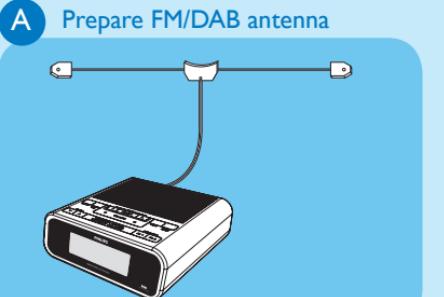

- 1 Fully extend the antenna and fix it to the wall as shown.

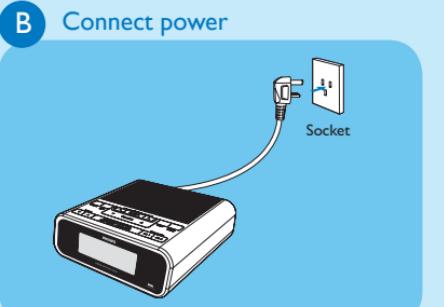

- 1 Connect the power plug to the power outlet.

2 Setup

A Set the clock

1 In standby mode, press and hold **SELECT** for two seconds.

↳ [SYNC ON] is displayed and [ON] begins to blink.

2 Press **PRESET▲▼** to select **ON** or **OFF**.

↳ If you select **[ON]**, the Clock Radio reads the DAB/RDS time and sets the clock automatically.

↳ If you select **[OFF]**, the Clock Radio turns off the time synchronization.

3 Press **SELECT** to confirm.

↳ The time format **[24H]** or **[12H]** begins to blink.

4 Press **PRESET▲▼** to select 24H or 12H.

5 Press **SELECT** to confirm.

↳ The hour digits are displayed and begin to blink.

6 Press **PRESET▲▼** to set the hour.

7 Press **SELECT** to confirm.

↳ The minute digits are displayed and begin to blink.

8 Press **PRESET▲▼** to set the minute.

9 Press **SELECT** to confirm the clock setting.

Note

- The accuracy of the transmitted time depends on the RDS station that transmits the time signal.

- If the power supply is disconnected, the settings and clock are saved for three minutes.

2 Setup

B Set the alarm timer

1 Press and hold **AL1/AL2** for two seconds.

↳ The sound source icon, AL1/AL2 icon and the hour digits are displayed and begin to blink.

2 Press **SOURCE** repeatedly to select a sound source: DAB, FM Tuner or Buzzer.

3 Press **PRESET▲▼** to set the hour.

4 Press **AL1/AL2**.

↳ The minute digits are displayed and begin to blink.

5 Press **PRESET▲▼** to set the minute.

6 Press **AL1/AL2** to confirm.

↳ The alarm icon is displayed.

↳ The Clock Radio turns on automatically at the set time and switches to the selected source.

Turn on/off the alarm timer

1 Press **AL1/AL2** to turn on or off the alarm timer.

- If the alarm timer is turned on, the alarm icon appears.
- If the alarm timer is turned off, the alarm icon disappears.

Repeat alarm

1 When the alarm sounds, press **BRIGHTNESS CONTROL/REPEAT ALARM**.

→ The source icon and the alarm icon begin to blink.

2 Press **AL1/AL2**.

→ The alarm stops for nine minutes.

Reset alarm

1 When the alarm sounds, press **SLEEP/AL RESET**.

2 Press **AL1/AL2** to confirm.

→ The alarm stops but the alarm settings remain for the next day.

Stop alarm sound

1 When the alarm sounds, press **AL1/AL2**.

→ The alarm stops but the alarm settings remain.

3 Enjoy

A Listen to FM radio

1 Press **SOURCE** repeatedly to select **[FM--TUNER]**.

2 Press **TUNING ▲▼** to tune to a radio station.

Program radio stations automatically

You can program a maximum of 20 preset radio stations.

1 Press and hold **SCAN** for two seconds.

→ **[FM SCAN]** appears.

→ All available stations are programmed in the order of waveband reception strength.

→ The first programmed radio station broadcasts automatically.

Scan DAB radio stations automatically

Full scan (outside the UK):

1 In DAB mode, press and hold **SCAN** for more than two seconds.

→ The clock radio scans all available DAB radio stations and broadcasts the first available station.

B Listen to DAB digital radio

1 Press **SOURCE** repeatedly to select **[DAB]**.

→ When you enter the DAB mode for the first time, the Clock Radio automatically scans DAB radio stations. The Clock Radio stores all available DAB radio stations and the first available station broadcasts.

→ The last selected DAB radio station broadcasts automatically.

Scan DAB radio stations automatically

Full scan (outside the UK):

1 In DAB mode, press and hold **SCAN** for more than two seconds.

→ The clock radio scans all available DAB radio stations and broadcasts the first available station.