



Philips
2.1 3D Blu-ray Home
theater

Crystal Clear Sound
Built-in WiFi, Bluetooth & NFC
Miracast™
500W

HTB5260G

Powerful cinematic sound

Enrich music and movies, with this Philips home theater. With a 15mm soft-dome, horn-loaded tweeter, audio has never sounded more distortion-free. With a powerful 3 x stronger "Ribbed" Bass Reflex system for ultra-lifelike low notes.

Great listening experience

- 500W RMS power delivers great sound for movies and music
- Crystal Clear Sound for super clarity and realism

Simply enjoy all your entertainment

- Full HD 3D Blu-ray for a truly immersive 3D movie experience
- Built-in WiFi to enjoy your connected media wirelessly
- Bluetooth wireless music streaming from your music devices
- DivX Plus HD Certified for high definition DivX playback
- Audio in to enjoy music from iPod/iPhone/MP3 player

Designed to enhance your cinema at home

- Unleash your Miracast™- certified device content on your TV
- One-Touch with NFC-enabled smartphones for Bluetooth pairing
- Touch panel for intuitive playback and volume control

PHILIPS

Highlights

Full HD 3D Blu-ray




Be enthralled by 3D movies in your own living room on a Full HD 3D TV. Active 3D uses the latest generation of fast switching displays for real life depth and realism in full 1080x1920 HD resolution. By watching these images through special glasses with right and left lenses that are timed to open and close in synchrony with alternating images, the full HD 3D viewing experience is created in your home cinema. Premium 3D movie releases on Blu-ray offer a wide, high quality selection of content. Blu-ray also delivers uncompressed surround sound for an unbelievably real audio experience.

500W RMS power




500W RMS power delivers great sound for movies and music

Built-in WiFi

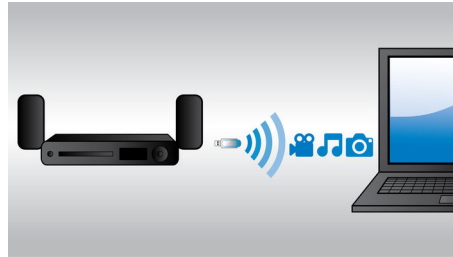


Thanks to built-in WiFi, by simply connecting your home theater directly to your home network, you can experience a rich selection of popular online services. You can enjoy some of the best websites offering movies, pictures, infotainment and other online contents tailored to fit your TV screen.

Crystal Clear Sound

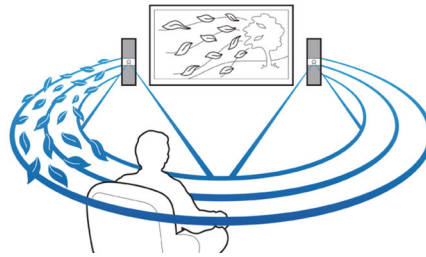

Crystal Clear Sound for super clarity and realism

Bluetooth wireless streaming

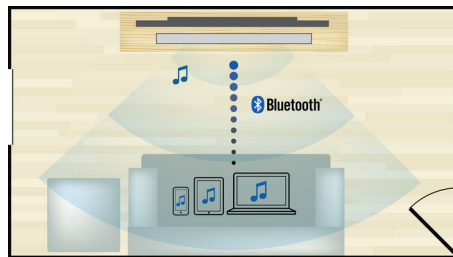


Bluetooth wireless music streaming from your music devices

Miracast™



Miracast™ is a peer-to-peer wireless screencasting standard formed via Wi-Fi Direct connections. Simplified user interface likes screen-mirroring the portable device screen to bigger screen via Miracast™ certified device, no limit by pre-build codec for decoding.

NFC technology

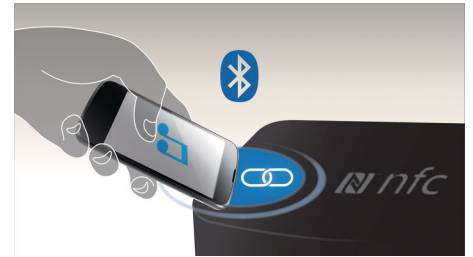

Pair Bluetooth devices easily with one-touch NFC (Near Field Communications) technology. Just tap the NFC enabled smartphone or tablet on the NFC area of a speaker to turn the speaker on, start Bluetooth pairing, and begin streaming music.

Specifications

Sound

- Total Power RMS @ 10% THD: 500 W
- Sound System: Dolby Digital Plus, Dolby True HD, DTS Digital Surround, DTS-HD Master Audio
- Sound Enhancement: Night Mode, Auto Volume Leveler, Double Bass Sound, FullSound, Treble and Bass Control, Dolby Digital Prologic II
- Satellite speaker output power: 2 x 166 W
- Subwoofer output power: 166 W

Loudspeakers

- Loudspeaker types: 2 x Satellite speakers
- Drivers per Satellite speaker: 1 Tweeter, 1 x 3" Full range woofer
- Satellite speaker freq range: 150-20k Hz
- Satellite speaker impedance: 3 ohm
- Subwoofer type: Passive
- Subwoofer driver: 1 x 6.5" woofer
- Subwoofer freq range: 20-150 Hz
- Subwoofer impedance: 3 ohm

Connectivity

- Front Connections: Audio in, USB
- Rear Connections: Digital coaxial in, Digital optical in, Ethernet, FM Antenna Socket, HDMI 1.4 output (ARC), Easy-Fit Speaker Jacks
- Integrated Connections: Bluetooth, Wi-Fi, Miracast, NFC

Convenience

- EasyLink (HDMI-CEC): Audio Return Channel, One touch play, One touch standby, Remote Control-Passthrough
- HDMI Features: 3D, Audio Return Channel (ARC), Deep color
- Ease of Use: DLNA
- Online services: YouTube

Tuner/Reception/Transmission

- RDS: Station Name

Optical Playback Media

- Playable Discs: AVCHD, BD, BD R / BD RE, CD, CDDA, CD-R/CD-RW, DVD, DVD +R/+RW, DVD -R/-RW, SVCD, VCD

File Format

- Audio: aac, mka, mp3, wma
- Picture: GIF, JPEG, JPG
- Video: avi, divx, mkv, mp4, mpeg, mpg

Audio Playback

- Compression format: AAC, MP3, WAV, WMA, Dolby Digital, DTS, FLAC, Ogg Vorbis
- MP3 bit rates: 8 - 320kbps

Video Playback

- Compression formats: AVCHD, MPEG1, MPEG2,

MPEG4, DivX Plus HD

Still Picture Playback

- Compression format: GIF, JPEG, JPEG HD, JPEG Progressive, PNG
- Picture Enhancement: Rotate, Zoom, Slideshow with music playback

Picture/Display

- Picture enhancement: HD (720p, 1080i, 1080p/24fps), Progressive scan

Power

- Power consumption: 160 W
- Power supply: 220-240V
- Standby power consumption: < 0.5 W

Sustainability

- Packaging: Electronic User Manual

Dimensions

- Main Unit (W x H x D): 435 x 58 x 280 mm
- Front Speaker (W x H x D): 100 x 227 x 130 mm
- Front Speaker cable length: 3 m
- Subwoofer (W x H x D): 237 x 292 x 308 mm
- Subwoofer cable length: 3 m

Accessories

- Included accessories: FM antenna, Quick start guide, Remote Control, Safety & Legal Leaflet, Trademarks Sheet, World Wide Warranty leaflet, User manual on CD-ROM, 2 x AAA Batteries

Packaging dimensions

- EAN: 87 12581 71103 0
- Packaging dimensions (W x H x D): 49.8 x 38.2 x 37.6 cm
- Gross weight: 9.4 kg
- Nett weight: 7.93 kg
- Number of products included: 1
- Packaging type: Carton
- Tare weight: 1.47 kg
- Type of shelf placement: Laying

Outer Carton

- EAN: 87 12581 71103 0
- Gross weight: 9.4 kg
- Outer carton (L x W x H): 49.8 x 37.6 x 38.2 cm
- Nett weight: 7.93 kg
- Number of consumer packagings: 1
- Tare weight: 1.47 kg

Product dimensions

- Product dimensions (W x H x D): 43.5 x 5.8 x 28 cm
- Weight: 2.53 kg



Issue date 2020-05-12

Version: 4.1.7

12 NC: 8670 001 11586
EAN: 87 12581 71103 0

© 2020 Koninklijke Philips N.V.
All Rights reserved.

Specifications are subject to change without notice.
Trademarks are the property of Koninklijke Philips N.V.
or their respective owners.

www.philips.com

* To check whether Video on Demand is available in your country, please visit www.philips.com/blu-ray.
* DivX, DivX Certified, and associated logos are trademarks of DivXNetworks, Inc. and are used under license.
* Dolby and the double-D symbol are registered trademarks of Dolby Laboratories Inc.