

Philips
Micro music system

Bluetooth
CD, MP3-CD, USB, FM

BTM2560



Bring power to your tunes

Listen to all the digital music on your Smartphone via Bluetooth, or play MP3-CD and CD-R/W on one Philips Micro system. Bass Reflex speakers deliver dramatic bass and a 70-W maximum output provides powerful sound.

Enjoy your music from multiple sources

- Stream music wirelessly via Bluetooth™ from your smartphone
- USB Direct for easy MP3 music playback
- Play MP3-CD, CD and CD-R/RW
- Audio-in for portable music playback

Enrich your sound experience

- 70 W RMS maximum output power
- Bass Reflex Speaker System delivers a powerful, deeper bass
- Digital Sound Control

Easy to use

- Bluetooth standby mode always on for easy reconnection
- Fast and efficient USB charging for your smart device
- Motorised CD loader for convenient access
- Digital tuning with preset stations for extra convenience

PHILIPS

Highlights

Stream music via Bluetooth™



Bluetooth is a short range wireless communication technology that is both robust and energy-efficient. The technology allows easy wireless connection to iPod/iPhone/iPad or other Bluetooth devices, such as smartphones, tablets or even laptops. So you can easily enjoy your favourite music, sound from video or game wirelessly on this speaker.

Bluetooth standby



After your smart device has been connected once, your Philips music system can be woken from standby mode by your smart device's Bluetooth function. This will also activate the Bluetooth source, making it quick and easy to stream music, any time.

USB fast charging




The USB port isn't just for music playback. The intelligent USB power management system enables a 2A fast charging current to rapidly charge your smart device when the music system is in standby mode.

USB Direct for easy MP3 music



Thanks to the complete file transferability, you can easily enjoy the convenience and fun of accessing more digital music via the built-in USB Direct.

Bass Reflex Speaker System

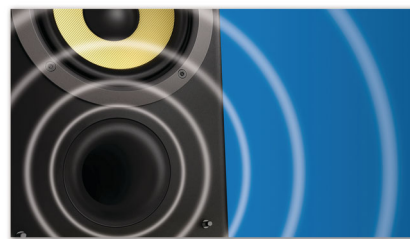

Bass Reflex Speaker System delivers a deep bass experience from a compact loudspeaker box system. It differs from a conventional loudspeaker box system in the addition of a bass pipe that is acoustically aligned to the woofer to optimise the low frequency roll-off of the system. The result is deeper controlled bass and lower distortion. The system works by causing the air mass in the bass pipe to vibrate like a conventional woofer. Combined with the response of the woofer, the system extends the overall low frequency sounds to create a completely new dimension of deep bass.

Digital Sound Control

Digital Sound Control offers you a choice of pre-set balanced, clear, powerful, warm and bright controls you can use to optimise the frequency ranges for different musical styles. Each mode uses graphic equalising technology to automatically adjust the sound balance and enhance the most important sound frequencies in your chosen music style. Ultimately, Digital Sound Control makes it easy for you get the most out of your music by precisely adjusting the sound balance to match the type of music you are playing.

Specifications

Audio playback

- Disc playback modes: fast forward/reverse, next/previous track search, repeat/shuffle/programme
- Playback media: CD, CD-R/RW, MP3-CD, USB flash drive
- USB Direct playback modes: fast reverse/fast forward, play/pause, stop, previous/next, repeat, shuffle, programme play

Tuner/Reception/Transmission

- Tuner bands: FM stereo
- Station presets: 20
- Tuner enhancement: auto digital tuning

Sound

- Maximum output power (RMS): 70 W
- Sound enhancement: digital sound control

Loudspeakers

- Speaker drivers: 4" woofer, dome tweeter
- Speaker types: bass reflex speaker system

Connectivity

- Bluetooth
- Bluetooth profiles: A2DP, AVRCP
- Audio in (3.5 mm)
- USB: USB host, Max. 2A Charging

Convenience

- Alarms: CD Alarm, Radio Alarm, USB alarm
- Clock: On main display, sleep timer
- Display type: LED display
- Loader type: tray

Accessories

- Included accessories: FM antenna
- Remote control: 21-key remote
- Quick start guide

Power

- Power supply: 100-240 VAC, 50/60 Hz

Dimensions

- Main unit width: 220 mm
- Main unit height: 104 mm
- Main unit depth: 231 mm
- Main speaker dimensions (W x D): 140 x 185 mm
- Main speaker height: 260 mm
- Packaging width: 383 mm
- Packaging height: 348 mm
- Packaging depth: 358 mm
- Gross weight: 7.5 kg
- Net weight: 5.3 kg



Issue date 2022-05-15

Version: 2.0.7

12 NC: 8670 001 46555
EAN: 48 95185 63023 6

© 2022 Koninklijke Philips N.V.
All Rights reserved.

Specifications are subject to change without notice.
Trademarks are the property of Koninklijke Philips N.V.
or their respective owners.

www.philips.com