



Philips  
docking speaker

for iPod/iPhone

AD300



## Enjoy music from your iPod/iPhone

Whether on your desk or somewhere else, this dashing docking speaker delivers crystal-clear sound that fills your personal space.

### **Crystal clear sound**

- Bass Reflex Speaker System delivers a powerful, deeper bass

### **Enjoy your favourite music**

- Play and charge your iPod/iPhone simultaneously
- Aux-in connection for your portable MP3 music player

### **Elegant and compact**

- Compact design for any space, any lifestyle

**PHILIPS**  
sense and simplicity

# Specifications

## iPhone compatibility

- Compatible with: iPhone, iPhone 3G, iPhone 3GS, iPhone 4

## iPod compatibility

- Compatible with: iPod, iPod classic, iPod mini, iPod nano, iPod nano 1st generation, iPod nano 2nd generation, iPod nano 3rd generation, iPod nano 4th generation, iPod nano 5th generation, iPod nano 6th generation, iPod touch, iPod touch 2nd generation, iPod touch 2nd gen 8/16/32 GB, iPod with colour display, iPod 5th generation

## Sound

- Sound system: stereo
- Volume control: up/down
- Output power: 4 W RMS

## Connectivity

- MP3 Link: 3.5 mm stereo line in



## Loudspeakers

- Loudspeaker enhancement: bass reflex speaker system

## Power

- Power supply: 100 - 240 V AC, 50/60 Hz

## Dimensions

- Gross weight: 1.08 kg
- Master carton weight: 2.38 kg
- Master carton quantity: 2
- Weight: 0.84 kg
- Packaging dimensions (W x H x D): 241 x 153 x 136 mm

## Accessories

- AC/DC Adapter: 110-220 V

## Convenience


- Charging device: iPhone, iPod

# Highlights

## Compact design

Compact design for any space, any lifestyle

## Aux-in connection

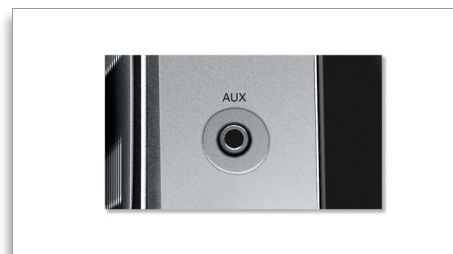


Aux-in connection for your portable MP3 music player

## Bass Reflex Speaker System



Bass Reflex Speaker System delivers a deep bass experience from a compact loudspeaker box system. It differs from a conventional loudspeaker box system in the addition of a bass pipe that is acoustically aligned to the woofer to optimise the low frequency roll-off of the system. The result is deeper controlled bass and lower distortion. The system works by causing the air mass in the bass pipe to vibrate like a conventional woofer. Combined with the response of the woofer, the system extends the overall low frequency sounds to create a completely new dimension of deep bass.

## Play and charge your iPod/iPhone

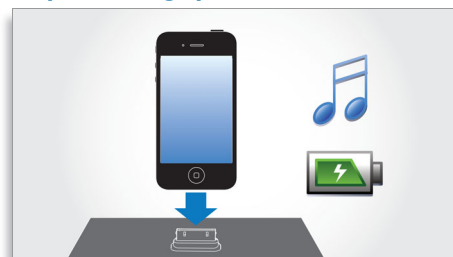

Enjoy your favourite MP3 music while charging your iPod/iPhone! The dock lets you connect your portable device directly to the Docking entertainment system so you can listen to your favourite music in superb sound. It also charges your iPod/iPhone while it plays so you can enjoy your music and not have to worry about your portable player battery running out. The Docking entertainment system automatically charges your portable device while it is docked.



Issue date 2013-03-12

Version: 3.0.10

12 NC: 8670 000 78535  
EAN: 87 12581 60881 1

© 2013 Koninklijke Philips Electronics N.V.  
All Rights reserved.

Specifications are subject to change without notice.  
Trademarks are the property of Koninklijke Philips Electronics N.V. or their respective owners.

[www.philips.com](http://www.philips.com)