

Philips
Portable speaker

Black

SBA1610BLK



Mobile speaker

Filling your world with rich, dynamic sound, Philips SBA1610 speakers come with a handy mobile stand that makes them incredibly easy to use.

Impressive sound

- Class "D" Digital Amplifier for superb sound quality
- Neodymium speaker drivers deliver pure balanced sound
- 2W RMS total output power

Designed for grab and go

- Music on the go
- Up to 8 hours music playback

Simplicity

- Battery powered for portability
- Compatible with any media

PHILIPS

Portable speaker
Black

Specifications

Compatible with

- Smartphones
- iPod
- iPhone
- Mp3 player

Design and finishing

- Color: Black

Sound

- Frequency response: 350 - 16,000 Hz
- Impedance: 4
- RMS Power rating: 2 W

Power

- Battery type: AAA
- Operating time on battery: 12 hr
- Number of batteries: 3

Outer Carton

- Gross weight: 1.1496 kg

- GTIN: 1 06 09585 23473 1
- Outer carton (L x W x H): 20 x 12.4 x 17.5 cm
- Nett weight: 0.68 kg
- Number of consumer packagings: 4
- Tare weight: 0.4696 kg

Packaging dimensions

- Packaging dimensions (W x H x D): 8 x 19 x 5.6 cm
- Gross weight: 0.25 kg
- Nett weight: 0.17 kg
- Number of products included: 1
- Packaging type: Blister
- Tare weight: 0.08 kg
- Type of shelf placement: Both
- UPC: 6 09585 23473 4


Product dimensions

- Product dimensions (W x H x D): 5 x 16 x 5 cm
- Weight: 0.17 kg

SBA1610BLK/37

Highlights

Class D Digital Amplifier

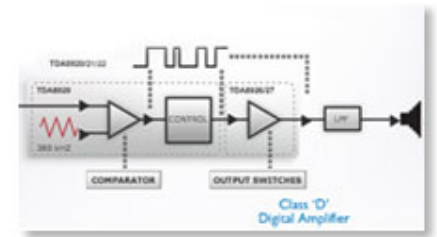

Class 'D' Digital Amplifier takes an analog signal, converts it into a digital signal and then amplifies the signal digitally. The signal then enters a demodulation filter to give the final output. The amplified digital output delivers all the advantages of digital audio, including improved sound quality. In addition, Class 'D' Digital Amplifier has greater than 90% efficiency compared to traditional AB amplifiers. This high efficiency translates into a powerful amplifier with a small footprint.



Issue date 2014-03-14

Version: 1.0.6

12 NC: 8670 001 04271
UPC: 6 09585 23473 4

© 2014 Koninklijke Philips N.V.
All Rights reserved.

Specifications are subject to change without notice.
Trademarks are the property of Koninklijke Philips N.V.
or their respective owners.

www.philips.com