

Philips
Wireless Home Monitor

Monitor anywhere

Wi-Fi
For iPhone, iPad

M100E



Watch over your home from your smartphone/tablet

Put your mind at ease

The Philips InSight wireless home monitor allows you watch over your home when you are away. Setup is easy, giving you instant monitoring from an smartphone or tablet. Push alerts tell you when motion or noise has been detected.

Stay close to loved ones when you're on the move

- Browser-based monitoring using any web browser
- Easy-to-use Apple/Android app for free
- Instant monitoring from your smartphone/tablet
- Wi-Fi enabled for placement anywhere in your home

Secure and easy to set up

- Magnetic base for easy adjustment of viewing direction
- Easy set-up of Wi-Fi enabled monitor via QR code
- Extra wall mount for the best possible placement
- Encrypted direct networking for secure connection
- Watch up to 16 monitors with one app on smartphone/tablet

Alerts via push notifications

- Built-in noise and motion detection
- Phone alerts when monitor detects noise/motion

PHILIPS

Highlights

Wi-Fi enabled

The In.Sight wireless monitor is a Wi-Fi enabled monitor, it uses your home wireless network to stream live video and audio to your smartphone/tablet. A home monitor that you can set up anywhere you like.

Instant monitoring

Instant monitoring from your smartphone/tablet

Free Apple/Android app

Easy-to-use Apple/Android app for free

Browser-based monitoring

The In.Sight wireless home monitor also allows you to find out what's going on at home in real time from your favorite web browser, be it Chrome, Internet Explorer, Safari or Firefox, on a PC or Mac.

Easy set-up via QR code

Set-up is simple with the app. The app will generate a QR code for your home Wi-Fi settings. With the QR code, the monitor will automatically pair with your Wi-Fi network, easily and instantly.

Watch up to 16 monitors

Watch up to 16 monitors with one app on smartphone/tablet

Direction adjustable




Philips In.Sight wireless home monitor has a magnetic base that holds the monitor, allowing you to rotate and adjust your monitor to any angle.

Extra wall mount



In.Sight wireless home monitor comes with a wall mounting bracket. Use it to easily mount your monitor to any wall or ceiling. The base itself pivots and turns, so you can still reposition the In.Sight wireless home monitor when it is mounted.

Encrypted direct networking

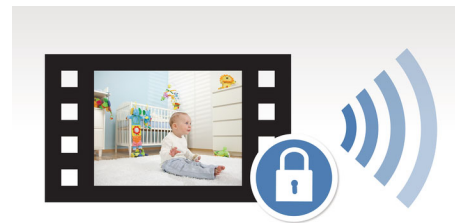

Philips In.Sight wireless home monitor uses highly secure encryption to provide you with privacy at all times. In.Sight wireless home monitor uses a unique encryption key each time it makes a connection.

Noise and motion detection



It's impossible to predict when something might happen. In.Sight wireless home monitor keeps watch with adjustable noise and motion detection. You will be alerted anytime noise or motion is detected.

Alert notifications

Phone alerts when monitor detects noise/motion



Easy set-up



Direction adjustable



Watch up to 16 monitors



Noise and motion detection



Encrypted direct networking



Alert notifications



Available on the App Store



ANDROID APP ON Google play

Specifications

Lens & Sensor

- Sensor: VGA
- Focus mode: Fixed
- Focus range: 0.4M to infinity

Video Quality

- VGA streaming
- Formats: H.264 video compression
- White Balance: Automatic white balance
- Exposure: Automatic exposure control

Features

- Wi-Fi: 802.11 b/ g/ n (2.4GHz), 802.11 a (5GHz) not supported
- Motion detection
- Noise detection
- LED indicator
- Magnetic base: Direction adjustable
- Reset button
- Screw holes: Yes, 1

Software

- Installation: via App
- Automatic App update
- Web browser support
- System supported: iOS4.3 or above, Android 2.3 or above
- iPad compatibility: iPad, iPad 2, New iPad, iPad mini, iPad (3rd generation)
- iPhone compatibility: iPhone 3GS, iPhone 4, iPhone

4S, iPhone 5

- iPod compatibility: iPod Touch 4th generation & up
- Android phone compatibility: Philips recommends Samsung Galaxy 3 performance phones or better

Accessories included

- Extra wall mount
- USB power adapter
- USB cable: Yes, 2.5 m
- Screws / wall anchors: 3
- Quick Start Guide

Input and Output

- Microphone: High-sensitive, Mono
- USB: Mini-USB port

Minimum Requirements

- Windows: Windows XP, Windows Vista, Windows 7, Internet Explorer 6.0, PENTIUM 4 - 2.8 GHz processor, 1GB RAM and 64 MB Video RAM
- MAC: MACINTOSH 10.4, MACINTOSH 10.5, MACINTOSH 10.6, MAC 1.66 Ghz Intel Core Duo, Safari 1.1

Dimensions

- Packaging dimensions (W x H x D):
158 x 160 x 58 mm
- Product dimensions (W x H x D):
45 x 95 x 45 mm



Issue date 2018-06-26

Version: 2.0.4

12 NC: 8670 001 05447
EAN: 87 12581 69425 8

© 2018 Koninklijke Philips N.V.
All Rights reserved.

Specifications are subject to change without notice.
Trademarks are the property of Koninklijke Philips N.V.
or their respective owners.

www.philips.com

* Viewing live video over your home Wi-Fi network using the In.Sight wireless home monitor is free and unrestricted. Viewing live video remotely (either over an external Wi-Fi network or 3G network) is also free for unlimited sessions, but subject to a limit of 5 minutes per session.

* Longer remote viewing session times and other premium features are available for purchase from the App. These conditions are subject to change.