

Philips  
DVD player



DVP3608



## Enjoy it all - from DVD or USB

With 5.1 audio and stereo output

Your dream player with flawless, true-to-life picture quality and the ability to play virtually any disc! The Philips DVD player delivers your movies and music entertainment experience.

### Play all your movies and music

- Plays CD, (S)VCD, DVD, DVD+R/RW, DVD-R/RW
- Plays MP3, WMA and JPEG digital camera photos
- ProReader Drive for smooth playback on virtually any disc

### Connect and enjoy multiple sources

- USB Media Link for media playback from USB flash drives

### Bring audio and video to life

- 5.1 channel audio output for surround sound
- Progressive Scan component video for optimized image quality
- 12-bit/108MHz video processing for sharp and natural images
- Screen Fit for optimal viewing every time


### Easy to use

- One-touch MP3 creation directly from CDs onto USB sticks

# PHILIPS

# Highlights

## USB Media Link

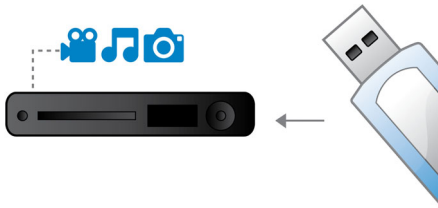


The Universal Serial Bus or USB is a protocol standard that is conveniently used to link PCs, peripherals and consumer electronic equipment. With USB Media Link, all you have to do is plug in your USB device, select the movie, music or photo and play away.

## 5.1 channel audio output

5.1 channel audio output for surround sound

## Plays it all

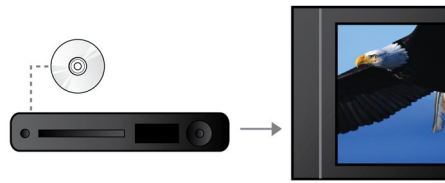

Play virtually any disc you want - whether they be CDs, (S)VCDs, DVDs, DVD+R, DVD-R, DVD+RW or DVD-RW. Experience unbeatable flexibility and the convenience of playing all your discs on one device.

## One-touch MP3 creation

Convert the contents of your favorite CDs to MP3 files on your Philips product, and store it directly on a thumbdrive or on your portable media player through a USB cable. Enjoy the convenience of creating MP3 files right in your

living room, without a PC, and even while the CD is playing.

## Progressive Scan

Progressive Scan doubles the vertical resolution of the image resulting in a noticeably sharper picture. Instead of sending a field comprising the odd lines to the screen first, followed by the field with the even lines, both fields are written at one time. A full image is created instantaneously, using the maximum resolution. At such a speed, your eye perceives a sharper picture with no line structure.

## Screen Fit

Whatever you're watching, and on any TV, Screen Fit ensures that the picture fills the whole screen. Annoying black bars on the top and bottom are eliminated, without any tedious manual adjustments to make. Simply press the Screen Fit button, choose the format and enjoy your movie in full-screen



# Specifications

## Picture/Display

- D/A converter: 12 bit, 108 MHz
- Picture enhancement: Progressive scan, Video upsampling

## Sound

- D/A converter: 24 bit, 192 kHz
- Frequency response: 30-20000 Hz
- Signal to noise ratio: > 90
- Distortion and Noise (1kHz): > 65 dB
- Crosstalk (1kHz): > 70 dB
- Dynamic Range (1kHz): > 80 dB
- Sound System: Dolby Digital

## Video Playback

- Playback Media: CD, CD-R/CD-RW, Video CD/SVCD, DVD, DVD+R/+RW, DVD-R/-RW, DVD-Video
- Compression formats: MPEG1, MPEG2
- Video disc playback system: PAL, NTSC

## Audio Playback

- Playback Media: CD, MP3-CD, MP3-DVD, WMA-CD, CD-R/RW, Audio CD
- Compression format: MP3, Dolby Digital, PCM, WMA
- MP3 bit rates: 32 - 320 kbps

## Still Picture Playback

- Playback Media: DVD+R/+RW, DVD-R/-RW, CD-R/RW, Picture CD, Kodak Picture CD

- Picture Compression Format: JPEG
- Picture Enhancement: Flip photos, Rotate, Zoom, Slideshow, Slideshow with MP3 playback

## Multimedia Applications

- Multimedia connections: USB memory class device
- Playback Formats: JPEG Still pictures, MP3

## Connectivity

- Rear Connections: Composite video (CVBS) output, Component Video out Progressive, Analog audio Multi-channel out
- Front / Side connections: USB

## Convenience

- Child Protection: Child Lock, Parental Control
- On-Screen Display languages: English

## Power

- Power supply: 110-240V, 50/60 Hz
- Power consumption: < 10 W
- Standby power consumption: < 1W

## Accessories

- Included accessories: Audio/Video cable, Remote Control, World Wide Warranty leaflet, Quick start guide

## Dimensions

- Set dimensions (W x H x D): 360 x 37 x 210 mm
- Packaging dimensions (W x H x D): 415 x 82 x 282 mm



Issue date 2017-04-04

Version: 3.3.1

12 NC: 8670 000 79322  
EAN: 87 12581 61140 8

© 2017 Koninklijke Philips N.V.  
All Rights reserved.

Specifications are subject to change without notice.  
Trademarks are the property of Koninklijke Philips N.V.  
or their respective owners.

[www.philips.com](http://www.philips.com)