

Philips
True wireless sports
headphones

Premium sound

Noise Canceling Pro
Crystal-clear calls
Reliable in-ear fit



TAA7507BK

Tune in to your workout

From inspiring playlists to calls with your trainer, these true wireless headphones will keep you moving. Enjoy superb sound and noise cancellation, plus a fit you can rely on—from daily distances to big runs, they'll stay in your ears.

Detailed, energizing sound

- Premium sound. Go big on the tunes that get you going!
- Hear only the sounds you want. Noise Canceling Pro
- Get out there. IPX5 water resistant
- Hi-Res Audio Wireless. Superb sound for streaming

Seamlessly brilliant

- Reliable in-ear fit. Move it, don't lose it
- IR sensor. Music pauses when you take an earbud out
- Philips Headphones app. Control noise canceling and more
- Touch controls. Supports your favorite voice assistants

For your kind of active life

- No worries. Up to 28 hours play time with the case
- Crystal-clear calls, even if it's windy
- Charge for 15 minutes, get an extra hour
- AI and bone-conducting mics remove environmental noise

PHILIPS

True wireless sports headphones
Premium sound Noise Canceling Pro, Crystal-clear calls, Reliable in-ear fit

TAA7507BK/00


Highlights

28 hours play time with case




Don't want to worry about daily charging? You get 7 hours play time and an extra 21 hours from the case. Pop the earbuds back in the case and they'll recharge fully in 2 hours-if you need a quick boost, just 15 minutes gives you an extra hour. The case can be charged wirelessly or via USB-C.

Crystal-clear calls

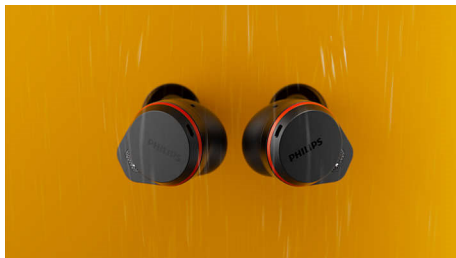

Need to take a call while you're out on a run? With these headphones, there's no need to take cover from the wind. When you're on a call, two AI mics and a bone-conducting mic combine to transmit the sound of your voice clearly.

IPX5 water protection

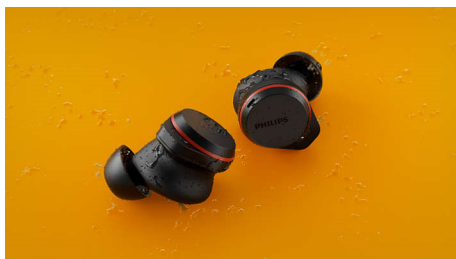

An IPX5 rating means these headphones don't mind a drop of rain or a downpour, so they'll

never give you an excuse to stay on the couch! If you get a sweat on in the gym, the headphones won't mind that either.

Noise Canceling Pro



Busy gym? Noisy train? Multiple mics and advanced audio processing filter out external noise. Adaptive noise cancellation automatically senses what you're doing and adjusts environmental sound levels accordingly, so you'll always hear your music.

Premium sound



These true wireless headphones boast detailed sound with rich, clear bass-courtesy of graphene-coated drivers that reproduce every sparkling high and weighty low. iOS or Android, you'll enjoy all the immersion you need to keep your energy up-and the music pauses if you take an earbud out.

Reliable in-ear fit



Hit your targets, beat your best, or run for fun. Doesn't matter why you move-these headphones stay right in your ears where you want them. Because no two ears are the same, you get three interchangeable sizes of in-ear tips and stabilizers, which you can mix and match for your perfect fit.

Hi-Res Audio Wireless

Whichever streaming service you use, these Hi-Res Audio Wireless-certified headphones will unlock the best possible sound. The codec that works best with your phone or tablet is selected automatically. Whether you use iOS or Android devices, you'll enjoy a superbly detailed listening experience.

Philips Headphones app

You can use the Philips Headphones app to adjust the level of noise cancellation or activate wind cancellation-and the app lets you update your headphones with the latest software. An equalizer lets you fine-tune your sounds to fit your workout.

Simple control

Touch controls keep things simple, and helpful confirmation tones let you know you've activated a function. Siri and the Google Assistant are both supported, and you can connect to two devices at once. Great if you're streaming music from a phone and getting training alerts from your smartwatch.



Specifications

Sound

- Frequency range: 20 - 40,000 Hz (LDAC)
- Speaker diameter: 9.2 mm
- Impedance: 25 Ohm
- Maximum power input: 5 mW
- Sensitivity: 100 dB (1K Hz)
- Driver type: Dynamic, Graphene coated
- Hi-Res Audio

Connectivity

- Bluetooth version: 5.2
- Wireless
- Bluetooth profiles: A2DP, AVRCP, HFP
- Maximum range: Up to 10 m
- Multipoint connection
- Supported codec: LDAC, AAC, SBC
- Type of wireless transmission: Bluetooth

Outer Carton

- Length: 33.1 cm
- Number of consumer packagings: 24
- Width: 25.7 cm
- Gross weight: 4.72 kg
- Height: 26.7 cm
- GTIN: 1 48 95229 12629 6
- Nett weight: 2.184 kg
- Tare weight: 2.536 kg

Convenience

- Automatic power off: 60 minutes
- Water resistance: IPX5
- Philips Headphones app support
- Mono mode for TVWS
- Auto pause (IR sensor)
- Firmware updates possible
- Type of controls: Touch

Inner Carton

- Length: 15.8 cm
- Number of consumer packagings: 3
- Width: 12.1 cm
- Height: 12.2 cm
- Nett weight: 0.273 kg
- Gross weight: 0.532 kg
- Tare weight: 0.259 kg
- GTIN: 2 48 95229 12629 3

Power

- Rechargeable
- Number of batteries: 3 pcs
- Charging time: 2 hour(s)
- Wireless charging
- Music play time (ANC on): 7 + 21 hour(s)
- Music play time (ANC off): 8 + 24 hour(s)
- Fast charging time: 15 mins for 1 hr
- Battery type(Charging case): Lithium Polymer (Built-

in)

- Battery type(Earbud): Lithium Polymer (Built-in)
- Battery weight (Total): 13.05 g
- Battery capacity(Case): 500 mAh
- Battery capacity(Earbud): 55 mAh
- Battery life standby time: 200 hr

Packaging dimensions

- Height: 13 cm
- Packaging type: Box
- Type of shelf placement: Hanging
- Width: 11 cm
- Depth: 4.7 cm
- Number of products included: 1
- EAN: 48 95229 12629 9
- Gross weight: 0.152 kg
- Nett weight: 0.091 kg
- Tare weight: 0.061 kg

Accessories

- Others: 1 pcs lanyard, 3 sizes xStabilizers
- Quick Start Guide
- Eartips: 3 pairs(S/M/L)
- Charging cable: USB-C cable, 200 mm

Design

- Color: Black
- Ear coupling material: Silicone
- Ear fitting: In-ear
- In-ear fitting type: Silicone ear tip, Stabilizer

Telecommunication

- Microphone for call: 2 AI mics, 1 bone mic
- Wind noise reduction

Dimensions

- Charging case dimension(WxDxH): 7.16 x 2.97 x 4.32 cm
- Earbud dimension(WxDxH): 2.26 x 2.17 x 2.62 cm
- Total weight: 0.058 kg

UPC

- UPC: 8 40063 20230 6

ANC features

- ANC technology: Hybrid, ANC Pro
- Awareness mode
- Adaptive ANC
- ANC (Active Noise Canceling)
- Auto wind noise cancelation

Voice assistant

- Voice assistant compatible: Apple Siri, Google Assistant
- Voice assistant activation: Manual
- Voice assistant support



Issue date 2024-06-04

Version: 4.1.2

EAN: 48 95229 12629 9

© 2024 Koninklijke Philips N.V.
All Rights reserved.

Specifications are subject to change without notice.
Trademarks are the property of Koninklijke Philips N.V.
or their respective owners.

www.philips.com

* Battery life of playtime is approximate and may vary depending on application condition.