

Philips 3000 series  
DVD player

**DivX Ultra**  
ProReader Drive  
USB 2.0



**DVP2850**

## Enjoy it all — from DVD or USB

Your dream player with flawless, true-to-life picture quality and the ability to play virtually any disc! The Philips DVD player DVP2850 delivers your movies and music entertainment experience.

### **Bring audio and video to life**

- 12-bit/108 MHz video processing for sharp and natural images
- Screen Fit for optimal viewing every time
- Smart Picture provides personalised image settings

### **Connect and enjoy multiple sources**

- USB Media Link for media playback from USB flash drives

### **Play all your movies and music**

- DivX Ultra Certified for enhanced DivX video playback
- Play CD, (S)VCD, DVD, DVD+- R/RW, DivX, MP3, WMA, JPEG
- ProReader Drive for smooth playback on virtually any disc

# PHILIPS

# Highlights

## DivX Ultra Certified




With DivX support, you are able to enjoy DivX encoded videos and movies from the Internet, including purchased Hollywood films, in the comfort of your living room. The DivX media format is an MPEG-4-based video compression technology that enables you to save large files like movies, trailers and music videos on media like CD-R/RW and DVD recordable disc for playback on your DivX Ultra Certified Philips Blu-ray or DVD player. DivX Ultra combines DivX playback with great features like integrated subtitles, multiple audio languages, multiple tracks and menus in one convenient file format.

## Multimedia DivX

Play CD, (S)VCD, DVD, DVD+- R/RW, DivX, MP3, WMA, JPEG


## 12-bit/108 MHz video processing

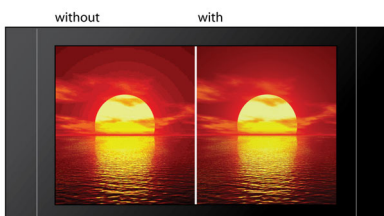

12-bit Video DAC is a superior Digital-to-Analogue Converter that preserves every

detail of the authentic picture quality. It shows subtle shades and smoother graduation of colours, resulting in a more vibrant and natural picture. The limitations of the standard 10-bit DAC become particularly apparent when it is used with large screens and projectors.

## USB Media Link

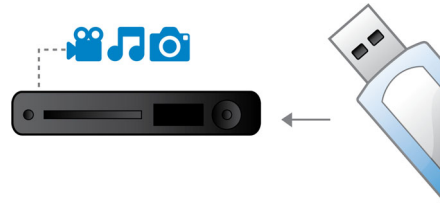

The Universal Serial Bus, or USB, is a protocol standard that is conveniently used to link PCs, peripherals and consumer electronic equipment. With USB Media Link, all you have to do is plug in your USB device, select the movie, music or photo and play away.


## ProReader Drive



ProReader Drive lets you enjoy your movies and videos worry-free. Even when old discs get smudgy or scratched, you can rest assured that they will play right through from start to end - without any sign that they have been damaged. Using state-of-the-art technology, ProReader Drive converts weak analogue signals into

robust digital ones, extracting information that allows less-than-perfect discs to play smoothly through. Together with its ability to read virtually any video format, ProReader Drive gives you the unbeatable assurance that whatever you pop in will most definitely play.

## Screen Fit



Whatever you're watching, on whatever TV, Screen Fit ensures that the picture fills the whole screen. Annoying black bars on the top and bottom are eliminated, without any tedious manual adjustments to make. Simply press the Screen Fit button, choose the format and enjoy your movie in full screen

# Specifications

## File Format

- Audio: mp3, wma
- Picture: JPEG
- Video: avi, DivX, mpeg, mpg

## Video Playback

- Compression formats: DivX Ultra, MPEG1, MPEG2
- Video disc playback system: NTSC, PAL

## Optical Playback Media

- Playable Discs: CD, CDDA, CD-R/CD-RW, DVD, DVD +R/+RW, DVD -R/-RW, Kodak Picture Disc, SVCD, VCD

## Still Picture Playback

- Compression format: JPEG
- Picture Enhancement: Flip photos, Rotate, Slideshow, Slideshow with MP3 playback, Zoom

## Audio Playback

- MP3 bit rates: 8 - 320 kbps
- Compression format: Dolby Digital, MP3, PCM, WMA
- WMA bit rates: 32 - 192 kbps

## Picture/Display

- D/A converter: 12-bit, 108 MHz
- Picture enhancement: Progressive scan, Video upsampling

## Connectivity

- Front Connections: USB 2.0
- Rear Connections: Analogue audio Left/Right out, Composite video (CVBS) output, Digital coaxial out

## Convenience

- Child Protection: Child Lock, Parental Control

## Power

- Power consumption: < 10 W
- Power supply: 220-240 V, 50/60 Hz
- Standby power consumption: < 0.5 W

## Sound

- D/A converter: 24-bit, 192 kHz
- Frequency response: 30-20,000 Hz
- Signal to noise ratio: > 100 dB
- Crosstalk (1 kHz): > 100 dB
- Dynamic Range (1 kHz): > 90 dB
- Distortion and Noise (1 kHz): > 85 dB
- Sound System: Dolby Digital

## Accessories

- Included accessories: AAA Battery (x1), AV to SCART cable, Remote Control, User Manual, Warranty Leaflet, World Wide Warranty leaflet

## Dimensions

- Product (W x H x D): 270 x 37.5 x 201 mm
- Product weight: 1 kg
- Packaging (W x H x D): 316 x 77 x 280 mm
- Weight incl. Packaging: 1.38 kg

## Outer Carton

- EAN: 87 12581 67077 1
- Gross weight: 1.3 kg
- Outer carton (L x W x H): 31.6 x 28 x 7.7 cm
- Net weight: 1 kg
- Number of consumer packages: 1
- Tare weight: 0.3 kg

## Packaging dimensions

- Packaging dimensions (W x H x D): 28 x 31.6 x 7.7 cm
- EAN: 87 12581 67077 1
- Gross weight: 1.3 kg
- Net weight: 1 kg
- Number of products included: 1
- Packaging type: Carton
- Tare weight: 0.3 kg
- Type of shelf placement: Laying

## Product dimensions

- Product dimensions (W x H x D): 27 x 21 x 3.3 cm
- Weight: 0.89 kg



Issue date 2017-04-04

Version: 6.1.8

12 NC: 8670 000 98569  
EAN: 08 71258 16707 71

© 2017 Koninklijke Philips N.V.  
All Rights reserved.

Specifications are subject to change without notice.  
Trademarks are the property of Koninklijke Philips N.V.  
or their respective owners.

[www.philips.com](http://www.philips.com)