




Philips
HiFi Stereo Headphones

Over-ear
Black

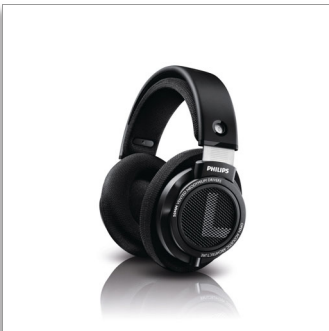

SHP9500

High precision sound

Enjoy an authentic listening experience in style. Created to offer outstanding performance through open back architecture and high-precision 50mm speaker drivers.

Supreme listening experience

- Exquisite open-back, over the ear design for authentic sound
- 50mm neodymium drivers deliver the full spectrum of sound
- Angled drivers align perfectly with your ear

Comfortable for long wearing

- Breathable ear cushion for longer wearing comfort.
- Steel headband for strength and durability
- Comfortable double layered headband cushion

Convenience

- 1.5m cable gives you freedom of movement for indoor use

PHILIPS

Highlights

50mm neodymium speaker drivers



50mm neodymium speaker drivers deliver superior Hi-Fi sound.

Breathable ear cushions



Deluxe breathable ear-pads improve breathability and dissipate pressure and heat for longer wearing comfort.

Comfortable headband cushion



Comfortable double layered headband cushion

Durable steel headband



Steel headband for strength and durability

Open-back, over-ear headphones

An acoustic open-back architecture eliminates air pressure build-up behind the driver, giving the diaphragm greater freedom of movement. This greatly enhances sound transparency and smoothenes extended high frequencies.

Precisely angled drivers

Engineered to fit the ear's natural geometry, the ear-shells offer precise and accurate sound. Audio signals are directly channeled into the ears, creating a dynamic and authentic listening experience.

1.5m cable for freedom

1.5m cable gives you freedom of movement for indoor use

Specifications

Sound

- Acoustic system: Open
- Magnet type: Neodymium
- Impedance: 32 ohm
- Maximum power input: 200 mW
- Sensitivity: 101 dB
- Speaker diameter: 50 mm
- Frequency response: 12 - 35 000 Hz

Connectivity

- Cable Connection: one-sided
- Finishing of connector: gold-plated
- Cable length: Detachable 3.0 m cable included

Accessories

- Adaptor plug: gold-plated 3.5 - 6.3 mm

Product dimensions

- Product dimensions (W x H x D): 6.7 x 7.9 x 3.9 inch
- Product dimensions (W x H x D): 17 x 20 x 10 cm
- Weight: 0.32 kg
- Weight: 0.705 lb

Outer Carton

- Gross weight: 5.004 lb
- Gross weight: 2.27 kg
- GTIN: 1 87 12581 69144 5
- Outer carton (L x W x H): 37.5 x 21 x 23.5 cm
- Outer carton (L x W x H): 14.8 x 8.3 x 9.3 inch
- Nett weight: 2.183 lb
- Nett weight: 0.99 kg
- Number of consumer packagings: 3
- Tare weight: 2.822 lb
- Tare weight: 1.28 kg

Packaging dimensions

- Packaging dimensions (W x H x D): 7.7 x 8.9 x 4.7 inch
- Packaging dimensions (W x H x D): 19.5 x 22.5 x 12 cm
- EAN: 87 12581 69144 8
- Gross weight: 1.455 lb
- Gross weight: 0.66 kg
- Nett weight: 0.728 lb
- Nett weight: 0.33 kg
- Number of products included: 1
- Packaging type: Carton
- Tare weight: 0.728 lb
- Tare weight: 0.33 kg
- Type of shelf placement: Both



Issue date 2022-04-29

Version: 4.0.6

12 NC: 8670 001 03939
EAN: 08 71258 16914 48

© 2022 Koninklijke Philips N.V.
All Rights reserved.

Specifications are subject to change without notice.
Trademarks are the property of Koninklijke Philips N.V.
or their respective owners.

www.philips.com

