



Philips  
Luceo design cordless  
phone

30 min answering machine  
1.8" display/white backlight  
Handset speakerphone



M6651WB

## A new beginning

Iconic in every way, the Philips Luceo cordless phone conveys sensual lines in a modern design that seamlessly melds with its integrated secondary base display. Precision styling and functions make Luceo a welcome masterpiece in any home.

### Exquisite design with high quality execution

- Secondary display on the base shows caller ID and clock
- Guiding side walls on the base ensure secure docking
- Charge handset either way around
- Calibrated keys for precise dialling
- Smart cable management maintains visual appeal from all angles

### Ultimate calling experience

- High-contrast 4.6 cm (1.8") white-on-black graphical display
- HQ-Sound: high quality acoustic engineering for superb sound
- Handset speakerphone allows you to talk hands-free
- Three-field entries for assigning 3 numbers to one contact
- Privacy settings: call block, silence mode, call barring
- Up to 30 minutes of messages on your answering machine

### Eco-conscious product

- Zero power emission when ECO+ mode is activated


# PHILIPS

Luceo design cordless phone  
30 min answering machine 1.8" display/white backlight, Handset speakerphone

M6651WB/05


# Highlights

## 4.6 cm (1.8") graphical display

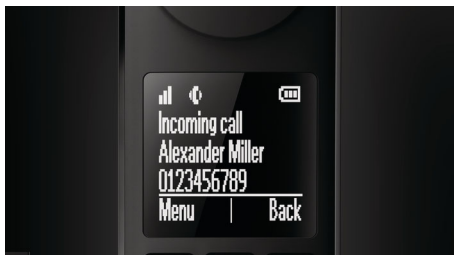

A high-contrast white-on-black reverse LCD display ensures easy reading and also melds perfectly with the Philips Luceo's overall sleek design language.

## Calibrated keypad

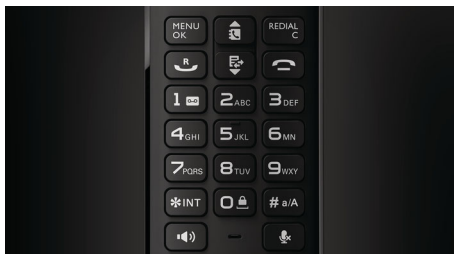

The calibrated and carefully designed keypad ensures precise dialling where you clearly feel every keystroke, whether you are dialling a number or entering a phonebook contact. Materials and key structures have undergone extensive user tests to find a perfect balance between pressing force and key response.

## ECO+ mode



Philips phones are energy efficient and designed to be respectful to the environment. When ECO mode is activated the emitted radiation is reduced by up to 60%, and up to 95% when the phone is charging. With ECO+ mode activation the radiation drops to zero.

## Handset speakerphone




Hands-free mode uses a built-in loudspeaker to amplify the voice of the caller, allowing you to speak and listen during a call without holding the phone to your ear. This is especially useful if you want to share the call with others or simply multitask.

## Hassle-free charging



For reliability and convenience the handset can be charged in both directions of the docking station.


## HQ-Sound

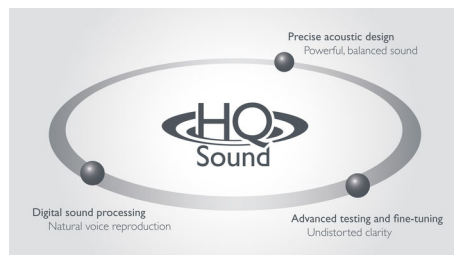

HQ-Sound: high quality acoustic engineering for superb sound reproduction. We build upon decades of experience and breakthrough innovations in developing Hi-Fi audio products and high-end headphones to deliver excellent voice clarity on our DECT phones. When it comes to improving sound quality, our acoustics engineers and architects have

thought of everything — high quality components, digital signal processing, precise acoustic design, advanced testing and fine-tuning. The result is sound that is crisp, clear and authentic. Sound so good and natural, it is almost like being there in person.

## Multiple privacy settings

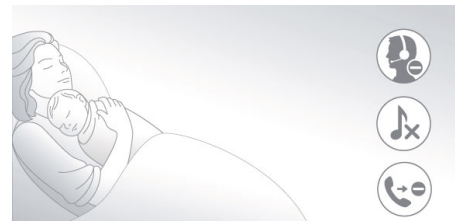

Blacklist restricts calls from specific numbers or numbers starting with certain digits, keeping unwanted calls away. You can block 4 sets of numbers. Each set of numbers can consist of 1 to 24 digits. When there is an incoming call from a number starting with one of these numbers or from one of 4 exact Caller numbers, the phone will not ring. With silence mode you can disable the ringtones at specific times to enjoy peace and silence. Thanks to Call barring, you can avoid expensive phone bill surprises by blocking calls to specific numbers starting with certain digits.

## Secondary display on the base



The Philips Luceo's high-contrast white-on-black display seamlessly and stylishly integrates with its base. The display shows the caller ID when there is an incoming call and the time when in idle mode. You can choose to turn off the base display — so as not to be disturbed by any light — at any time.

# Specifications

## Sound

- Sound Profile: MySound
- Volume control on handset
- Ringtones on handset: 10 polyphonic
- HQ-Sound

## Picture/Display

- Backlight: Yes
- Backlight colour: White
- Handset display size: 4.6 cm/1.8"
- Handset display type: Reversed dot matrix
- Base display size: 7.0 cm/2.77"
- Base display type: Reversed dot matrix

## Answering Machine

- Recording time capacity: Up to 30 minutes
- Pre-recorded OGM
- Answering machine control: From handset only

## Convenience

- Menu structure in the handset: List menu
- Speakerphone — talk hands-free
- Personalisation: Silent mode
- Call barring: Restrict the phone from making specific outgoing calls
- Block callers/Blacklist\*: Restrict the phone from ringing on specific incoming numbers
- Signal strength indicator: 3 bar indicator
- Battery level indicator: 3 bar battery icon
- Date/Time display
- Alarm Clock
- Programmable hot keys: Key 1 and 2
- Call Management: Call Waiting\*, Caller ID\*, Microphone mute, Missed Calls, Received Calls, Dialed calls
- Keypad lock
- Key tone on/off
- Auto hang up
- Multi-handset capability: Up to 4
- Number of keys: 20
- Backlit keypad: White
- Illuminated keypad
- Enlarge dialling digit
- Base Station keys: Paging key
- Up to 16 hrs talk time
- Up to 250 hrs standby time

- Charge time: 8 hours
- Line cord length: 1.8 m
- Power cord length: 1.8 m
- Range: Open field <300 m; indoor <50 m
- Family Notes
- Event notifications: For missed calls and answering machine messages

## Memory Capacity

- Phonebook: 100 names and numbers
- Redial List Capacity: Last 20 numbers
- Call log entries: 50 entries
- Phonebook store in the base
- Multiple phonebook entries: Up to 3 numbers

## Power

- Battery Capacity: 550 mAh
- Battery type: AAA NiMH Rechargeable
- Mains power: AC 100-240 V ~50/60 Hz
- Power Consumption: <0.65 W (display off), <1.4 W (display on)

## Security

- Transmission encryption: Yes

## Network Features

- Compatible: GAP

## SAR Value

- Philips handsets: <0.1 W/kg

## Eco Design

- EcoMode: Automatic and manual
- Eco+

## Packaging dimensions

- Packaging type: Carton
- Number of products included: 1
- Type of shelf placement: Laying
- Packaging dimensions (W x H x D): 31.8 x 9.5 x 8.1 cm
- Gross weight: 0.6165 kg
- Net weight: 0.456 kg
- Tare weight: 0.1605 kg
- EAN: 48 95185 60442 8



Issue date 2022-04-24

Version: 5.0.5

12 NC: 8670 001 20724  
EAN: 48 95185 60442 8

© 2022 Koninklijke Philips N.V.  
All Rights reserved.

Specifications are subject to change without notice.  
Trademarks are the property of Koninklijke Philips N.V.  
or their respective owners.

[www.philips.com](http://www.philips.com)

\* \*This feature requires additional subscription to Caller ID service.  
Please check with your local network operator for details.