

Philips  
DVD player

HDMI 1080p

USB 2.0  
DivX Ultra

DVP2881



## Get sharper, clearer pictures

with HDMI 1080p upscaling

Your dream player with flawless, true-to-life picture quality and the ability to play virtually any disc! The Philips DVD player DVP2881 delivers your movies and music entertainment experience.

### Bring audio and video to life

- CinemaPlus for better, sharper and clearer images
- HDMI 1080p upscales to high definition for sharper pictures
- Progressive Scan component video for optimized image quality
- Screen Fit for optimal viewing every time

### Connect and enjoy multiple sources

- USB Media Link for media playback from USB flash drives

### Play all your movies and music

- DivX Ultra Certified for enhanced DivX video playback
- Play CD, (S)VCD, DVD, DVD+- R/RW, DivX, MP3, WMA, JPEG
- ProReader Drive for smooth playback on virtually any disc

### Easy to use

- EasyLink to control all HDMI CEC devices via a single remote

# PHILIPS

DVD player  
HDMI 1080p USB 2.0, DivX Ultra

DVP2881/98


# Highlights

## HDMI 1080p



HDMI 1080p upscaling delivers images that are crystal clear. Movies in standard definition can now be enjoyed in true high definition resolution - ensuring more details and more true-to-life pictures. Progressive Scan (represented by "p" in "1080p") eliminates the line structure prevalent on TV screens, again ensuring relentlessly sharp images. To top it off, HDMI makes a direct digital connection that can carry uncompressed digital HD video as well as digital multichannel audio, without conversions to analog - delivering perfect picture and sound quality, completely free from noise.

## CinemaPlus

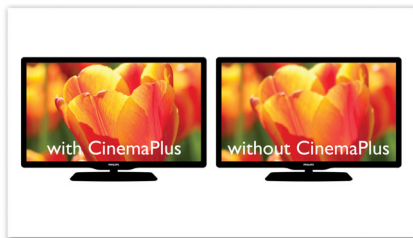

Feast your eyes on images that are razor sharp and a match for reality. An intelligent algorithm, CinemaPlus goes right down to each pixel in each frame, analyzing it before optimizing sharpness and color stability. The results are obvious - you get to see more details, pictures become crystal clear and everything looks superbly natural. Movie nights will never be the same again.

## ProReader Drive



ProReader Drive lets you enjoy your movies and videos worry-free. Even when old discs get smudgy or scratched, you can rest assured that they will play right through from start to end - without any sign that they have been damaged. Using state-of-the-art technology, ProReader Drive converts weak analog signals into robust digital ones, extracting information that allows less-than-perfect discs to play smoothly through. Together with its ability to read virtually any video format, ProReader Drive gives you the unbeatable assurance that whatever you pop in will most definitely play.

## DivX Ultra Certified



With DivX support, you are able to enjoy DivX encoded videos and movies from the Internet, including purchased Hollywood films, in the comfort of your living room. The DivX media format is an MPEG-4 based video compression technology that enables you to save large files like movies, trailers and music videos on media like CD-R/RW and DVD recordable disc for playback on your DivX Ultra Certified Philips Blu-ray or DVD player.

DivX Ultra combines DivX playback with great features like integrated subtitles, multiple audio languages, multiple tracks and menus into one convenient file format.

## Multimedia DivX


Play CD, (S)VCD, DVD, DVD+- R/RW, DivX, MP3, WMA, JPEG

## EasyLink



EasyLink lets you control multiple devices like DVD players, Blu-ray players, soundbar speaker, Home theater and TV's etc. with one remote. It uses HDMI CEC industry-standard protocol to share functionality between devices through the HDMI cable. With one touch of a button, you can operate all your connected HDMI CEC enabled equipment simultaneously. Functions like standby and play can now be carried out with absolute ease.

## USB Media Link

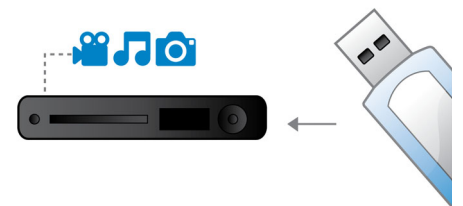

The Universal Serial Bus or USB is a protocol standard that is conveniently used to link PCs, peripherals and consumer electronic equipment. With USB Media Link, all you have to do is plug in your USB device, select the movie, music or photo and play away.



# Specifications

## File Format

- Audio: mp3, wma
- Picture: JPEG
- Video: avi, divx, mpeg, mpg

## Video Playback

- Compression formats: DivX Ultra, MPEG1, MPEG2
- Video disc playback system: PAL, NTSC

## Optical Playback Media

- Playable Discs: CD, CDDA, CD-R/CD-RW, DVD, DVD +R/+RW, DVD -R/-RW, Kodak Picture Disc, SVCD, VCD

## Still Picture Playback

- Compression format: JPEG
- Picture Enhancement: Flip photos, Rotate, Slideshow, Slideshow with MP3 playback, Zoom

## Audio Playback

- MP3 bit rates: 8 - 320 kbps
- Compression format: Dolby Digital, MP3, PCM, WMA
- WMA bit rates: 32 - 192 kbps

## Picture/Display

- D/A converter: 12 bit, 108 MHz
- Picture enhancement: High Def (720p, 1080i, 1080p), Progressive scan, Video Upscaling(720p, 1080i/p)

## Connectivity

- Front Connections: USB 2.0
- Rear Connections: Analog audio Left/Right out, Composite video (CVBS) output, Digital coaxial out, HDMI output

## Convenience

- Child Protection: Child Lock, Parental Control

## Power

- Power supply: 110-240V, 50/60 Hz
- Power consumption: < 11 W
- Standby power consumption: < 0.5 W

## Sound

- D/A converter: 24 bit, 192 kHz
- Frequency response: 30-20000 Hz
- Crosstalk (1kHz): > 100 dB
- Distortion and Noise (1kHz): > 85 dB
- Dynamic Range (1kHz): > 90 dB
- Sound System: Dolby Digital
- Signal to noise ratio: > 100 dB

## Accessories

- Included accessories: AAA Battery (x1), Remote Control, Warranty Leaflet, World Wide Warranty leaflet, User Manual, Audio/Video cable

## Dimensions

- Product (W x H x D): 270 x 37.5 x 201 mm
- Product weight: 1 kg
- Packaging (W x H x D): 316 x 77 x 280 mm
- Weight incl. Packaging: 1.38 kg

## Outer Carton

- EAN: 87 12581 68133 3
- Gross weight: 1.686 kg
- Outer carton (L x W x H): 36 x 28.2 x 8 cm
- Nett weight: 1.334 kg
- Number of consumer packagings: 1
- Tare weight: 0.352 kg

## Packaging dimensions

- Packaging dimensions (W x H x D): 36 x 28.2 x 8 cm
- EAN: 87 12581 68133 3
- Gross weight: 1.686 kg
- Nett weight: 1.334 kg
- Number of products included: 1
- Packaging type: Carton
- Tare weight: 0.352 kg
- Type of shelf placement: Laying

## Product dimensions

- Product dimensions (W x H x D): 31 x 3.9 x 20.37 cm
- Weight: 1.11 kg



Issue date 2017-04-04

Version: 6.0.1

12 NC: 8670 001 01206  
EAN: 87 12581 68133 3

© 2017 Koninklijke Philips N.V.  
All Rights reserved.

Specifications are subject to change without notice.  
Trademarks are the property of Koninklijke Philips N.V.  
or their respective owners.

[www.philips.com](http://www.philips.com)