

Philips  
Blu-ray Disc/ DVD player

**DivX Plus HD**

USB2.0 Media Link  
DVD video upscaling



**BDP3400**



## Get the Blu-ray cinematic experience at home

### The Blu-ray experience

Bring the magic of movies home in full HD with Blu-ray and DivX Plus HD on this sleek Philips Blu-ray DVD player BDP3400. Enjoy your favorite video and music directly from USB flash drives or portable hard disks with USB 2.0 Media Link.

#### Engage more

- Enjoy all your movies and music from CD and DVD
- BD-Live (Profile 2.0) to enjoy online Blu-ray bonus content
- EasyLink to control all HDMI CEC devices via a single remote
- SimplyShare to connect & stream all entertainment wirelessly
- Turn your Smartphone into a remote for Philips AV products
- USB 2.0 plays video/music from USB flash/hard disk drive

#### Hear more

- Dolby TrueHD for high fidelity sound


#### See more

- Blu-ray Disc playback for sharp images in full HD 1080p
- DivX Plus HD Certified for high definition DivX playback
- DVD video upscaling to 1080p via HDMI for near-HD images
- Subtitle Shift for widescreen without any missing subtitles

# PHILIPS

# Highlights

## Blu-ray Disc playback

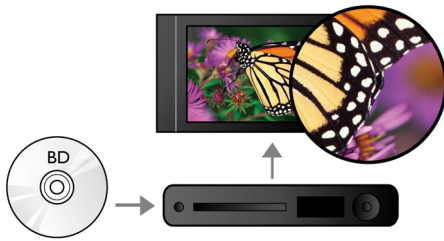

Blu-ray Discs have the capacity to carry high definition data, along with pictures in the 1920 x 1080 resolution that defines full high definition images. Scenes come to life as details leap at you, movements smoothen and images turn crystal clear. Blu-ray also delivers uncompressed surround sound - so your audio experience becomes unbelievably real. The high storage capacity of Blu-ray Discs also allow a host of interactive possibilities to be built in. Seamless navigation during playback and other exciting features like pop-up menus bring a whole new dimension to home entertainment.


## DivX Plus HD Certified



DivX Plus HD on your Blu-ray player and/or DVD player offers the latest in DivX technology to let you enjoy HD videos and movies from the Internet direct to your Philips HDTV or PC. DivX Plus HD supports the playback of DivX Plus content (H.264 HD

video with high-quality AAC audio in an MKV file container) while also supporting previous versions of DivX video up to 1080p. DivX Plus HD for true HD digital video.

## Dolby TrueHD

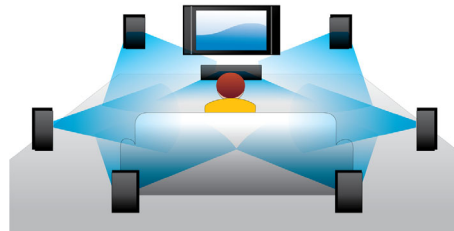

Dolby TrueHD deliver the finest sound from your Blu-ray Discs. Audio reproduced is virtually indistinguishable from the studio master, so you hear what the creators intended for you to hear. Dolby TrueHD complete your high definition entertainment experience.

## DVD video upscaling



HDMI 1080p upscaling delivers images that are crystal clear. DVD movies in standard definition can now be enjoyed in high definition resolution - ensuring more details and more true-to-life pictures. Progressive Scan (represented by "p" in "1080p") eliminates the line structure prevalent on TV screens, again ensuring relentlessly sharp images. To top it

off, HDMI makes a direct digital connection that can carry uncompressed digital HD video as well as digital multi-channel audio, without conversions to analog - delivering perfect picture and sound quality, completely free from noise.

## EasyLink



EasyLink lets you control multiple devices like DVD players, Blu-ray players, soundbar speaker, Home theater and TV's etc. with one remote. It uses HDMI CEC industry-standard protocol to share functionality between devices through the HDMI cable. With one touch of a button, you can operate all your connected HDMI CEC enabled equipment simultaneously. Functions like standby and play can now be carried out with absolute ease.

## Enjoy movies and music



Enjoy all your movies and music from CD and DVD



# Specifications

## Picture/Display

- Aspect ratio: 4:3, 16:9, 21:9
- Picture enhancement: High Def (720p, 1080i, 1080p), Progressive scan, Video upscaling
- D/A converter: 12Bit/148MHz

## Sound

- Sound Enhancement: Night Mode
- Sound System: Dolby Digital 5.1, Dolby Digital Plus, Dolby True HD, DTS 2.0 + Digital out

## Video Playback

- BD Region Code: B
- Compression formats: DivX Plus™ HD, H.264, MPEG1, MPEG2, XviD, MPEG4 (AVC)
- Disc Playback Modes: A-B Repeat, Angle, Disc Menu, Pause, Repeat, Resume Playback from Stop, Search forward/reverse, Skip, Slow Forward, Standard Play, Zoom
- DVD Region Code: 2
- Video Enhancement: Progressive Scan, Video Upscaling, Deep Color, x.v. Color

## Audio Playback

- Compression format: AAC, MP3, PCM, WAV, WMA

## Still Picture Playback

- Compression format: GIF, JPEG, JPEG HD, JPEG Progressive, PNG
- Picture Enhancement: Rotate, Slideshow with music playback, Zoom

## File Format

- Audio: aac, mka, mp3, wma
- Picture: GIF, JPEG, JPG
- Video: avi, divx, m2ts, mkv, mp4, mpeg, mpg

## Optical Playback Media

- Playable Discs: AVCHD, BD, BD R / BD RE, CD, CDDA, CD-R/CD-RW, DVD, DVD +R/+RW, DVD -R/-RW, SVCD, VCD

## Connectivity

- Front Connections: USB 2.0
- Rear Connections: Digital coaxial out, Ethernet, HDMI output, Analog audio Left/Right out, Composite video (CVBS) output

## Convenience

- BD-Live(1GB USB memory needed)
- Child Protection: Parental Control
- EasyLink (HDMI-CEC): 21:9 format subtitle support, One touch play, One touch standby, Remote Control-Passthrough
- Firmware upgradeable: Firmware upgradeable via USB, Online firmware upgrade

## Power

- Power consumption: 12 W
- Power supply: 220-240V, 50/60 Hz
- Standby power consumption: < 1W

## Dimensions

- Packaging (W x H x D): 495 x 87 x 300 mm
- Product (W x H x D): 435 x 38 x 212 mm
- Product weight: 1.37 kg
- Weight incl. Packaging: 2.16 kg

## Accessories

- Included accessories: 2 x AAA Batteries, CD-R (User Manual), Product Registration Card, Quick start guide, Remote Control

## Packaging dimensions

- Packaging type: Carton
- Number of products included: 1
- Type of shelf placement: Laying
- EAN: 87 12581 68628 4
- Packaging dimensions (W x H x D): 41.5 x 30 x 8.7 cm
- Gross weight: 1.65 kg
- Nett weight: 1.25 kg
- Tare weight: 0.4 kg

## Outer Carton

- EAN: 87 12581 68628 4
- Gross weight: 1.65 kg
- Outer carton (L x W x H): 41.5 x 30 x 8.7 cm
- Nett weight: 1.25 kg
- Number of consumer packagings: 1
- Tare weight: 0.4 kg

## Product dimensions

- Product dimensions (W x H x D): 36 x 4.2 x 21.9 cm
- Weight: 1.08 kg



Issue date 2015-08-07

Version: 4.0.5

12 NC: 8670 001 02582  
EAN: 87 12581 68628 4

© 2015 Koninklijke Philips N.V.  
All Rights reserved.

Specifications are subject to change without notice.  
Trademarks are the property of Koninklijke Philips N.V.  
or their respective owners.

[www.philips.com](http://www.philips.com)