



Philips
SoundStage speaker

3.1 CH Integrated subwoofer

Bluetooth® and NFC
HDMI ARC
150 W

HTL5130B

Powerful sound to enhance your TV

with integrated subwoofer

Philips SoundStage speaker HTL5130B features WaveFlector technology that produces a wide, natural and immersive sound for the greatest movie and music enjoyment. Simply connect it to your TV for all-round home entertainment.

Connect and enjoy all your entertainment

- One-touch with NFC-enabled smartphones for Bluetooth pairing
- EasyLink to control all HDMI CEC devices via a single remote
- HDMI ARC to access all the sound from your TV
- Bluetooth wireless music streaming from your music devices
- Enjoy MP3/WMA music directly from your portable USB devices
- Audio-in to enjoy music from iPod/iPhone/MP3 player

Designed for simplicity

- Perfect match with your TV, just place it on top
- Modern design to complement your home environment


Richer sound for watching TV and movies

- Dolby Digital for ultimate movie experience
- Integrated subwoofer for powerful bass
- Dedicated centre-channel speaker for superior voice clarity
- WaveFlector immerses you in every sound detail

PHILIPS


Highlights

Dolby Digital

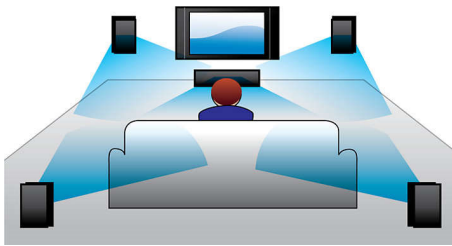

Because Dolby Digital standards, the world's leading digital multi-channel audio standards, make use of the way the human ear naturally processes sound, you experience superb quality surround sound audio with realistic spatial cues.

Centre-channel speaker

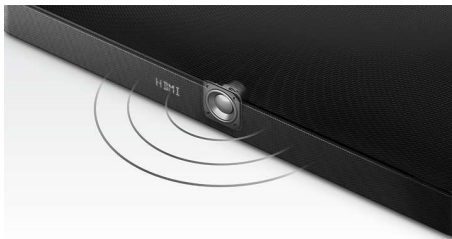

A centre-channel speaker dedicated especially to voice frequencies anchor speech to the centre of the screen. This offers improved voice positioning and clarity, increasing immersion in movies.

WaveFlector



The basis of WaveFlector technology is a unique speaker system with three speakers, two side speakers and one centre speaker, located between two reflectors. The two side speakers are fired into extensively researched, calculated and defined reflectors so that sound, especially high frequencies, are reflected out into the room to the listener. Angling speakers into the reflector creates a wide and natural

soundscape that actually exceeds the spatial effect offered by a standard stereo home cinema setup.

Integrated subwoofer




An integrated subwoofer gives the SoundStage the power it needs to boost TV bass without taking up any additional space. It also features a wide range of Dynamic Bass enhancements that improve the impact of bass in a film or music. By integrating the subwoofer, the SoundStage provides bass without the mess of an external unit.

One-touch with NFC



Pair Bluetooth® devices easily with one-touch NFC (Near Field Communications) technology. Just tap the NFC-enabled smartphone or tablet on the NFC area of a soundstage to turn the soundstage on, start Bluetooth® pairing, and begin streaming music.

Bluetooth wireless streaming

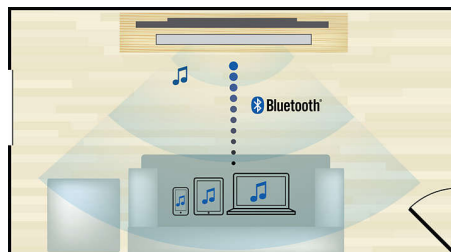

Bluetooth wireless music streaming from your music devices

Perfect match with your TV



The SoundStage features a sturdy, elegant frame designed to support the weight of a range of TVs, from 32" up to 55".

EasyLink



EasyLink lets you control multiple devices like DVD players, Blu-ray players, soundbar speakers, Home theatre systems and TVs etc. with one remote. It uses HDMI CEC industry-standard protocol to share functionality between devices through the HDMI cable. With one touch of a button, you can operate all your connected HDMI CEC-enabled equipment simultaneously. Functions like standby and play can now be carried out with absolute ease.

USB



Enjoy MP3/WMA music directly from your portable USB devices

Specifications

Sound

- Sound Enhancement: Night Mode, Treble and Bass Control, Audio sync
- Sound System: Dolby Digital, Dolby pro-logic 2
- Subwoofer output power: 60 W
- Speaker output power: 3 x 30 W
- Total Power RMS @ 10% THD: 150 W

Loudspeakers

- Loudspeaker types: Integrated with main unit
- Subwoofer type: 1 x 4" woofer, Integrated subwoofer
- Speaker Impedance: 4 ohm
- Drivers per main unit: 3 x 2" full range drivers

Connectivity

- Front/Side connections: Audio in, USB
- Integrated Connections: Bluetooth, NFC
- Rear Connections: HDMI 1.4 output (ARC), Digital coaxial in, Digital optical in, AUX in, Audio-in 3.5 mm jack
- iPod/iPhone: via 3.5 mm Audio In, via Bluetooth

Outer Carton

- EAN: 48 95185 60807 5
- Number of consumer packages: 1
- Length: 31.1 inch
- Width: 15.6 inch
- Height: 5.4 inch
- Gross weight: 13.545 lb
- Net weight: 10.750 lb
- Tare weight: 2.795 lb

Convenience

- EasyLink (HDMI-CEC): Automatic audio input mapping, One touch play, One touch standby, Remote Control-Passthrough, System standby, Audio Return Channel
- HDMI Features: Audio Return Channel (ARC),

Content Type

Power

- Power consumption: 50 W
- Power supply: 110-240V, 50/60 Hz
- Standby power consumption: < 0.5 W

Packaging dimensions

- Packaging type: Carton
- Type of shelf placement: Laying
- Height: 5.4 inch
- Number of products included: 1
- EAN: 48 95185 60807 5
- Width: 31.1 inch
- Depth: 15.6 inch
- Gross weight: 13.545 lb
- Net weight: 10.750 lb
- Tare weight: 2.795 lb

Product dimensions

- Width: 28.1 inch
- Height: 3.0 inch
- Depth: 12.8 inch
- Weight: 9.921 lb

Accessories

- Included accessories: Power cord, Quick start guide, Remote Control, Safety and Legal Leaflet, Trademarks Sheet, AAA Battery (x1), User Manual

Dimensions

- Main Unit (W x H x D): 713 x 75 x 325 mm
- Weight incl. Packaging: 8.1 kg
- Main Unit Weight: 4.5 kg
- Packaging (W x H x D): 790 x 138 x 396 mm

Audio Playback

- Compression format: MP3, WMA



Issue date 2024-04-13

Version: 2.1.4

EAN: 48 95185 60807 5

© 2024 Koninklijke Philips N.V.
All Rights reserved.

Specifications are subject to change without notice.
Trademarks are the property of Koninklijke Philips N.V.
or their respective owners.

www.philips.com