




Philips Fidelio  
In-ear headphones with  
mic

**Three-way hybrid**  
acoustic architecture  
High resolution audio

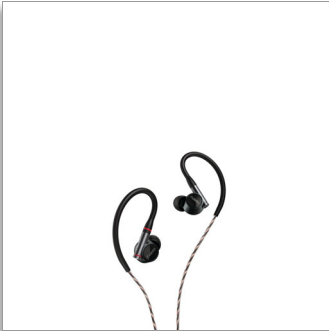

S3

## Superb in-ear sound

Wherever you go

These audiophile-grade in-ear headphones match a spacious, natural soundstage with exceptional comfort and fit. Twisted-pair cables and included MMCX connectors let every glorious detail shine through when you connect your hi-res player.

### Immersive full-range sound

- 6 mm dynamic bass driver. Dual balanced-armature drivers
- Spacious, natural soundstage
- Tight, impactful bass
- Balanced midrange. Impeccably detailed high frequencies

### Crafted to reveal more detail

- Perfect seal, perfect fit
- Comply™ memory foam ear-tip covers in S, M, and L
- Beautiful design. Carry pouch included
- Secure ear-hook design keeps the earphones in place

### Immerse in any source

- Hi-Res Audio. Hear every detail
- Connect to any source. From phone to headphone amp
- In-line remote. For music and calls
- Removable twisted-pair cables. MMCX and 3.5 mm adapters

**PHILIPS**  
Fidelio

In-ear headphones with mic  
Three-way hybrid acoustic architecture, High resolution audio

# Specifications

## Design

- Color: Black

## Sound

- Speaker diameter: 6 mm
- Acoustic system: Semi-closed
- Frequency response: 5-40000 Hz
- Impedance: 16 ohm
- Sensitivity: 107 dB/mW

## Accessories

- Storage pouch

## Connectivity

- Cable Connection: 1.3 m cable with 3.5 mm connectors
- Compatible with: iPhone®, BlackBerry®, HTC, LG, MOTOROLA, Sony, Nokia\*, SAMSUNG\*.  
\*Extra connector available through customer support for Sony Ericsson, older models from

NOKIA and SAMSUNG

## Packaging dimensions

- Packaging dimensions (W x H x D): 15.8 x 22.8 x 5 cm
- Nett weight: 0.058 kg
- Gross weight: 0.342 kg
- Tare weight: 0.284 kg
- EAN: 48 95229 10838 7
- Number of products included: 1
- Packaging type: Carton
- Type of shelf placement: Both

## Outer Carton

- Outer carton (L x W x H): 17 x 11.1 x 21.9 cm
- Nett weight: 0.116 kg
- Gross weight: 0.765 kg
- Tare weight: 0.649 kg
- GTIN: 1 48 95229 10838 4
- Number of consumer packagings: 2

S3/00

# Highlights

## Spacious, natural soundstage

Get ready for an immersive in-ear musical experience. The 6 mm dynamic driver is dedicated to delivering tight, impactful bass. Dual balanced-armature drivers create a balanced midrange and impeccably detailed high frequencies.

## Perfect fit

An oval acoustic tube and three sizes of Comply memory foam ear-tip covers create a perfect seal. You'll enjoy every subtle detail in your music, even when listening in noisier environments. The ear-hook design keeps the headphones in place.

## Hear every detail

These headphones let you feel the full impact of every note. When wired to a high-resolution source, you'll get the full benefit of lossless audio-for a performance that's as close to the original recording as possible.

## Connect to any source

Immerse in your favorite albums-however you like to listen. The detachable, low-impedance twisted-pair cables minimize distortion, revealing more detail in your music. MMCX connectors are included for connection to high-resolution audio devices.

## Carry pouch included

The high-quality metal ear housing is finished to an attractive sheen, and bears the Fidelio logo embossed in metallic letters. The included carry pouch helps to protect against scratches when not in use.

## In-line remote

Take a call without missing a beat. The in-line remote with mic lets you control music playback, and take calls in crystal-clear sound.



Issue date 2022-05-15

Version: 1.1.4

12 NC: 8670 001 66757  
EAN: 48 95229 10838 7

© 2022 Koninklijke Philips N.V.  
All Rights reserved.

Specifications are subject to change without notice.  
Trademarks are the property of Koninklijke Philips N.V.  
or their respective owners.

[www.philips.com](http://www.philips.com)