



Philips  
Surround Base

2.1 CH Integrated subwoofer  
Bluetooth® and NFC  
HDMI ARC



HTL4115B



## Powerful sound to enhance any TV

with integrated subwoofer

NFC for one touch Bluetooth® pairing allows effortlessly music listening. This Philips SoundStage is a perfect match with your TV which you can simply put it on top of your TV. Let it boosts your TV, disc player, gaming console & MP3 player

### Connect and enjoy all your entertainment

- Bluetooth wireless music streaming from your music devices
- One-Touch with NFC-enabled smartphones for Bluetooth pairing
- Enjoy MP3/WMA music directly from your portable USB devices
- Audio in to enjoy music from iPod/iPhone/MP3 player
- Works with TVs, BD/DVD players, gaming consoles, MP3 players
- EasyLink to control all HDMI CEC devices via a single remote

### Designed for simplicity

- Perfect match with your TV, just place it on top
- Volume knob for easy control


### Richer sound for watching TV and movies

- Virtual Surround Sound for a realistic movie experience
- Integrated subwoofer for powerful bass
- Dolby Digital for ultimate movie experience

**PHILIPS**


# Highlights

## Virtual Surround Sound

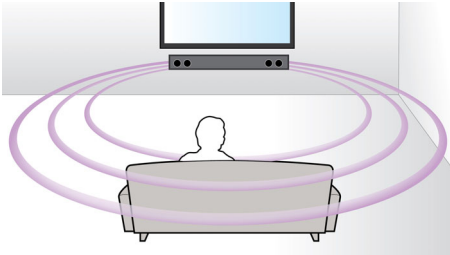


Philips Virtual Surround Sound produces rich and immersive surround sound from less than five-speaker system. Highly advanced spatial algorithms faithfully replicate the sonic characteristics that occur in an ideal 5.1-channel environment. Any high quality stereo source is transformed into true-to-life, multi-channel surround sound. No need to purchase extra speakers, wires or speaker stands to appreciate room-filling sound.

## Dolby Digital

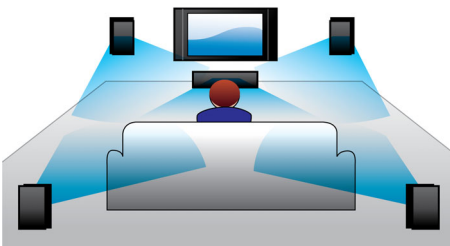


Because Dolby Digital, the world's leading digital multi-channel audio standards, make use of the way the human ear naturally processes sound, you experience superb quality surround sound audio with realistic spatial cues.

## Bluetooth wireless streaming

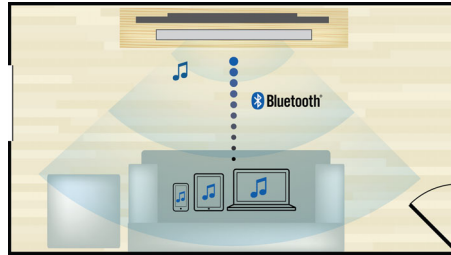

Bluetooth wireless music streaming from your music devices

## NFC technology

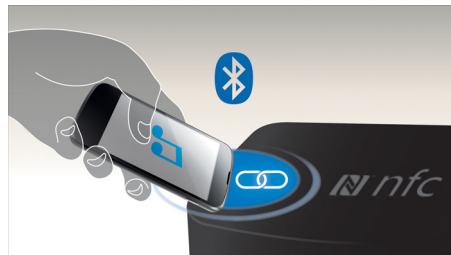

Pair Bluetooth devices easily with one-touch NFC (Near Field Communications) technology. Just tap the NFC enabled smartphone or tablet on the NFC area of a speaker to turn the speaker on, start Bluetooth pairing, and begin streaming music.

## USB



Enjoy MP3/WMA music directly from your portable USB devices

## Audio in



Audio in allows you to easily play your music directly from your iPod/iPhone/iPad, MP3 player, or laptop via a simple connection to your home cinema. Simply connect your audio device to the Audio in jack to enjoy your music with the superior sound quality of the Philips home cinema system.

## Works with multiple devices

Works with TVs, BD/DVD players, gaming consoles, MP3 players

## EasyLink



EasyLink lets you control multiple devices like DVD players, Blu-ray players, TV's etc. with one remote. It uses HDMI CEC industry-standard protocol to share functionality between devices through the HDMI cable. With one touch of a button, you can operate all your connected HDMI CEC enabled equipment simultaneously. Functions like standby and play can now be carried out with absolute ease.

# Specifications

## Sound

- Sound Enhancement: Virtual Surround Sound, Treble and Bass Control, Night Mode, Audio sync
- Sound System: Dolby Digital
- Speaker output power: 20 W x 2
- Subwoofer output power: 40
- Total Power RMS @ 10% THD: 80 W

## Loudspeakers

- Loudspeaker types: Integrated with main unit
- Speaker Drivers per side: 1 woofer, 1 x 1" tweeter
- Speaker Impedance: 4 ohm
- Subwoofer type: Integrated Subwoofer

## Connectivity

- Integrated Connections: Bluetooth, NFC
- iPod/iPhone: via 3.5mm Audio In, via bluetooth
- Rear Connections: Digital optical in, AUX in, Digital coaxial in, HDMI 1.4 output (ARC)
- Front / Side connections: Audio in, USB

## Convenience

- EasyLink (HDMI-CEC): Audio Return Channel, Automatic audio input mapping, One touch play, One touch standby, Remote Control-Passthrough, System standby
- HDMI Features: Audio Return Channel (ARC), Content Type

## Audio Playback

- Compression format: MP3, WMA

## Power

- Power consumption: 20 W
- Power supply: 120 V (US), 60Hz
- Standby power consumption: < 0.5 W

## Dimensions

- Main Unit (W x H x D): 701 x 68 x 325 mm
- Main Unit Weight: 6.5 kg
- Packaging (W x H x D): 800 x 142 x 372 mm
- Weight incl. Packaging: 8.6 kg

## Accessories

- Included accessories: AAA Battery (x1), Quick start guide, Remote Control, Safety & Legal Leaflet, Trademarks Sheet, World Wide Warranty leaflet, User Manual

## Packaging dimensions

- UPC: 6 09585 23788 9
- Packaging dimensions (W x H x D): 80 x 14.4 x 37.2 cm
- Packaging dimensions (W x H x D): 31.5 x 5.7 x 14.6 inch
- Gross weight: 8.61 kg
- Gross weight: 18.982 lb
- Nett weight: 6.595 kg
- Nett weight: 14.539 lb
- Number of products included: 1
- Packaging type: Carton
- Tare weight: 2.015 kg
- Tare weight: 4.442 lb
- Type of shelf placement: Laying

## Outer Carton

- Gross weight: 8.61 kg
- Gross weight: 18.982 lb
- Outer carton (L x W x H): 31.5 x 14.6 x 5.7 inch
- Outer carton (L x W x H): 80 x 37.2 x 14.4 cm
- Nett weight: 14.539 lb
- Nett weight: 6.595 kg
- Number of consumer packagings: 1
- Tare weight: 4.442 lb
- Tare weight: 2.015 kg
- UPC: 6 09585 23788 9

## Product dimensions

- Product dimensions (W x H x D): 27.6 x 3.1 x 12.8 inch
- Product dimensions (W x H x D): 70.06 x 7.8 x 32.5 cm
- Weight: 6.344 kg
- Weight: 13.986 lb



Issue date 2015-06-03

Version: 3.3.5

12 NC: 8670 001 07613  
UPC: 6 09585 23788 9

© 2015 Koninklijke Philips N.V.  
All Rights reserved.

Specifications are subject to change without notice.  
Trademarks are the property of Koninklijke Philips N.V.  
or their respective owners.

[www.philips.com](http://www.philips.com)