



Philips
wireless portable speaker

Bluetooth®

Built-in microphone for calls
Rechargeable battery
10 W



BT3500W

Bring big tunes with you, everywhere

Quality, style and big sound merge in a body so slim it can be slipped in everywhere. Built-in NFC technologies make smartphone pairing as easy as a touch.

Impressive sound

- Advanced audio performance with a slim design
- Impressive with 10 W RMS
- Anti-clipping function for loud, distortion-free music

Simplicity in use

- Wireless music streaming via Bluetooth
- One-Touch with NFC-enabled smartphones for Bluetooth pairing
- Built-in microphone for hands-free phone calls
- Audio-in for easy connection to almost any electronic device

Designed for grab and go

- Built-in rechargeable battery for music playback anywhere
- Use your own strap to carry it anywhere


PHILIPS

Wireless portable speaker
Bluetooth® Built-in microphone for calls, Rechargeable battery, 10 W

BT3500W/00


Highlights

NFC technology

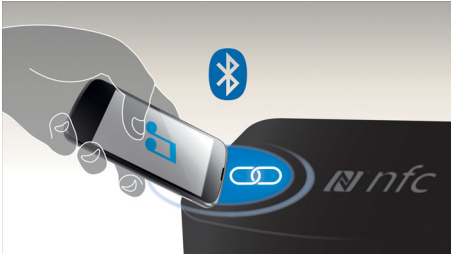


Pair Bluetooth devices easily with one-touch NFC (Near Field Communications) technology. Just tap the NFC-enabled smartphone or tablet on the NFC area of a speaker to turn the speaker on, start Bluetooth pairing and begin streaming music.

Wireless music streaming

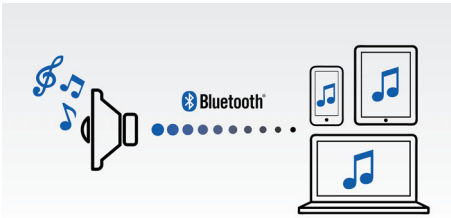

Bluetooth is a short range wireless communication technology that is both robust and energy-efficient. The technology allows easy wireless connection to iPod/iPhone/iPad or other Bluetooth devices, such as smartphones, tablets or even laptops. So you can enjoy your favourite music and sound from videos or games wirelessly.

Anti-clipping function

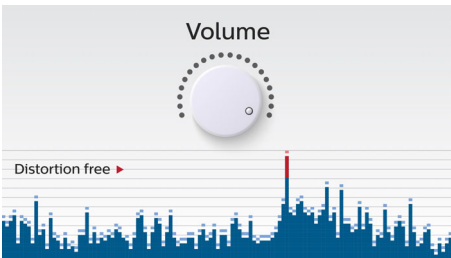

Anti-Clipping lets you play music louder and keeps the quality high, even when the battery is low. It

accepts input signals from 300 mV to 1000 mV and keeps your speakers safe from damage by distortion. This speaker handles anti-clipping through a dedicated audio limiter IC. This monitors the musical signal as it goes through the amplifier and keeps peaks within the amp's range, preventing the audio distortion caused by clipping without affecting loudness. A speaker's ability to reproduce musical peaks decreases along with battery power, but anti-clipping reduces peaks caused by low battery.

Built-in microphone



With its built-in microphone, this speaker also works as a speaker phone. When a call comes in, the music is put on pause and you can talk via the speaker. Call for a business meeting. Or, call your friend from a party. Either way, it works great.

Audio-in



Audio-in for easy connection to almost any electronic device

Specifications

Compatibility

- iPad: iPad 1, iPad 2, new iPad, iPad mini, iPad with Retina display
- iPhone: iPhone 3, iPhone 3GS, iPhone 4, iPhone 4S, iPhone 5, iPhone 5C, iPhone 5S
- iPod touch: 3rd generation or later
- Android tablets and smartphones: with Android 2.1 and Bluetooth 2.1 or above
- work with: Bluetooth 4.0 or below
- other Bluetooth-enabled device

Connectivity

- Bluetooth profiles: A2DP, AVRCP, HFP
- Bluetooth range: Line of sight, 10 m or 30 ft
- Audio in (3.5 mm)
- USB charging

Convenience

- Built-in microphone: for speaker conference

Sound

- Output power (RMS): 10 W
- Sound System: Stereo

Loudspeakers

- Speaker drivers: 2 x 2"

Power

- Operating time on battery: 5 hr
- Battery type: lithium polymer (built-in)

Accessories

- Included accessories: USB cable for PC charging, World Wide Warranty leaflet, Quick install guide

Dimensions

- Product dimensions (WxDxH): 201 x 35 x 101 mm
- Packaging dimensions (WxDxH): 261 x 48 x 183 mm
- Product weight: 0.5 kg
- Weight incl. Packaging: 0.625 kg



Issue date 2015-03-24

Version: 3.1.4

12 NC: 8670 001 12972
EAN: 08 71258 17145 74

© 2015 Koninklijke Philips N.V.
All Rights reserved.

Specifications are subject to change without notice.
Trademarks are the property of Koninklijke Philips N.V.
or their respective owners.

www.philips.com