# Quick Start Guide






#### What's in the Box?

You should find these items upon opening the box.








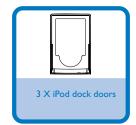



### Step A Connect

Connect the AC power cable of the system.

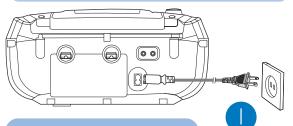

#### Tip

- See the User Manual for how to connect other equipment to this system.
- Use the supplied AC power cable only! Using any other power connection device may damage your main set!

## Step B Setup

Before plugging your player in the dock, select a suitable dock door.

3 iPod dock doors are included. Each door has indication to match different iPod types.

Push the dock to eject it.

- Turn the wheel of the dock support to adjust the height to different iPod types.
- Align the slots of the dock and latches of the dock door, then
  - slide in the door.
- Align the connectors of on the dock and iPod, and then push the iPod gently to install your iPod to the dock connector.
- To take out the iPod, push the dock to eject it.
- Hold the iPod carefully and pull it out slowly.
- Push the dock door to close it.

