



Philips Fidelio
Wireless subwoofer

420 W max. 8" woofer

Dual wOOx passive radiators
Philips Wireless Home System
Sustainable Muirhead leather



TAFW1

Crafted for bass chasers

Feel the full power of every dramatic moment, every climactic action scene, every beat. The Fidelio FW1 subwoofer gives you beautifully controlled bass, bringing effects alive and enriching quieter scenes and music. Prepare to be moved.

Beautiful Fidelio design

- Head-turning looks
- Dimensions: 240 x 472 x 400 mm
- Muirhead leather trim with brushed-metal top

Give your entertainment the sound it deserves

- 420 W max. 8" woofer. Dual wOOx passive radiators
- Advanced passive radiator design
- No distortion—even at high volumes
- Philips Fidelio FW1. Spine-tingling bass for movies and music
- Rich, deep, perfectly controlled low frequencies

A seamless experience

- Intelligent bass. Immerse more. Hear more
- Optimises performance of certain Philips TV and audio
- Philips Wireless Home System powered by DTS Play-Fi
- RCA connection. Connect to multi-channel amps and more

PHILIPS

Wireless subwoofer
420 W max. 8" woofer Dual wOOx passive radiators, Philips Wireless Home System, Sustainable Muirhead leather

Highlights

Spine-tingling bass



The Fidelio FW1 subwoofer brings spine-tingling bass to movies, shows and music. A down-firing woofer and advanced dual passive-radiator design ensure that rich, perfectly timed low frequencies fill any room. You'll add a whole new dimension to everything you watch—or listen to.

Head-turning looks




This head-turning FW1 subwoofer beautifully matches the Fidelio FB1 soundbar. The bevel is trimmed in anthracite Muirhead leather, while the top surface is made of brushed metal. The visible elements of the twin passive radiators are detailed with metallic material, which softly catches the light.

Philips Wireless Home System



The Play-Fi-compatible FW1 subwoofer lets you build your perfect home-cinema sound. Connect to a Fidelio soundbar to deepen the impact of movies and music with perfectly controlled bass—free from distortion, even at high volume. Add paired wireless speakers and create a true surround-sound setup.

Intelligent bass

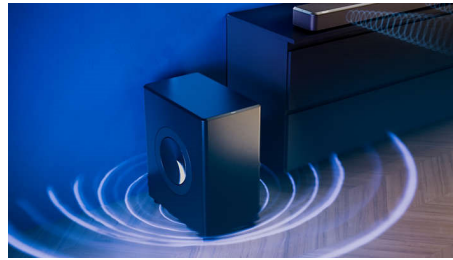

Good things happen when this Fidelio FW1 subwoofer is paired with a Philips soundbar, speakers or TV*. The sub recognises what it's paired with and automatically takes control of the lowest frequencies, freeing paired components to concentrate on mids and highs. The result: even more richness and detail.

TAFW1/10

RCA connection



Connect this FW1 subwoofer to your existing home-cinema setup, or connect with non-Play-Fi-compatible TVs via the RCA port.

420 W max. 8" woofer

420 W max. 8" woofer. Dual wOOx passive radiators

Advanced passive radiators

Advanced passive radiator design

Dimensions: 240 x 472 x 400 mm

Dimensions: 240 x 472 x 400 mm

Muirhead leather

Muirhead leather trim with brushed-metal top

No distortion

No distortion—even at high volumes

Optimises performance

Optimises performance of certain Philips TV and audio

Rich, deep, low frequencies

Rich, deep, perfectly controlled low frequencies

Wireless subwoofer

420 W max. 8" woofer Dual wOOx passive radiators, Philips Wireless Home System, Sustainable Muirhead leather

Specifications

Sound

- Frequency response: 25-150 Hz
- Output power (RMS): 210 W
- Output power (MAX): 420 W @ 1% THD
- Total harmonic distortion: 1%

Loudspeakers

- Subwoofer type: Active, Wireless subwoofer
- Subwoofer impedance: 3 ohm
- Number of sound channels: 0.1
- Number of woofers: 1
- Passive radiators: 2
- Woofer diameter: 8"

Connectivity

- Bluetooth: No
- Audio in: No
- Network setup: Philips Sound app, powered by DTS Play-Fi, PS Fine Tune app
- Wi-Fi: 2.4 GHz/5 GHz, IEEE 802.11 a/b/g/n/ac
- DLNA Standard: No
- Multiple speaker connection
- Multiple speaker scenario: Surround, Grouping
- Multiple speaker technology: DTS Play-Fi Multi-room
- Smart Home: None
- DTS Play-Fi subwoofer channel
- Subwoofer in: 1 x 3.5 mm RCA

Convenience

- Built-in microphone: 0
- Light Effect: No

- Hands-free calling: No
- Other controls: Source, Factory reset
- Subwoofer in controls: Gain, Crossover, Phase

Compatibility

- Smartphone/tablet APP control

Power

- Power supply: 100 - 240 V AC, 50/60 Hz
- Subwoofer standby power: < 0.5 W
- Power bank: No

Packaging dimensions

- Height: 56 cm
- Packaging type: Carton
- Width: 53 cm
- Depth: 32 cm
- Number of products included: 1
- EAN: 48 95229 12737 1
- Gross weight: 15.5 kg
- Net weight: 13 kg
- Tare weight: 2.5 kg

Product dimensions

- Height: 47.2 cm
- Width: 24 cm
- Depth: 40 cm
- Weight: 13.4 kg

Accessories

- Included accessories: AC Power Cord, Quick start guide, World Wide Warranty leaflet



Issue date 2024-04-13

Version: 6.1.2

EAN: 48 95229 12737 1

© 2024 Koninklijke Philips N.V.
All Rights reserved.

Specifications are subject to change without notice.
Trademarks are the property of Koninklijke Philips N.V.
or their respective owners.

www.philips.com

* This feature works with DTS Play-Fi-compatible Philips TVs from 2021 or later.