

Philips
5.1 Home theater

DoubleBASS
3D Blu-ray
dock iPod/iPhone

HTS4562



Enjoy powerful cinema in your home with DoubleBass

Obsessed with sound

Maximize your home cinema sound experience with dynamic Double Basspipes speakers! Play all your favorite entertainment content including 3D Blu-ray on this innovative Philips 4000 series home theater system.

Great listening experience

- Powerful speakers with double basspipes for great sound
- DoubleBASS technology for fuller and deeper bass
- Dolby TrueHD and DTS-HD for high fidelity surround sound
- 1000W RMS power delivers great sound for movies and music

Designed to enhance your cinema at home

- Unique touch controls for easy access to your content
- Wireless rear speakers option for clutter free placement

Simply enjoy all your entertainment


- Full HD 3D Blu-ray for a truly immersive 3D movie experience



PHILIPS

Highlights

Wireless rear speakers option

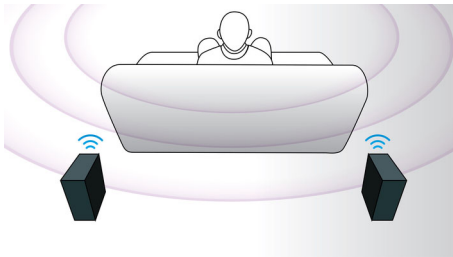


Wireless rear speakers give you scalability and mobility in speaker placement. Developed using interference-free technology, wireless speakers provide full surround sound without unsightly wire connections.

Full HD 3D Blu-ray



Be enthralled by 3D movies in your own living room on a Full HD 3D TV. Active 3D uses the latest generation of fast switching displays for real life depth and realism in full 1080x1920 HD resolution. By watching these images through special glasses with right and left lenses that are timed to open and close in synchrony with alternating images, the full HD 3D viewing experience is created in your home cinema. Premium 3D movie releases on Blu-ray offer a wide, high quality selection of content. Blu-ray also delivers uncompressed surround sound for an unbelievably real audio experience.

Dolby TrueHD and DTS-HD

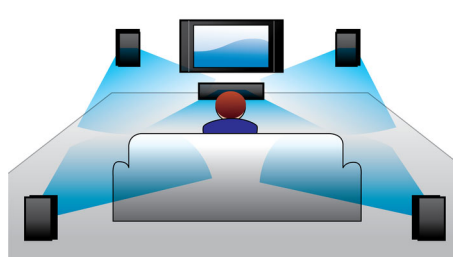

Dolby TrueHD and DTS-HD Master Audio Essential deliver the finest sound from your Blu-ray Discs. Audio reproduced is virtually indistinguishable from the studio master, so you hear what the creators intended for you to hear. Dolby TrueHD and DTS-HD Master Audio Essential complete your high definition entertainment experience.

1000W RMS power




1000W RMS power delivers great sound for movies and music

DoubleBASS technology



DoubleBASS ensures you hear even the deepest bass tones from compact-sized subwoofers. It captures low frequencies and recreates them in the audible range of the subwoofer - delivering sound with more boom and panache, and ensuring you a full, uncompromised listening experience.

Unique touch controls

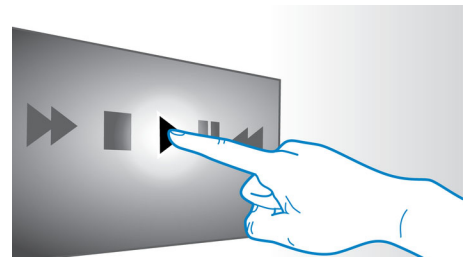

Touch controls allow you to control the volume as well as other playback options by simply pressing the touch sensitive controls on the main unit.



Matches Philips 3000 & 4000 series TV*

Matches Philips 3000 & 4000 series TV

Philips lets you enjoy great television performance at

the right price, today and tomorrow. The matching Philips 3000 & 4000 series 2011 LCD TVs offer Full HD pictures with easy to use digital TV connectors and a pure TV design. Both TV and home theater can be operated with only one remote control and the combined set ensures the best picture and sound performance with Philips Easylink via HDMI. In addition they are both designed with same materials and finishing for a perfect visual match!



Specifications

Accessories

- Compatible accessories: RWSS5510 Wireless Rear Audio, STS1300 Floor stand
- Included accessories: 2 x AAA Batteries, DCK3060 Dock for iPod/iPhone, FM antenna, Power cord, Quick start guide, Remote Control, Safety & Legal Leaflet, Trademarks Sheet, World Wide Warranty leaflet, WUB1110 Wi-Fi USB Adapter

Matching Philips Televisions*

- 3000 Series: 32PFL3606, 42PFL3606
- 4000 Series: 32PFL4606, 37PFL4606, 42PFL4606, 47PFL4606

Audio Playback

- Compression format: MP3, WMA, AAC, WAV
- MP3 bit rates: 32 - 320 kbps

Still Picture Playback

- Compression format: GIF, JPEG, JPEG HD, JPEG Progressive, PNG
- Picture Enhancement: Rotate, Slideshow with music playback, Zoom

Video Playback

- Compression formats: AVCHD, DivX Plus HD, MPEG1, MPEG2, MPEG4, WMV HD, WMV SD

Optical Playback Media

- Playable Discs: AVCHD, BD, BD R / BD RE, CD, CDDA, CD-R/CD-RW, DVD, DVD +R/+RW, DVD -R/-RW, SVCD, VCD

File Format

- Audio: aac, mka, mp3, wav, wma
- Picture: GIF, JPEG, JPG
- Video: asf, avi, divx, mkv, mp4, mpeg, mpg, wmv

Connectivity

- Front / Side connections: Music iLINK, USB / Wi-Fi slot
- Rear Connections: AUX IN 1, AUX IN 2, Composite video (CVBS) output, Digital coaxial in, Digital optical in, Ethernet, FM Antenna Socket, HDMI 1.4 output (ARC), iPod/iPhone Dock Jack, Mini Easy-Fit Speaker Jacks, SD/SDHC Card slot, Wireless Rear Audio
- Access to Content: DLNA

Convenience

- EasyLink (HDMI-CEC): 21:9 format subtitle support, Audio Return Channel, Automatic audio input mapping, Dynamic Lipsync, One touch play, One touch standby, Remote Control-Passthrough
- HDMI Features: 3D, Audio Return Channel (ARC), Content Type, Deep color

Dimensions

- Main Unit (W x H x D): 435 x 57 x 357 mm
- Main Unit Weight: 3.7 kg
- Center Speaker (W x H x D): 161 x 92 x 95 mm

- Center Speaker Weight: 0.8 kg
- Centre Speaker cable length: 2 m
- Front Speaker (W x H x D): 95 x 161 x 87 mm
- Front Speaker Weight: 0.6 kg
- Front Speaker cable length: 4 m
- Rear Speaker (W x H x D): 95 x 161 x 87 mm
- Rear Speaker Weight: 0.6 kg
- Rear Speaker cable length: 10 m
- Subwoofer (W x H x D): 123 x 309 x 369 mm
- Subwoofer Weight: 3.6 kg
- Subwoofer cable length: 3 m
- Packaging (W x H x D): 400 x 440 x 520 mm
- Weight incl. Packaging: 14.4 kg

Loudspeakers

- Loudspeaker types: 1 x Centre speaker, 4 x Satellite speakers
- Center speaker drivers: 1 x 3" Full range woofer
- Center speaker freq range: 150 - 20k Hz
- Center speaker impedance: 3 ohm
- Drivers per Satellite speaker: 1 x 3" Full range woofer
- Satellite speaker freq range: 150 - 20k Hz
- Satellite speaker impedance: 5 ohm
- Subwoofer type: Passive
- Subwoofer driver: 1 x 6.5" woofer
- Subwoofer freq range: 20 - 150 Hz
- Subwoofer impedance: 3 ohm

Picture/Display

- Picture enhancement: HD (720p, 1080i, 1080p/24fps), Progressive scan, Video upscaling

Power

- Power consumption: 105 W
- Power supply: 220-240V, 50Hz
- Standby power consumption: < 0.5 W

Sound

- Equalizer settings: Gaming, Movie, Music, News, Original
- Sound Enhancement: Dialog Enhancement, Dolby Digital Prologic II, DoubleBass, FullSound, Night Mode, Treble, Mid and Bass Control
- Sound System: Dolby True HD, Dolby Digital 5.1, Dolby Digital Plus, DTS Digital Surround, DTS-HD High Resolution Audio
- Center speaker output power: 230 W
- Satellite speaker output power: 135 W x 4
- Subwoofer output power: 230 W
- Total Power RMS @ 30% THD: 1000 W

Sustainability

- Packaging: 80% recycled corrugated board, Electronic User Manual, No polyfoam, Soya based ink

Tuner/Reception/Transmission

- RDS: Station Name
- Tuner Bands: FM
- Number of Preset Channels: 40



Issue date 2020-02-14

Version: 8.3.5

12 NC: 8670 000 73452
EAN: 87 12581 58843 4

© 2020 Koninklijke Philips N.V.
All Rights reserved.

Specifications are subject to change without notice.
Trademarks are the property of Koninklijke Philips N.V.
or their respective owners.

www.philips.com

* The home theater can also be matched with all other Philips TVs.