



Philips
5.1 Home theater

Double Bass Sound
3D Blu-ray



HTS5583

Powerful cinematic surround sound with deep bass

Obsessed with Sound

Bring the power of the cinema into your home! Pump up your home entertainment experience with speakers with double basspipes offering powerful 1000W surround sound and immersive 3D Blu-ray Disc playback.

Great listening experience

- Powerful speakers with double basspipes for great sound
- Dolby TrueHD and DTS-HD for high fidelity surround sound
- 1000W RMS power delivers great sound for movies and music

Simply enjoy all your entertainment

- Full HD 3D Blu-ray for a truly immersive 3D movie experience
- HDMI Hub to connect HDMI devices for great sound and picture
- Smart TV to enjoy online services & access multimedia on TV

Designed to enhance your cinema at home

- Touch panel for intuitive playback and volume control
- Wireless rear speakers option for clutter free placement

PHILIPS


Highlights

Double Bass Sound



Powerful speakers with a bass-reflex system and double basspipes enhance the lower frequencies and deliver rock-solid, deep bass sounds. You'll be able to hear the lowest murmur or the deepest roar.

Dolby TrueHD and DTS-HD

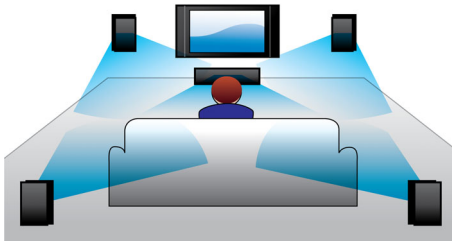

Dolby TrueHD and DTS-HD Master Audio Essential deliver the finest sound from your Blu-ray Discs. Audio reproduced is virtually indistinguishable from the studio master, so you hear what the creators intended for you to hear. Dolby TrueHD and DTS-HD Master Audio Essential complete your high definition entertainment experience.

1000W RMS power




1000W RMS power delivers great sound for movies and music

Full HD 3D Blu-ray



Be enthralled by 3D movies in your own living room on a Full HD 3D TV. Active 3D uses the latest generation of fast switching displays for real life depth and realism in full 1080x1920 HD resolution. By watching these images through special glasses with right and left lenses that are timed to open and close in synchrony with alternating images, the full HD 3D viewing experience is created in your home cinema. Premium 3D movie releases on Blu-ray offer a wide, high quality selection of content. Blu-ray also delivers uncompressed surround sound for an unbelievably real audio experience.

HDMI Hub

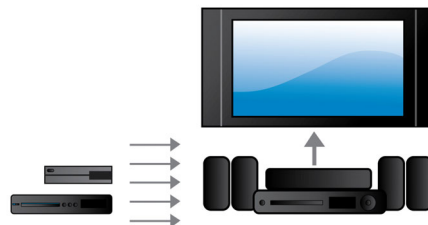


HDMI Hub provides additional HDMI ports to allow you to connect other devices such as your game console or HD set-top box to your home theater conveniently. By connecting your devices through the HDMI Hub, you can enjoy high-definition sound and picture for all your entertainment.

Smart TV




Philips home theater & Blu-ray player with Smart TV offer you an array of enhanced features, including Net TV, SimplyShare & MyRemote. Net TV brings a wide range of online information & entertainment to your TV for services like video-on-demand. With SimplyShare, you can access photos, music & movies stored on your PC from the comfort of your couch. You can also use your smartphone/tablet to control your home theater via Philips MyRemote app.

Touch panel for playback

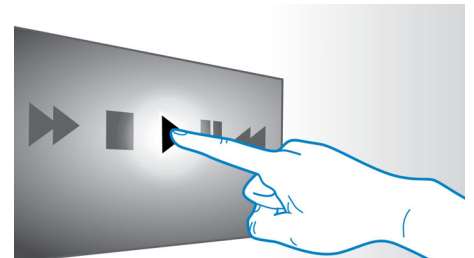

Intuitive touch panel controls allows you to control the volume as well as other playback options by simply pressing the touch sensitive controls on the front panel.

Wireless rear speakers option

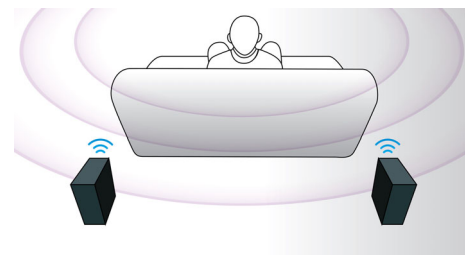

Wireless rear speakers give you scalability and mobility in speaker placement. Developed using interference-free technology, wireless speakers provide full surround sound without unsightly wire connections.



Specifications

Sound

- Equalizer settings: Gaming, Movie, Music, News, Original
- Sound Enhancement: Auto Volume Leveller, Dolby Digital Prologic II, Double Bass Sound, FullSound, Night Mode, Surround Plus, Treble and Bass Control
- Sound System: Dolby Digital 5.1, Dolby Digital Plus, Dolby True HD, DTS Digital Surround, DTS-HD High Resolution Audio, DTS-HD Master Audio
- Center speaker output power: 166 W
- Satellite speaker output power: 2 x 166W
- Subwoofer output power: 166 W
- Tallboy speaker output power: 2 x 166 W
- Total Power RMS @ 30% THD: 1000 W

Loudspeakers

- Loudspeaker types: 1 x Centre speaker, 2 x Satellite speakers, 2 x Tallboy speakers
- Center speaker drivers: 1 x 3" Full range woofer
- Center speaker freq range: 150-20k Hz
- Center speaker impedance: 4 ohm
- Drivers per Satellite speaker: 1 x 3" Full range woofer
- Satellite speaker impedance: 4 ohm
- Satellite speaker freq range: 150-20k Hz
- Drivers per Tallboy speaker: 1 x 3" Full range woofer
- Tallboy speaker freq range: 150-20k Hz
- Tallboy speaker impedance: 4 ohm
- Subwoofer type: Passive
- Subwoofer driver: 1 x 6.5" woofer
- Subwoofer freq range: 20-150 Hz
- Subwoofer impedance: 4 ohm

Connectivity

- Front Connections: Hi-Speed USB, Microphone In, Music iLINK
- Rear Connections: AUX in, Click-fit Speaker Connectors, Composite video (CVBS) output, Digital coaxial in, Digital optical in, Ethernet, FM Antenna Socket, HDMI 1.4 output (ARC), HDMI IN 1, HDMI IN 2, iPod/iPhone Dock Jack, SD/SDHC Card slot, Wi-Fi USB slot, Wireless Rear Audio
- Smart TV: MyRemote, Net TV, SimplyShare

Convenience

- EasyLink (HDMI-CEC): 21:9 format subtitle support, Audio Return Channel, Automatic audio input mapping, Dynamic Lipsync, One touch play, One touch standby, Remote Control-Passthrough
- HDMI Features: 3D, Audio Return Channel (ARC), Content Type, Deep color

Tuner/Reception/Transmission

- Tuner Bands: FM
- Number of Preset Channels: 40

Optical Playback Media

- Playable Discs: AVCHD, BD, BD R / BD RE, CD, CDDA, CD-R/CD-RW, DVD, DVD +R/+RW, DVD -R/-RW, SVCD, VCD

File Format

- Audio: aac, mka, mp3, wma
- Picture: GIF, JPEG, JPG
- Video: asf, avi, divx, mkv, mp4, mpeg, mpg

Audio Playback

- Compression format: AAC, MP3, WAV, WMA
- MP3 bit rates: 32 - 320kbps

Karaoke Playback

- Standard functions: Echo level control, Mic volume control, Pitch control

Video Playback

- Compression formats: AVCHD, DivX Ultra, MPEG1, MPEG2, MPEG4, RMVB

Still Picture Playback

- Compression format: GIF, JPEG, JPEG HD, JPEG Progressive, PNG
- Picture Enhancement: Rotate, Slideshow with music playback, Zoom

Picture/Display

- Picture enhancement: HD (720p, 1080i, 1080p/24fps), Progressive scan, Video upscaling

Power

- Power consumption: 105 W
- Power supply: 110-127V / 220-240V, ~50-60Hz
- Standby power consumption: < 0.5 W

Sustainability

- Packaging: Electronic User Manual

Dimensions

- Main Unit (W x H x D): 435 x 45 x 330 mm
- Main Unit Weight: 3.69 kg
- Center Speaker (W x H x D): 223 x 102 x 80 mm
- Center Speaker Weight: 0.57 kg
- Centre Speaker cable length: 2 m
- Front Speaker (W x H x D): 90 x 187 x 82 mm
- Front Speaker Weight: 0.57 kg
- Front Speaker cable length: 4 m
- Rear Tallboy Speaker (WxHxD): 100 x 1092 x 65 mm
- Rear Speaker Weight: 0.82 kg
- Rear Speaker cable length: 10 m
- Subwoofer (W x H x D): 178 x 303 x 343 mm
- Subwoofer cable length: 3 m
- Packaging (W x H x D): 668 x 400 x 418 mm
- Weight incl. Packaging: 17.6 kg
- Subwoofer Weight: 3.9 kg

Accessories

- Compatible accessories: DCK3061 Dock for iPod/iPhone, RWSS5512 Wireless Rear module, STS3001 Speaker stand
- Included accessories: 2 x AAA Batteries, FM antenna, HDMI cable, Power cord, Quick start guide, Remote Control, Safety & Legal Leaflet, Trademarks Sheet, World Wide Warranty leaflet

Outer Carton

- EAN: 87 12581 62687 7
- Gross weight: 17.45 kg
- Outer carton (L x W x H): 66.8 x 40 x 41.8 cm
- Nett weight: 14.65 kg
- Number of consumer packagings: 1
- Tare weight: 2.8 kg

Packaging dimensions

- Packaging dimensions (W x H x D): 66.8 x 41.8 x 40 cm
- EAN: 87 12581 62687 7
- Gross weight: 17.45 kg
- Nett weight: 14.65 kg
- Number of products included: 1
- Packaging type: Carton
- Tare weight: 2.8 kg
- Type of shelf placement: Laying

Product dimensions

- Cable length: 0 cm
- Product dimensions (W x H x D): 43.5 x 5.55 x 34.3 cm
- Weight: 3.31 kg



Issue date 2014-08-27

Version: 7.1.3

12 NC: 8670 000 85235
EAN: 87 12581 62687 7

© 2014 Koninklijke Philips N.V.
All Rights reserved.

Specifications are subject to change without notice.
Trademarks are the property of Koninklijke Philips N.V.
or their respective owners.

www.philips.com