



## Big in sound, small in size

Portable speakers to complement a modern lifestyle. Twin speakers play stereo sound via a universal 3.5mm audio in that fits any device, with built-in rechargeable batteries for playback anywhere. Guaranteed music delight!

### **Designed for grab and go**

- Built-in rechargeable battery for music playback anywhere

### **Impressive sound**

- 4W RMS total output power
- Advanced audio sound performance in a compact design
- High-quality stereo sound for better music enjoyment

### **Simplicity in use**

- Carry bag for easy travelling
- One cable for both charging and music playback

Philips SoundShooter  
Portable Speakers

Twins

SoundShooter



SBA3210

# PHILIPS

# Highlights

## Built-in rechargeable battery



Play music out loud - anytime, anywhere. The built-in rechargeable battery lets you enjoy your personal music without the fuss of entangled power cords and the inconvenient search for an electrical outlet. Enjoy great music with the freedom of portability now.

## 4W RMS total output power



RMS refers to Root Mean Square which is a typical measurement of audio power, or rather, the electrical power transferred from an audio amplifier to a loudspeaker, which is measured in watts. The amount of electrical power delivered to the loudspeaker and its sensitivity determines the sound power that is generated. Essentially, amplifiers are limited by the electrical energy they can amplify and loudspeakers by


the electrical energy they can convert into sound energy, without distorting the audio signal. The higher the wattage, the better the sound power emitted by the speaker.

## High-quality stereo sound



These twins portable speakers create a natural stereo sound stage when they are placed apart, the effect is more realistic and more enjoyable.

## Charge and play in one cable

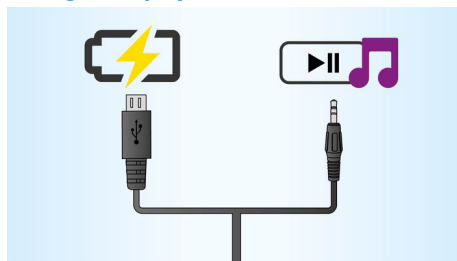

This Philips speaker comes with one cable for both battery charging & aux-in music playback. Conveniently eliminate cable clutter and enjoy uncompromised signal quality.

# Specifications

## Compatible with

- iPhone
- iPod
- Mp3 player
- Smartphones
- PC

## Connectivity

- USB charging
- Audio in (3.5mm)

## Sound

- Output power (RMS): 4W
- Sound System: Stereo
- Speakers: 1.5" x 2

## Power

- Battery type: lithium (built-in)
- Operating time on battery: 8 hr

## Accessories

- A cable for: 3.5mm audio in and USB charging
- Warranty certificate
- World Wide Warranty leaflet
- Quick start guide

## Product dimensions

- Product dimensions (W x H x D): 4,5 x 3,2 x 2,2 inch
- Product dimensions (W x H x D): 11,4 x 8,19 x 5,7 cm
- Weight: 0,361 kg
- Weight: 0,796 lb



Issue date 2020-07-09

Version: 6.0.4

12 NC: 8670 000 92465  
EAN: 00 60958 52280 92

© 2020 Koninklijke Philips N.V.  
All Rights reserved.

Specifications are subject to change without notice.  
Trademarks are the property of Koninklijke Philips N.V.  
or their respective owners.

[www.philips.com](http://www.philips.com)