

Philips Blu-ray Soundbar Home theater

2.1 CH Integrated subwoofer Bluetooth® and NFC HDMI ARC

HTB4150B

Blu-ray Disc playback



Everything you need to boost your TV's sound

The best TV companion

Pump up your home entertainment experience with this TV SoundStage. Place The TV on top, connect one cable and start enjoying your movie and music. What's more? NFC for one touch Bluetooth® pairing allows effortless music listening.

Connect and enjoy all your entertainment

- Full HD 3D Blu-ray for a truly immersive 3D movie experience
- · Bluetooth wireless music streaming from your music devices
- One-Touch with NFC-enabled smartphones for Bluetooth pairing
- · HDMI for high definition movies and picture quality

Designed for simplicity

- Perfect match with your TV, just place it on top
- Touch panel for intuitive playback and volume control

Richer sound for watching TV and movies

- · Virtual Surround Sound for a realistic movie experience
- Integrated subwoofer for powerful bass
- Dolby Digital and DTS for great surround sound



Highlights

Dolby Digital and DTS



Go digital and get the most out of your music and movies. Even stereo music sounds great because Dolby Digital and DTS Digital Surround enhance digital music and videos, pumping it up so you get truly immersive surround sound out of your home cinema speaker.

Full HD 3D Blu-ray



Be enthralled by 3D movies in your own living room on a Full HD 3D TV. Active 3D uses the latest generation of fast switching displays for real life depth and realism in full 1080x1920 HD resolution. By watching these images through special glasses with right and left lenses that are timed to open and close in synchrony with alternating images, the full HD 3D viewing experience is created in your home cinema. Premium 3D movie releases on Bluray offer a wide, high quality selection of content. Blu-ray also delivers uncompressed


surround sound for an unbelievably real audio

HDMI for **HD** movies



HDMI is a direct digital connection that can carry digital HD video as well as digital multichannel audio. By eliminating the conversion to analog signals it delivers perfect picture and sound quality, completely free from noise. Movies in standard definition can now be enjoyed in true high definition resolution - ensuring more details and more true-to-life pictures.

Bluetooth wireless streaming

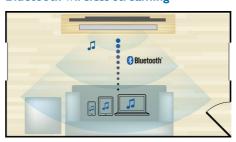


Bluetooth wireless music streaming from your music devices

NFC technology



Pair Bluetooth devices easily with one-touch NFC (Near Field Communications) technology. Just tap the NFC enabled smartphone or tablet on the NFC area of a speaker to turn the speaker on, start Bluetooth pairing, and begin streaming music.

Virtual Surround Sound

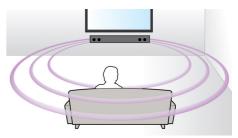

Philips Virtual Surround Sound produces rich and immersive surround sound from less than five-speaker system. Highly advanced spatial algorithms faithfully replicate the sonic characteristics that occur in an ideal 5.1channel environment. Any high quality stereo source is transformed into true-to-life, multichannel surround sound. No need to purchase extra speakers, wires or speaker stands to appreciate room-filling sound.













Blu-ray Soundbar Home theater

2.1 CH Integrated subwoofer Bluetooth® and NFC, HDMI ARC, Blu-ray Disc playback

Specifications

• Included accessories: 2 x AAA Batteries, Quick start guide, Remote Control, Safety & Legal Leaflet, Trademarks Sheet, World Wide Warranty leaflet, Power cord, User Manual

Audio Playback

- · Compression format: AAC, FLAC, MP3, Ogg Vorbis, WAV, WMA
- MP3 bit rates: 32 320kbps

Still Picture Playback

- · Compression format: GIF, JPEG, JPEG HD, JPEG Progressive, PNG
- · Picture Enhancement: Rotate, Zoom

Video Playback

· Compression formats: AVCHD, DivX Plus HD, MPEG1, MPEG2, MPEG4

Optical Playback Media

• Playable Discs: AVCHD, BD, BD R / BD RE, CD, CDDA, CD-R/CD-RW, DVD, DVD +R/+RW, DVD -R/-RW, SVCD, VCD

File Format

- Audio: aac, mka, mp3, wma
- Picture: GIF, JPEG, JPG
- · Video: avi, divx, mkv, mp4, mpeg, mpg, wmv

Connectivity

- · Rear Connections: AUX in, Composite video (CVBS) output, Digital coaxial in, Digital optical in, Ethernet, Fixed FM Antenna, HDMI 1.4 output
- Front / Side connections: Audio in, USB
- Integrated Connections: Bluetooth, NFC
- iPod/iPhone: via bluetooth, via 3.5mm Audio In

Convenience

- EasyLink (HDMI-CEC): Audio Return Channel, Automatic audio input mapping, One touch play, One touch standby, Remote Control-Passthrough, 21:9 format subtitle support, Dynamic Lipsync, System standby
- HDMI Features: 3D, Audio Return Channel (ARC), Content Type, Deep color

Loudspeakers

- Loudspeaker types: Integrated with main unit
- Speaker Drivers per side: 1 Mylar tweeter, 1 woofer
- Tweeter Impedance: 8 ohm
- Subwoofer type: Integrated Subwoofer

Picture/Display

 Picture enhancement: HD (720p, 1080i, 1080p/ 24fps), Progressive scan, Video upscaling

Power

- Power consumption: 40 W
- Standby power consumption: < 0.5 W
- Power supply: 50/60 Hz, 110-240V

Sound

- · Sound Enhancement: Virtual Surround Sound, Treble, Mid and Bass Control, Night Mode
- Sound System: Dolby True HD, DTS Digital Surround
- Subwoofer output power: 40W
- ullet Speaker output power: 20 W x 2
- Total Power RMS @ 10% THD: 80 W

Tuner/Reception/Transmission

- Number of Preset Channels: 40
- Tuner Bands: FM

Dimensions

- Main Unit (W x H x D): 701 x 70x 317 mm
- Main Unit Weight: 6.8 kg
 Packaging (W x H x D): 840 x 135 x 176 mm
- Weight incl. Packaging: 11 kg

Packaging dimensions

- EAN: 87 12581 69987 1
- Packaging dimensions (W x H x D):
- $80 \times 14.4 \times 37.2$ cm
- Gross weight: 9.13 kg
- Nett weight: 7.115 kg
- Number of products included: 1
- · Packaging type: Carton
- · Tare weight: 2.015 kg
- · Type of shelf placement: Laying

Outer Carton

- EAN: 87 12581 69987 1
- · Gross weight: 9.13 kg
- Outer carton (L x W x H): 80 x 37.2 x 14.4 cm
- Nett weight: 7.115 kg
- Number of consumer packagings: 1
- Tare weight: 2.015 kg

Product dimensions

- Product dimensions (W \times H \times D): $70.06 \times 7.8 \times 31$ cm
- · Weight: 6.82 kg



Issue date 2015-09-14

Version: 3.3.5

12 NC: 8670 001 07637 EAN: 08 71258 16998 71 © 2015 Koninklijke Philips N.V. All Rights reserved.

Specifications are subject to change without notice. Trademarks are the property of Koninklijke Philips N.V. or their respective owners.

www.philips.com

- * To check whether Video on Demand is available in your country, please visit www.philips.com/blu-ray.
- * DivX, DivX Certified, and associated logos are trademarks of DivXNetworks, Inc. and are used under license.
- * Dolby and the double-D symbol are registered trademarks of Dolby Laboratories Inc.