



Philips  
Micro music system

**80W**  
Bluetooth® aptX  
NFC



**BT2110**

# Sound that fits your home

Obsessed with sound

Stream high quality music over Bluetooth® with aptX, enhanced by effortless one-touch NFC pairing, plus a digital FM tuner, USB Direct, and Audio-In, all in this Philips music tower. It also comes with a built-in subwoofer for bigger bass.

#### Enjoy your music from multiple sources

- Wireless music streaming via Bluetooth
- USB Direct for easy MP3 music playback
- Audio-in for portable music playback

#### Enrich your sound experience

- 2.1 system with a built-in subwoofer
- Digital Sound Control
- 80W RMS maximum output power

#### Ease of Use

- One-Touch with NFC-enabled smartphones for Bluetooth pairing


#### Design that blends into your interior

- Unique tower design to fit your lifestyle

# PHILIPS


# Highlights

## Wireless music streaming

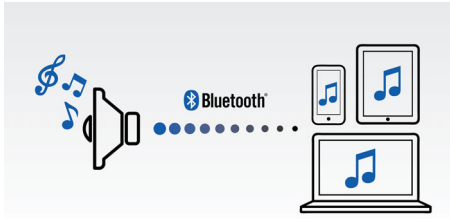

Bluetooth is a short range wireless communication technology that is both robust and energy-efficient. The technology allows easy wireless connection to iPod/iPhone/iPad or other Bluetooth devices, such as smartphones, tablets or even laptops. So you can enjoy your favorite music, sound from video or game wireless on this speaker easily.

## NFC technology

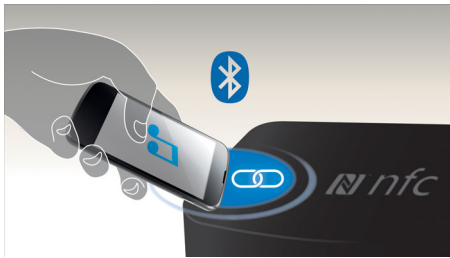

Pair Bluetooth devices easily with one-touch NFC (Near Field Communications) technology. Just tap the NFC enabled

smartphone or tablet on the NFC area of a speaker to turn the speaker on, start Bluetooth pairing, and begin streaming music.

## USB Direct for easy MP3 music



Thanks to the complete file transferability, you can easily enjoy the convenience and fun of accessing more digital music via the built-in USB Direct.

## Audio-in



The Audio in connectivity allows direct playback of Audio in content from portable

media players. Besides the benefit of enjoying your favorite music in the superior sound quality delivered by the audio system, the Audio in is also extremely convenient as all you have to do is to plug your portable MP3 player to the audio system.

## Digital Sound Control

Digital Sound Control offers you a choice of pre-set balanced, clear, powerful, warm and bright controls you can use to optimise the frequency ranges for different musical styles. Each mode uses graphic equalizing technology to automatically adjust the sound balance and enhance the most important sound frequencies in your chosen music style. Ultimately, Digital Sound Control makes it easy for you get the most out of your music by precisely adjusting the sound balance to match the type of music you are playing.

# Specifications

## Sound

- Sound enhancement: digital sound control
- Maximum output power (RMS): 80W

## Loudspeakers

- Speaker drivers: 2 x 2.5" woofer
- Subwoofer drivers: 5" subwoofer

## Audio playback

- USB Direct playback modes: fast backward/fast forward, play/pause, previous/next, repeat, shuffle, stop
- Compatible formats: MP3
- Bluetooth

## Tuner/Reception/Transmission

- Tuner bands: FM mono, FM stereo
- Station presets: 20
- Antenna: FM fixed pigtail antenna
- Tuner enhancement: auto digital tuning, auto scan

## Connectivity

- USB: USB host

- Audio in (3.5mm)
- Bluetooth profiles: A2DP, apt-X
- Bluetooth

## Convenience

- Alarms: Radio Alarm, USB alarm
- Clock: On main display, sleep timer
- Display type: LED display

## Accessories

- Included accessories: AC Power Cord, User Manual
- Remote control: 21-key remote

## Dimensions

- Main unit width: 160 mm
- Main unit height: 209 mm
- Main unit depth: 850 mm
- Gross weight: 12.25 kg
- Net weight: 10.4 kg

## Power

- Power supply: 100-240VAC, 50/60Hz



Issue date 2015-06-02

Version: 1.0.3

12 NC: 8670 001 12865  
EAN: 87 12581 71422 2

© 2015 Koninklijke Philips N.V.  
All Rights reserved.

Specifications are subject to change without notice.  
Trademarks are the property of Koninklijke Philips N.V.  
or their respective owners.

[www.philips.com](http://www.philips.com)