

Philips  
Home theater with  
Ambisound

DVD playback

HTS8141



## Superior surround sound without the clutter

### Bring the cinema home

Indulge in cinema-like multi channel surround sound without speakers and wires all around you. Philips SoundBar with Ambisound incorporates a complete home theater system, including DVD and CD Playback in a single unit.

#### **Superior listening experience**

- Ambisound technology for surround sound from fewer speakers
- DoubleBASS technology for fuller and deeper bass
- Clear Voice for more audible vocals in movies and music
- Fullsound™ to bring your MP3 music to life

#### **Designed to enhance your living space**


- Touch panel for intuitive playback and volume control
- Flexible placement on the wall, tabletop or stand

#### **Connect and enjoy all your entertainment**

- Faroudja DCDi for incredibly sharp high quality video
- Enjoy all your movies and music from CD and DVD
- Dock your iPod for media playback with on-screen control
- Simple to set up with only three cables to connect
- EasyLink to control all HDMI CEC devices via a single remote

# Highlights

## Ambisound technology

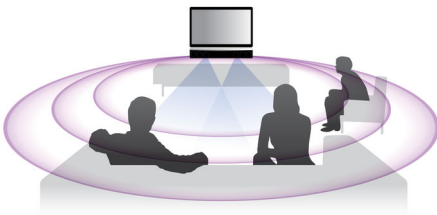

Ambisound technology produces truly embracing multi-channel surround sound from fewer speakers. It delivers an immersive 5.1 sound experience without the constraints of sitting position, room shape or size, and without the clutter of multiple speakers and cables. Through the combined effect of psychoacoustic phenomena, array processing and precisely angled driver positioning, Ambisound delivers more sound from fewer speakers.

## Faroudja DCDi




Enjoy incredibly sharp, high quality video on your progressive scan TV with Faroudja DCDi. The feature alleviates jagged edges that appear when standard interlaced video is viewed, especially with moving images - thus delivering natural-looking action scenes. Bring your viewing experience to the next level with clearer smoother pictures

## DoubleBASS technology



DoubleBASS ensures you hear even the deepest bass tones from compact-sized subwoofers. It captures low frequencies and recreates them in the audible range of the subwoofer - delivering sound with more boom and panache, and ensuring you a full, uncompromised listening experience.

## FullSound™

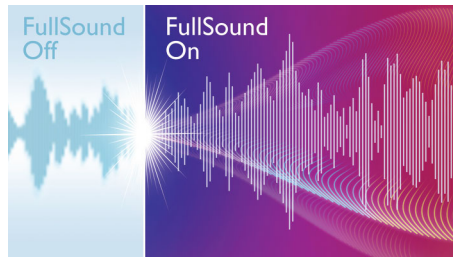


Philips' innovative FullSound technology faithfully restores sonic details to compressed MP3 music, dramatically enriching and enhancing it, so you can experience CD music without any distortion. Based on an audio post-processing algorithm, FullSound combines Philips' renowned expertise in music reproduction with the power of the latest generation Digital Signal Processor (DSP). The result is fuller bass with more depth and impact, boosted voice and instrument clarity, and rich detail. Rediscover your compressed MP3 music in true-to-life sound that will touch your soul and move your feet.

## EasyLink



EasyLink lets you control multiple devices like DVD players, Blu-ray players, soundbar speaker, Home theater and TV's etc. with one remote. It uses HDMI CEC industry-standard protocol to share functionality between devices through the HDMI cable. With one touch of a button, you can operate all your connected HDMI CEC enabled equipment simultaneously. Functions like standby and play can now be carried out with absolute ease.

## Dock your iPod

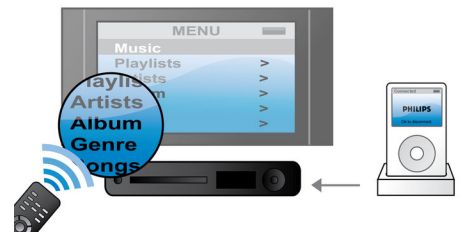

The docking station, included with your home theater system, lets you play movies, music and photos from your iPod. What's more, you can control the iPod and browse through its contents on your TV screen - all with the home theater system's remote. The dock brings portable entertainment into your home - with absolute convenience and ease of use.

# Specifications

## Picture/Display

- Picture enhancement: High Def (720p, 1080i, 1080p), Video upscaling, Faroudja DCDi

## Sound

- Sound System: Ambisound, Dolby Digital, DTS, Dolby Prologic II, Stereo
- Sound Enhancement: Treble and Bass Control, Smart Surround, DoubleBass, ClearVoice
- Equalizer settings: Action, Rock, Concert, Classic, Drama, Jazz, Gaming, Party, News, Sports

## Loudspeakers

- Loudspeaker types: Integrated with main unit
- Speaker Drivers: 2 x 1" Soft Dome tweeters, 6 x 2.5" Full Range woofers
- Speaker impedance: 6 ohm
- Subwoofer type: Active
- Subwoofer driver: 1 x 6.5" Long Throw woofer
- Subwoofer impedance: 4 ohm
- Subwoofer freq range: 35-200 Hz

## Video Playback

- Compression formats: DivX 3.11, DivX 4.x, DivX 5.x, DivX 6.0, DivX Ultra, MPEG1, MPEG2, WMV 9
- Playback Media: DVD-Video, DVD+R/+RW, DVD-R/-RW, Video CD/SVCD, CD-R/CD-RW
- Video disc playback system: PAL, NTSC

## Audio Playback

- Compression format: MP3, WMA
- Playback Media: Audio CD, CD-R/RW, USB flash drive
- MP3 bit rates: 32-256 kbps and VBR

## Still Picture Playback

- Picture Compression Format: JPEG
- Playback Media: CD-R/RW, DVD+R/+RW, USB flash drive
- Picture Enhancement: Slideshow with music

playback, Rotate, Zoom

## Tuner/Reception/Transmission

- Tuner Bands: FM, AM

## Connectivity

- Front / Side connections: Dock connector, USB, MP3 Line-in
- Rear Connections: HDMI output, Component Video output, Composite video (CVBS) output, TV in (audio, cinch), Easy-Fit Speaker Connectors, Interconnect (to Power Box), AUX in
- Subwoofer (Power Box): FM Antenna, AM/MW Antenna, Coaxial Digital input, AUX In (cinch, 2 pairs), Interconnect (to Main Unit), Optical digital input

## Dimensions

- Set dimensions (W x H x D): 1028 x 167 x 155 mm
- Set weight: 9 kg
- Subwoofer dimensions (W x H x D): 322 x 425 x 322 mm
- Subwoofer Weight: 12.7 kg
- Packaging dimensions (W x H x D): 1120 x 388 x 598 mm
- Weight incl. Packaging: 30.5 kg

## Accessories

- Included accessories: Quick start guide, User Manual, Dock for iPod, Remote Control, Batteries for remote control, HDMI cable, CVBS video cable, MP3 Line-in cable, FM antenna, AM antenna, Interconnect cable, Power cord, Wall mounting bracket, World Wide Warranty leaflet

## Power

- Power supply: 100-240VAC, 50/60Hz
- Standby power consumption: <0.3 W



Issue date 2020-07-08

Version: 3.0.4

12 NC: 8670 000 51249  
EAN: 87 12581 47508 6

© 2020 Koninklijke Philips N.V.  
All Rights reserved.

Specifications are subject to change without notice.  
Trademarks are the property of Koninklijke Philips N.V.  
or their respective owners.

[www.philips.com](http://www.philips.com)