



Philips
5.1 Home theater

3D Blu-ray
Smart TV



HTB3510

Powerful cinematic surround sound with deep bass

Pump up your home entertainment experience with the Philips home theater system HTB3510. Exposed speakers drivers offering powerful 1000W with double basepipes and immersive 3D Blu-ray Disc playback.

Designed to enhance your cinema at home

- Modern design to complement your home environment

Great listening experience

- 1000W RMS power delivers great sound for movies and music
- Dolby TrueHD and DTS-HD for high fidelity surround sound
- Powerful speakers with double basspipes for great sound

Simply enjoy all your entertainment

- Audio in to enjoy music from iPod/iPhone/MP3 player
- DivX Plus HD Certified for high definition DivX playback
- EasyLink to control all HDMI CEC devices via a single remote
- Full HD 3D Blu-ray for a truly immersive 3D movie experience
- Turn your Smartphone into a remote for Philips AV products
- Smart TV Plus to enjoy online services & multimedia on TV
- HDMI for high definition movies
- SimplyShare to connect & stream all entertainment wirelessly

PHILIPS
sense and simplicity

Highlights

1000W RMS power




1000W RMS power delivers great sound for movies and music

DivX Plus HD Certified



DivX Plus HD on your Blu-ray player and/or DVD player offers the latest in DivX technology to let you enjoy HD videos and movies from the Internet direct to your Philips HDTV or PC. DivX Plus HD supports the playback of DivX Plus content (H.264 HD video with high-quality AAC audio in an MKV file container) while also supporting previous versions of DivX video up to 1080p. DivX Plus HD for true HD digital video.

Dolby TrueHD and DTS-HD

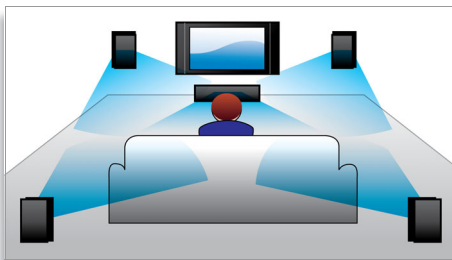

Dolby TrueHD and DTS-HD Master Audio Essential deliver the finest sound from your

Blu-ray Discs. Audio reproduced is virtually indistinguishable from the studio master, so you hear what the creators intended for you to hear. Dolby TrueHD and DTS-HD Master Audio Essential complete your high definition entertainment experience.

Double Bass Sound



Powerful speakers with a bass-reflex system and double basspipes enhance the lower frequencies and deliver rock-solid, deep bass sounds. You'll be able to hear the lowest murmur or the deepest roar.

Full HD 3D Blu-ray



Be enthralled by 3D movies in your own living room on a Full HD 3D TV. Active 3D uses the latest generation of fast switching displays for real life depth and realism in full 1080x1920 HD resolution. By watching these images through special glasses with right and left lenses that are timed to open and close in synchrony with alternating images, the full HD 3D viewing experience is created in your home cinema. Premium 3D movie releases on Blu-ray offer a wide, high quality selection of content. Blu-ray also delivers uncompressed

surround sound for an unbelievably real audio experience.

Philips MyRemote



The Philips MyRemote app lets you use your smartphone or tablet as a remote to control your Philips AV products that are connected to your home Wi-Fi network, and gives you instant control from anywhere in your home. It also comes with useful functions such as SimplyShare to connect and stream all entertainment wirelessly; and MySound to customize your listening preferences.

SimplyShare



Philips SimplyShare lets you share your music, movies & photos from tablet, smartphone & PCs to your home theater & Blu-ray player. You can stream all entertainment directly from your DLNA-enabled devices or use remote control to access & stream media files from your PC. For the best wireless experience, install the SimplyShare app on your tablet/smartphone. You are now ready to enjoy all your entertainment effortlessly.



Specifications

Accessories

- Included accessories: 2 x AAA Batteries, Power cord, Quick start guide, Remote Control, Safety & Legal Leaflet, Trademarks Sheet, World Wide Warranty leaflet, User manual on CD-ROM, HDMI cable

Audio Playback

- Compression format: AAC, FLAC, MP3, Ogg Vorbis, WAV, WMA, Dolby Digital, DTS
- MP3 bit rates: 32 - 320kbps

Still Picture Playback

- Compression format: GIF, JPEG, JPEG HD, JPEG Progressive, PNG
- Picture Enhancement: Rotate, Zoom

Video Playback

- Compression formats: AVCHD, DivX Plus HD, MPEG1, MPEG2, MPEG4, H.264, ISO, WMV 9

Optical Playback Media

- Playable Discs: AVCHD, BD, BD R / BD RE, CD, CDDA, CD-R/CD-RW, DVD, DVD +R/+RW, DVD -R/-RW, SVCD, VCD

File Format

- Audio: aac, mka, mp3, wma
- Picture: GIF, JPEG, JPG
- Video: avi, divx, mkv, mp4, mpeg, mpg, wmv

Connectivity

- Rear Connections: Composite video (CVBS) output, Digital coaxial in, Digital optical in, Easy-Fit Speaker Jacks, Ethernet, HDMI 1.4 output (ARC), Fixed FM Antenna, USB (For VOD/BD-LIVE only)
- Front Connections: Audio in, Hi-Speed USB
- Smart TV: MyRemote, Net TV, SimplyShare, DLNA

Convenience

- EasyLink (HDMI-CEC): Audio Return Channel, Automatic audio input mapping, One touch play, One touch standby, Remote Control-Passthrough, 21:9 format subtitle support, Dynamic Lipsync, System standby
- HDMI Features: 3D, Audio Return Channel (ARC), Content Type, Deep color

Loudspeakers

- Loudspeaker types: 1 x Centre speaker, 4 x Satellite speakers
- Center speaker drivers: 1 x 3" Full range woofer
- Center speaker freq range: 150 - 20k Hz
- Center speaker impedance: 4 ohm
- Drivers per Satellite speaker: 1 x 3" Full range woofer, 1 Tweeter
- Satellite speaker freq range: 150 - 20k Hz
- Satellite speaker impedance: 4 ohm
- Subwoofer type: Passive
- Subwoofer driver: 1 x 8" woofer
- Subwoofer freq range: 20 - 150 Hz
- Subwoofer impedance: 4 ohm

Picture/Display

- Picture enhancement: HD (720p, 1080i, 1080p/24fps), Progressive scan, Video upscaling

Power

- Power consumption: 105 W
- Standby power consumption: < 0.5 W
- Power supply: 220-240V, 50Hz

Sound

- Total Power RMS @ 30% THD: 1000 W
- Equalizer settings: Gaming, Movie, Music, News, Original
- Sound Enhancement: Night Mode, Auto Volume Leveller, Double Bass Sound, Treble and Bass Control
- Sound System: Dolby Digital Plus, Dolby True HD, DTS-HD Master Audio Essential
- Center speaker output power: 166W
- Satellite speaker output power: 4X166W
- Subwoofer output power: 166W

Tuner/Reception/Transmission

- Number of Preset Channels: 40
- Tuner Bands: FM
- RDS: Station Name

Sustainability

- Packaging: Electronic User Manual

Outer Carton

- EAN: 87 12581 67989 7
- Gross weight: 11.22 kg
- Outer carton (L x W x H): 60.8 x 37.4 x 37.8 cm
- Nett weight: 9.9 kg
- Number of consumer packagings: 1
- Tare weight: 1.32 kg

Packaging dimensions

- Packaging dimensions (W x H x D): 37.4 x 60.8 x 37.8 cm
- EAN: 87 12581 67989 7
- Gross weight: 11.22 kg
- Nett weight: 9.9 kg
- Number of products included: 1
- Packaging type: Carton
- Tare weight: 1.32 kg
- Type of shelf placement: Laying

Dimensions

- Center Speaker (W x H x D): 223 x 100 x 80 mm
- Centre Speaker cable length: 2 m
- Front Speaker (W x H x D): 90 x 185 x 82 mm
- Front Speaker cable length: 3 m
- Main Unit (W x H x D): 435X56.3X286.5 mm
- Rear Speaker (W x H x D): 90 x 185 x 82 mm
- Rear Speaker cable length: 10 m
- Subwoofer (W x H x D): 233X365X310 mm
- Subwoofer cable length: 3 m
- Center Speaker Weight: 0.65 kg
- Front Speaker Weight: 0.53 kg
- Rear Speaker Weight: 0.53 kg
- Subwoofer Weight: 3.66 kg



Issue date 2013-04-18

Version: 6.0.5

12 NC: 8670 001 00813
EAN: 87 12581 67989 7

© 2013 Koninklijke Philips Electronics N.V.
All Rights reserved.

Specifications are subject to change without notice.
Trademarks are the property of Koninklijke Philips Electronics N.V. or their respective owners.

www.philips.com

* To check whether Video on Demand is available in your country, please visit www.philips.com/blu-ray.
* DivX, DivX Certified, and associated logos are trademarks of DivX Networks, Inc. and are used under license.
* Dolby and the double-D symbol are registered trademarks of Dolby Laboratories Inc.