



Philips Fidelio Design
collection
SoundSphere DesignLine

Cinematic Virtual surround
Bluetooth® aptX
2 HDMI In & HDMI out ARC



PS1

Feel the emotions of a live performance

Obsessed with sound

Philips SoundSphere Signature speaker offers you a more natural sound reproduction, and a deeper and wider sound impression. Beautiful design statement, suitable for movies and music.

Peerless sound quality

- Best sound companion to Philips DesignLine TV
- SoundSphere floating tweeter for deep wide sound
- Cinematic Virtual Surround for lifelike 3D sound

Exquisite ethereal design and finishing

- Contemporary design and premium finishing
- Speaker enclosure handcrafted from solid wood
- Luxurious piano lacquer finish

Advanced intuitive control

- Bluetooth aptX® for wireless music streaming
- EasyLink controls HDMI-CEC devices on one remote
- HDMI ARC to access all the sound from your TV

PHILIPS
Fidelio

Highlights

Best sound companion



Best sound companion to Philips DesignLine TV

SoundSphere Floating Tweeter



SoundSphere floating tweeter for deep wide sound


Cinematic Virtual Surround

Bring the cinema into your home with Philips Cinematic Virtual Surround. Tuned by Philips sound experts, Cinematic Virtual Surround crafts a deep, all-encompassing sound using less than five speakers. The sonic qualities of a full 5.1 surround system is recreated with a series of highly advanced spatial algorithms, producing a sound that feels as true to life as real surround sound. Any high quality stereo sound can be transformed into true-to-life, multi-channel surround sound, just like you would get in the cinema. All without buying extra speakers, wires or speaker stands.

Contemporary design

Contemporary design and premium finishing

Solid wood speaker enclosure

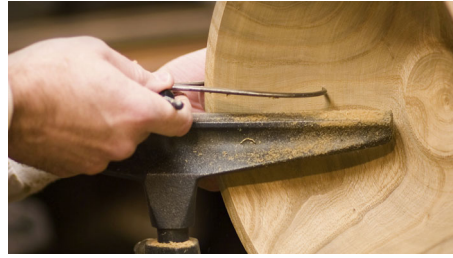

Speaker enclosure handcrafted from solid wood

Luxurious piano lacquer finish



Luxurious piano lacquer finish


HDMI ARC

HDMI ARC to access all the sound from your TV

EasyLink controls devices

EasyLink lets you control multiple devices like DVD players, Blu-ray players, soundbar speaker, Home theater and TV's etc. with one remote. It uses HDMI CEC industry-standard protocol to share functionality between devices through the HDMI cable. With one touch of a button, you can operate all your connected HDMI CEC enabled equipment simultaneously. Functions like standby and play can now be carried out with absolute ease.

Bluetooth aptX®

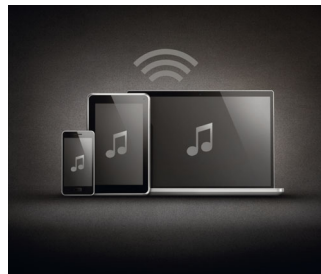

Bluetooth aptX® for wireless music streaming

Specifications

Sound

- Philips Branded feature: SoundSphere
- Equalizer settings: Movie, Music
- Speaker output power: 109dB
- Audio Digital Processing: Cirrus Logic Digital Signal Processor
- Multi-channel audio format: Dolby Digital
- Speaker system output power: 2 x 100W @ 0.1% THD
- System amplifiers: Hypex Class-D Digital Amplifier

Loudspeakers

- Loudspeaker types: 2 x Bass reflex speaker system
- Speaker Frequency Range: (-6dB) 30Hz - 40KHz, (-3dB) 40Hz - 30K Hz
- Enclosure type: Vented System
- Bass driver: 163mm/6.5" concave diaphragm
- High frequency driver: 25mm/1" ring radiator fabric dome
- Cabinet volume: 14 L

Connectivity

- Rear Connections: HDMI 1.4 output (ARC), HDMI IN 1, HDMI IN 2, Audio in (RCA)
- Wireless connections: Bluetooth aptX

Power

- Power supply: 220-240V, 50Hz
- Standby power consumption: <0.5

Accessories

- Included accessories: Power cord, Quick start guide, Remote Control, User Manual, World Wide Warranty leaflet

Packaging dimensions

- Packaging type: Carton
- Number of products included: 1
- Type of shelf placement: Laying
- Packaging dimensions (W x H x D): 102 x 52.5 x 49 cm
- Gross weight: 37 kg
- Nett weight: 30 kg
- Tare weight: 7 kg
- EAN: 87 12581 69156 1

Outer Carton

- Number of consumer packagings: 1
- Outer carton (L x W x H): 102 x 49 x 52.5 cm
- Gross weight: 37 kg
- Nett weight: 30 kg
- Tare weight: 7 kg
- EAN: 87 12581 69156 1

Product dimensions

- Product dimensions (W x H x D): 69.1 x 35.3 x 38.3 cm
- Weight: 28.72 kg
- Product dimensions with stand (W x H x D): 69.22 x 110.62 x 38.3 cm
- Weight (with stand): 28.72 kg



Issue date 2016-06-02

Version: 7.1.7

12 NC: 8670 001 04061
EAN: 08 71258 16915 61

© 2016 Koninklijke Philips N.V.
All Rights reserved.

Specifications are subject to change without notice.
Trademarks are the property of Koninklijke Philips N.V.
or their respective owners.

www.philips.com