

Philips
Mini Hi-Fi System

1300W

Dual subwoofer
Multisource ripping

FWM998



Obsessed with sound

Sass up your music enjoyment on the Philips Mini hi-fi system with 1300W RMS, dual subwoofer for deep bass and cool multi-colored disco lights. Plus music transfer between USB device and SD card and Rip-plus for one-touch MP3 recording.

Powerful sound you can hear and feel

- MAX Sound for instant power boost
- Dual amplifier for better sound performance
- Dual subwoofers for superb deep bass
- 14000W PMPO/ 1300W RMS total power

Enjoy your music from multiple sources

- Play MP3/WMA-CD, CD and CD-RW
- MP3 Link for portable music playback
- USB Direct and SD card slots for MP3/WMA playback
- Rip-plus for one-touch MP3 recording from multiple sources

Easy to use

- 3-disc changer for convenient multi-disc playback
- Connection for TV or DVD player
- Music transfer between SD/ USB for easy music sharing

PHILIPS


Highlights

MAX Sound



MAX Sound technology produces an instant boost in bass, maximizing volume performance and instantly creating the most impressive listening experience with just the touch of a button. Its sophisticated electronic circuitry calibrates existing sound and volume settings, instantly boosting bass and volume to maximum levels without distortion. The end result is a noticeable amplifying of both sound spectrum and volume and a potent audio boost that will add mileage to any music.

Dual amplifier

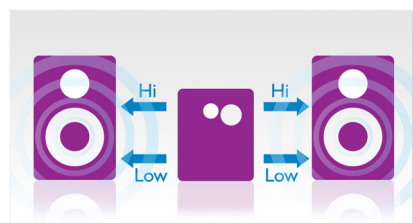

Dual amplifier ensures enhanced sound performance by reducing inter-modulation between the woofer and tweeter, since each transducer is driven by its own dedicated amplifier. The result is deep and powerful bass sounds that have high impact without interfering too much with the higher frequencies so they remain pure and detailed. Utilized in combination with precise, active crossover design, better control on the phase and frequency response of each transducer is achieved, resulting in more balanced and natural sound.

Play MP3/WMA-CD, CD and CD-RW



Audio compression technology allows large digital music files to be reduced up to 10 times in size without radically degrading their audio quality. MP3 or WMA are two of the compression formats that let you enjoy a world of digital music on your Philips player. Download MP3 or WMA songs from authorized music sites on the Internet or create your own MP3 or WMA music files by ripping your audio CDs and transferring them onto your player.

MP3 Link



The MP3 link connectivity allows direct playback of MP3 content from portable media players. Besides the benefit of enjoying your favorite music in the superior sound quality delivered by the audio system, the MP3 link is also extremely convenient as all you have to do is to plug your portable MP3 player to the audio system.

3-disc changer



With a three-disc changer for music playback, you can choose between three different CDs inside the device at any one time. This convenient feature allows you to savor a variety of music while saving you precious time from changing CDs frequently.

Connection for TV/ DVD player

Connection for TV or DVD player


Dual subwoofers

Dual subwoofers for superb deep bass

Music transfer between SD/ USB

You can easily and speedily transfer music from your USB device to your SD card - or vice versa, simply by plugging in the storage devices into the Philips audio system. Conveniently share music with friends or expand your music library with this smart feature - no PC required.

USB Direct and SD card slots

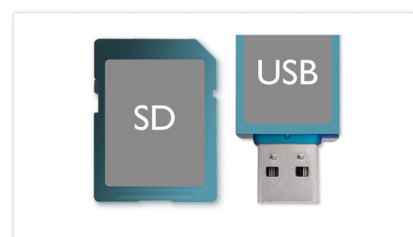

Thanks to the complete file transferability, you can easily enjoy the convenience and fun of accessing more digital music via the built-in USB Direct and SD card slots.

Specifications

Sound

- Output power: 14000W PMPO
- Total Sound Power (RMS): 1300 W
- Sound enhancement: MAX sound, Dynamic Bass Boost 3 steps, incredible surround, digital sound control 4 modes, virtual ambience control

Loudspeakers

- Number of speaker boxes: 6
- Speaker drivers: 8" woofer, 2" tweeter
- Subwoofer types: 10" woofer, passive
- Speaker types: bass reflex speaker system

Audio playback

- Playback media: CD, CD-R, CD-RW, MP3-CD, WMA-CD
- Disc playback modes: repeat/one/all/program, repeat/shuffle/program
- USB Direct playback modes: fast backward/fast forward, play/pause, previous/next, repeat, shuffle, stop
- SD playback modes: fast backward/fast forward, play/pause, previous/next, repeat, shuffle, stop

Audio recording

- Recording media: USB device, SD card
- USB recording sources: CD, tuner, AUX, microphone in, SD
- USB recording modes: instant record, programmed tracks, schedule radio program, single disc, single track
- SD recording sources: CD, tuner, AUX, microphone in, USB
- SD recording modes: instant record, programmed tracks, schedule radio program, single disc, single track

Tuner/Reception/Transmission

- Station presets: 40
- Tuner bands: FM, MW
- Antenna: FM antenna, MW antenna
- Tuner enhancement: auto digital tuning, auto scan, Easy set (plug & play)

Connectivity

- Aux in: 2xRCA (Audio)
- USB: USB host
- MP3 Link: 3.5mm stereo line in
- Microphone: dual microphone sockets
- SD card

Convenience

- Alarms: CD alarm, radio alarm, USB alarm
- Number of discs: 3
- Loader type: 3 CD carousel
- Clock: on main display, sleep timer
- Display enhancements: DIM mode
- Display type: VFD display
- Karaoke: MIC volume, echo control

Accessories

- Remote control: 36-key with 2xAAA batteries
- Cables/Connection: *Flat pin adaptor, MP3 Link cable
- Others: batteries for remote control, FM/MW antenna, Quick start guide
- User Manual: B-Portuguese, Spanish
- Warranty: World Wide Guarantee booklet

Dimensions

- Gross weight: 38 kg
- Main speaker dimensions (W x D): 225 x 275 mm
- Main speaker height: 430 mm
- Main unit depth: 382 mm
- Subwoofer width: 274 mm
- Main unit height: 345 mm
- Subwoofer height: 430 mm
- Main unit width: 265 mm
- Subwoofer depth: 342.3 mm
- Surround speaker width: 142.2 mm
- Surround speaker height: 345 mm
- Surround speaker depth: 171.3 mm
- Packaging depth: 496 mm
- Packaging height: 496 mm
- Packaging width: 1135 mm

Power

- Power supply: 100 - 240V AC, 50/60Hz



Issue date 2014-02-13

Version: 2.0.7

12 NC: 8670 000 59421
EAN: 87 12581 52130 1

© 2014 Koninklijke Philips N.V.
All Rights reserved.

Specifications are subject to change without notice.
Trademarks are the property of Koninklijke Philips N.V.
or their respective owners.

www.philips.com

* Avoid extensive use of the set in a volume higher than 85 decibel
because this may damage your hearing.