

Total immersion in movies and music

You want the high quality surround sound without all the wires running from the front to the back of your room? This stylish and compact full digital home entertainment system with wireless rear speakers plays practically any disc in high quality Dolby, DTS or SACD surround mode.

Superb audio and video performance

- Multi-channel Super Audio CD - closest to experiencing the live performance
- DTS, Dolby Digital 5.1 and Dolby Pro Logic II
- Conical Dome Tweeters for a high frequency response
- 6-channel full digital Class D™ Amplifier

Plays practically any disc format

- Movies: DVD, DVD+R/RW, DVD-R/RW, VCD, SVCD, MPEG-4 and DivX® 3.11/4.x/5.x
- Music: SACD, CD, MP3-CD, CD-R and CD-RW
- Pictures: Picture CD (JPEG) with music (MP3)

Quick, clean and easy set-up

- Wire-less rear speakers - less wires across your room
- 3-step easy set-up to total Home Entertainment
- Color coded Easy-Fit™ connectors



PHILIPS

Technical specifications

Playback formats

- Video: DVD, DVD+R/RW, DVD-R/RW, VCD, SVCD, MPEG-4, DivX® 3.11/4.x/5.x
- Audio: SACD, CD, CD-R/RW, MP3-CD* (MP3*)

- * Plays MP3-CD (supports 32, 56, 64, 96, 128, 256 kbps and variable bit-rate)

DVD functionality

- Multi-angle selection
- Multi-channel, stereo
- Audio selection
- Parental control
- Repeat track/disc/A-B
- Program, resume, zoom, slow

Receiver functionality

- Rock, Digital, Jazz, Classic, Drama, Action, Sci-Fi, Concert
- Dolby Digital, DTS and Dolby Pro Logic II
- Class D™ Amplifier for high quality audio performance

Tuner (radio)

- FM/MW digital tuning with 20 presets and automatic installation
- RDS - station name

Amplifier

- 5 x 45 watts RMS + 75 watts RMS
- 300 watts Total Power

Loudspeaker boxes

- Magnetically shielded front and center
- 4 Two-way satellite speakers (L, R, SL, SR)
 - Frequency range : 120Hz - 20 kHz
 - Impedance : 4Ω (front) 8Ω (rear)
 - Drivers : 3" full-range woofer
1" conical dome tweeter
- Two-way center speakers
 - Frequency range : 120Hz - 20 kHz
 - Impedance : 4Ω
 - Drivers : 2 x 3" full-range woofer
1" conical dome tweeter

- Subwoofer
 - Frequency range : 30Hz - 120Hz
 - Impedance : 4Ω
 - Drivers : 6.5" high efficiency woofer

Wireless system

- For rear speakers
- Frequency : 863.3MHz - 864.5MHz
- Channel : 4 transmission channels selector switch

Connections

- Audio input:
 - Analog : AUX
 - Digital : 1x cinch
 - SCART (audio from TV)
- Audio output:
 - Analog : Line-out (cinch)
 - Digital : 1x cinch
- Video output:
 - CVBS
 - S-Video (Hosiden)
 - SCART (CVBS + RGB)
- Antenna : FM coaxial, MW loop
- Speakers : Easy-Fit™ color connectors

Video performance

- Video decoding : DivX® 3.11/4.x/5.x, MPEG-4/MPEG-2/MPEG-1
- Video format : 4:3/16:9
- Video system : PAL/NTSC
- Video DAC : 108MHz/12bit

Audio performance

- Audio DAC : 24 bit, 192 kHz
- Signal to Noise ratio : >95 dB
- Frequency response : 30Hz - 20kHz

Power supply

- Power requirement : 230V, 50Hz (/00)
240V, 50Hz (/05)
- Power consumption : approx. 80 W
- Standby power : <2W

General

- 45-keys Remote Control
- Local and on-screen display

Product highlights

Multi-channel Super Audio CD

This new generation music format gives you:

- Ultra high quality music reproduction
- 5.1 multi-channel surround sound
- Full backward and forward compatibility with CD

Dolby Pro Logic II

Dolby Pro Logic II provides five channels of surround processing from any stereo source.

Class D™ Amplifier

A Class D™ Amplifier is a 'switching' amplifier that converts a low-level, analog, audio input signal into a high power, digital output for enhanced digital sound quality.

Conical Dome Tweeter

Conical Dome Tweeter uses extremely light and stiff membrane created of LEXAN™, allowing fast vibrations, thus achieving a very high frequency response. This effect is further enhanced through the special cone shape of the membrane. All these result in stunningly clear and crisp highs, and an overall much more balanced sound perception.

DivX® 3.11/4.x/5.x playback


With DivX® support, you will be able to enjoy DivX® encoded videos in the comfort of your living room. The DivX® media format is an MPEG-4 based video compression technology that enables you to save large files like movies, trailers and music videos on media like CD-R/RW, memory cards and DVD-Video, DivX® CDs can be played back on selected DVD players, DVD Recorders and Home Theater Systems.

Wire-less rear speakers

Wire-less rear speakers provide a surround sound entertainment experience without the scattered wires. The system uses interference-free high radio frequencies to transmit audio signals to a receiver stationed at the rear of the room. The in-built amplifier of this receiver supplies the rear satellite speakers with power and sound, so you can enjoy the complete surround sound experience, minus the mess of wires.

Easy-Fit™ connectors

Color-coded connectors provide a simple and user-friendly solution to connect the speakers and subwoofer to the center unit of the home entertainment system simply by plugging the connectors in the matching colored-interface at the rear of the center unit.

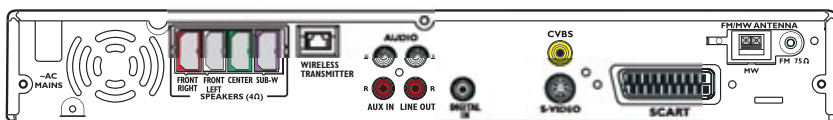

EAN 87 10895 79310 0 (/00)
EAN 87 10895 79311 7 (/05)

Dimensions (w x h x d):
360mm x 55mm x 325mm (DVD system)
92mm x 170mm x 64mm (Surround speaker)
245mm x 92mm x 68mm (Center speaker)
154mm x 361mm x 350mm (Subwoofer)
131mm x 34mm x 130mm (Wireless transmitter)
207mm x 55mm x 186mm (Wireless receiver)
399mm x 412mm x 460mm (Pack/carton)
Weight:
23 kg (Pack/carton)

Bundled equipment:

DVD Receiver System, 2x front satellite speakers, 1x center speaker, 2x surround satellite speakers, 1x passive subwoofer, 1x wireless transmitter, 1x wireless receiver, AC power cable, FM/MW antenna, Remote Control, 2x AA batteries, User manual, Quick Use Guide

Date of issue 2003-12-16 Preliminary

Specifications are subject to change without notice

Trademarks owned by Royal Philips Electronics

2003 © Royal Philips Electronics - All rights reserved

www.philips.com

