



Philips Fidelio SoundHub
2.1 Home theater with
Crystal Clear Sound

3D Blu-ray

Titanium tweeters

SoundHub



HTS9221

Breathtaking clarity of all sound details

Obsessed with sound

Discover Crystal Clear Sound with the new Philips SoundHub home theater 9000 series. The titanium tweeters deliver astonishing clarity of every sound detail. Start enjoying your favorite movies and music as they were meant to be heard.

Discover Crystal Clear Sound

- Crystal Clear Sound for superbly clear and detailed sound
- Titanium tweeters for undistorted sound of superb clarity
- Premium Class D Amplifiers to preserve every sound detail
- Virtual Surround Sound for a realistic movie experience

Designed to enhance your cinema at home

- Unique speakers with exposed tweeter for undisturbed sound
- Lifestyle design in high quality brushed aluminum and glass

Simply enjoy all your entertainment

- Full HD 3D Blu-ray for a truly immersive 3D movie experience
- Built-in dock for convenient playback from your iPod/iPhone
- Built-in WiFi to enjoy your connected media wirelessly
- Smart TV to enjoy online services & access multimedia on TV




PHILIPS
Fidelio

sense **and** simplicity


Highlights

Titanium tweeters

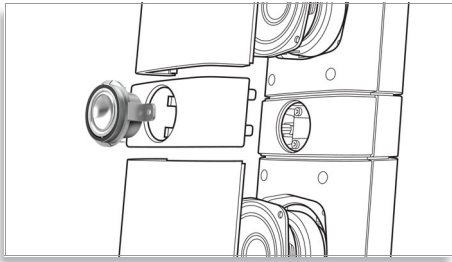

The co-developed tweeters, crafted in titanium, are very rigid and light to guarantee undistorted sound. Their incredible resistance to distortion and resonance through the whole audible frequency range guarantees superb clarity of all sound details.

Premium Class D Amplifiers

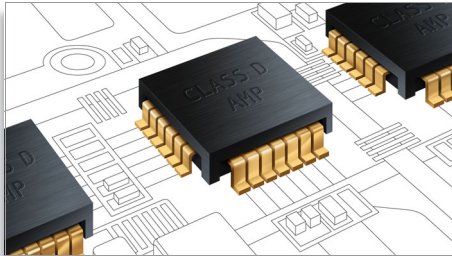

The Philips proprietary Premium Class-D Amplifiers are designed to preserve the original sound source for greater audio signal accuracy, thus allowing acoustic details in music and movies to be delivered exactly as the artist or director intended.


Full HD 3D Blu-ray



Be enthralled by 3D movies in your own living room on a Full HD 3D TV. Active 3D uses the latest generation of fast switching displays for real life depth and realism in full 1080x1920 HD resolution. By watching these images through special glasses with right and left lenses that are timed to open and close in

synchrony with alternating images, the full HD 3D viewing experience is created in your home cinema. Premium 3D movie releases on Blu-ray offer a wide, high quality selection of content. Blu-ray also delivers uncompressed surround sound for an unbelievably real audio experience.

Built-in dock for iPod/iPhone

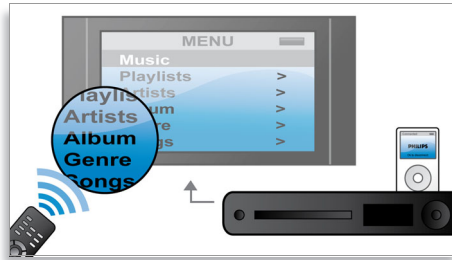

A built-in dock for iPod/iPhone lets you play movies, music and photos from your iPod/iPhone. What's more, you can charge and control the iPod/iPhone and browse through its contents on your TV screen - all with the home theater's remote. Doing away with cumbersome cables and connections, the integrated dock brings portable entertainment into your home - with absolute ease.


Smart TV



Philips home theater systems with Smart TV offer you an array of enhanced features, including Net TV, DLNA and MyRemote. Net TV brings a wide range of online information and entertainment to your TV. Simply select Net TV in the Home Menu and to start browsing for services like, video-on-demand stores* for the latest releases in HD, and Catch-up TV. With DLNA, you can access photos, music and movies stored on your PC


from the comfort of your couch. Can't find the remote control? Simply use your smart phone or tablet PC to control your home theater via the Philips MyRemote app.

Virtual Surround Sound

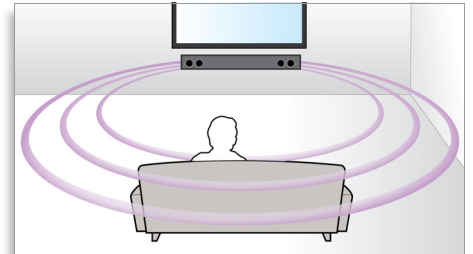

Philips Virtual Surround Sound produces rich and immersive surround sound from less than five-speaker system. Highly advanced spatial algorithms faithfully replicate the sonic characteristics that occur in an ideal 5.1-channel environment. Any high quality stereo source is transformed into true-to-life, multi-channel surround sound. No need to purchase extra speakers, wires or speaker stands to appreciate room-filling sound.

Exposed tweeter

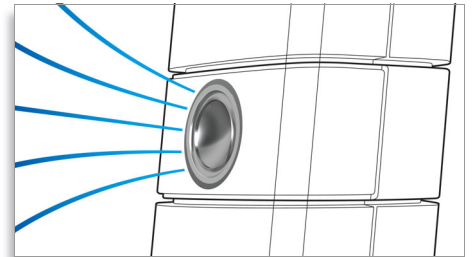

Unique speakers designed with exposed tweeters to give maximum dispersion and openness in the sound.

Lifestyle design



Lifestyle design in high quality brushed aluminum and glass

Specifications

Sound

- Equalizer settings: Gaming, Movie, Music, News, Original
- Sound Enhancement: Dialog Enhancer, DoubleBass, FullSound, Night Mode, Treble, Mid and Bass Control
- Sound System: Dolby Digital 5.1, Dolby Digital Plus, Dolby True HD, DTS Digital Surround, DTS-HD High Resolution Audio
- Satellite speaker output power: 135 W x2
- Subwoofer output power: 230 W
- Total Power RMS @ 30% THD: 500 W

Loudspeakers

- Loudspeaker types: 2 x Satellite speakers
- Drivers per Satellite speaker: 1 x 1" Titanium tweeter, 2 x 3" Full range woofers
- Satellite speaker impedance: 5 ohm
- Satellite speaker freq range: 150 - 20k Hz
- Subwoofer type: Active
- Subwoofer driver: 1 x 6.5" woofer
- Subwoofer freq range: 20 - 150 Hz
- Subwoofer impedance: 3 ohm

Connectivity

- Front / Side connections: Music iLINK, USB
- Integrated Connections: Dock for iPod/iPhone, Wi-Fi
- Rear Connections: AUX IN 1, AUX IN 2, Composite video (CVBS) output, Digital coaxial in, Digital optical in, Ethernet, FM Antenna Socket, HDMI 1.4 output (ARC), Mini Easy-Fit Speaker Jacks, SD/SDHC Card slot, Subwoofer out
- Smart TV: DLNA, MyRemote, Net TV

Convenience

- EasyLink (HDMI-CEC): 21:9 format subtitle support, Audio Return Channel, Automatic audio input mapping, Dynamic Lipsync, One touch play, One touch standby, Remote Control-Passthrough
- HDMI Features: 3D, Audio Return Channel (ARC), Content Type, Deep color

Tuner/Reception/Transmission

- RDS: Station Name
- Tuner Bands: FM
- Number of Preset Channels: 40

Optical Playback Media

- Playable Discs: AVCHD, BD, BD R / BD RE, CD, CDDA, CD-R/CD-RW, DVD, DVD +R/+RW, DVD -R/-RW, SVCD, VCD

File Format

- Audio: aac, mka, mp3, wav, wma
- Picture: GIF, JPEG, JPG
- Video: asf, avi, divx, mkv, mp4, mpeg, mpg, wmv

Audio Playback

- Compression format: AAC, MP3, WAV, WMA
- MP3 bit rates: 32 - 320kbps

Video Playback

- Compression formats: AVCHD, DivX Plus HD, MPEG1, MPEG2, MPEG4, WMV HD, WMV SD

Still Picture Playback

- Compression format: GIF, JPEG, JPEG HD, JPEG Progressive, PNG
- Picture Enhancement: Rotate, Slideshow with music playback, Zoom

Picture/Display

- Picture enhancement: HD (720p, 1080i, 1080p/24fps), Progressive scan, Video upscaling

Power

- Power consumption: 135 W
- Power supply: 110-127V / 220-240V, ~50-60Hz
- Standby power consumption: < 0.5 W

Sustainability

- Packaging: 80% recycled corrugated board, Electronic User Manual, No polyfoam, Soya based ink

Dimensions

- Main Unit (W x H x D): 307 x 66 x 304 mm
- Main Unit Weight: 3.87 kg
- Satellite Speaker (W x H x D): 131 x 334 x 99 mm
- Satellite Speaker Weight: 1.2 kg
- Satellite Speaker Cable length: 3 m
- Subwoofer (W x H x D): 196 x 397 x 342 mm
- Subwoofer Weight: 5.3 kg
- Subwoofer cable length: 3 m
- Packaging (W x H x D): 570 x 413 x 400 mm
- Weight incl. Packaging: 16.6 kg

Accessories

- Included accessories: 2 x AAA Batteries, FM antenna, HDMI cable, Power cord, Quick start guide, Remote Control, Safety & Legal Leaflet, Trademarks Sheet, World Wide Warranty leaflet



Issue date 2013-02-12

Version: 7.2.5

12 NC: 8670 000 71831
EAN: 87 12581 58165 7

© 2013 Koninklijke Philips Electronics N.V.
All Rights reserved.

Specifications are subject to change without notice.
Trademarks are the property of Koninklijke Philips Electronics N.V. or their respective owners.

www.philips.com



* To check whether Video on Demand is available in your country, please visit www.philips.com/blu-ray.