

Philips  
DVD player



DVP3007



## See, hear, play everything

Does size matter? Ever heard of less is more? Introducing the best value DVD player. No complications! Just a simple set that plays practically any disc format, including your digital photos with absolutely no compromise to picture quality.

### Great audio and video performance

- Progressive Scan component video for optimized image quality
- 12-bit/108MHz video processing for sharp, natural images
- High quality outputs for analog and digital audio

### Plays it all

- Movies: DVD, DVD+R/RW, DVD-R/RW, (S)VCD
- Music: CD, CD-R/RW and MP3-CD
- Photos: Picture CD (JPEG)

### Fits everywhere, goes anywhere


- Compact design
- Ultra-slim design

# PHILIPS

sense and simplicity


# Highlights

## Progressive Scan

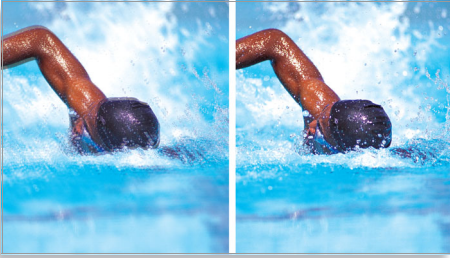


Progressive Scan doubles the vertical resolution of the image resulting in a noticeably sharper picture. Instead of sending a field comprising the odd lines to the screen first, followed by the field with the even lines, both fields are written at one time. A full image is created instantaneously, using the maximum resolution. At such a speed, your eye perceives a sharper picture with no line structure.

## 12-bit/108MHz video DAC

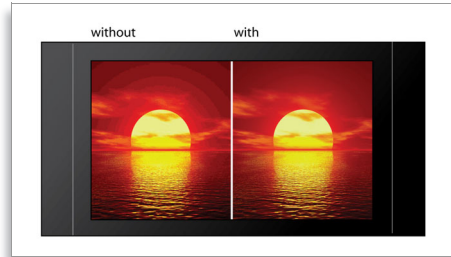

12-bit Video DAC is a superior Digital-to-Analogue-Converter that preserves every detail of the authentic picture quality. It shows subtle shades and smoother graduation of colors, resulting in a more vibrant and natural picture. The limitation of the usual 10bit DAC become in particular apparent while using large screens and projectors.

## Analog & digital audio outputs

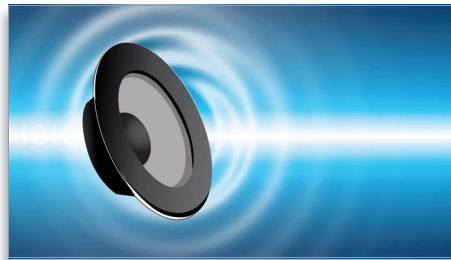

High quality outputs for analog and digital audio

## Multi-format Movies

Multi-format playability allows you to play most disc formats for maximum disc compatibility and viewing pleasure.

## Multi-format Music

Multi-format playability allows you to play most disc formats for maximum disc compatibility and listening pleasure.

## Picture CD (JPEG)

Multi-format playability allows you to view images in the comfort of your living room and play most disc formats for maximum disc compatibility and viewing pleasure.

## Compact design

Compact design

## Ultra-slim design

The attractive enclosure has a very low profile.



12-bit  
Video DAC



# Specifications

## Picture/Display

- Aspect ratio: 16:9, 4:3
- D/A converter: 12 bit, 108 MHz
- Picture enhancement: Progressive Scan, Smart Picture Setting

## Sound

- D/A converter: 192kHz/24-bit
- Signal to noise ratio: 95 dB
- Distortion and Noise (1kHz): 80 dB
- Crosstalk (1kHz): 90 dB
- Dynamic Range (1kHz): 85 dB
- Sound System: Dolby Digital
- Sound Enhancement: Night Mode, Smart Sound

## Video Playback

- Playback Media: CD, CD-R, CD-R/CD-RW, Video CD/SVCD, DVD+R, DVD+RW, DVD-R, DVD-RW (Video mode), DVD-Video
- Compression formats: MPEG1, MPEG2
- Video disc playback system: NTSC, PAL

## Audio Playback

- Playback Media: CD, CD-R, CD-RW, MP3-CD
- Compression format: PCM, MP3
- MP3 bit rates: 32 - 256 kbps

## Still Picture Playback

- Playback Media: Picture CD, DVD+R/+RW
- Picture Compression Format: JPEG
- Picture Enhancement: Rotate, Slideshow, Zoom,

Flip photos

## Connectivity

- Other connections: ComponentVideo out Progressive, Composite video (CVBS) out, Analog audio Multi-channel, Digital coaxial out

## Convenience

- Child Protection: Parental Control, Child Lock
- On-Screen Display languages: English, Hindi

## Power

- Power supply: 50/60 Hz, 110-240V
- Power consumption: 10 W
- Standby power consumption: < 0.8 W

## Accessories

- Batteries: 2 x AA
- Cables: 1 x AV Cables
- Remote control: 3141 017 90221
- User Manual: English, Hindi
- Warranty Card

## Dimensions

- Set dimensions (W x H x D): 360 x 37 x 265 mm
- Set weight: 1.98 kg
- Packaging dimensions (W x H x D): 415 x 82 x 352 mm
- Weight incl. Packaging: 2.98 kg



Issue date 2009-08-09

Version: 2.0.4

12 NC: 8622 810 12805  
EAN: 87 10895 91476 5

© 2009 Koninklijke Philips Electronics N.V.  
All Rights reserved.

Specifications are subject to change without notice.  
Trademarks are the property of Koninklijke Philips Electronics N.V. or their respective owners.

[www.philips.com](http://www.philips.com)