



Philips  
docking speaker with  
Bluetooth®

for Android



AS851

## Free your music and charge your Android phone

with this docking speaker

Dock your Android powered phone and enjoy the sound quality of this stylish Philips AS851/10 docking speaker. Digital sound processing for pure silence and crystal-clear sound while Songbird lets you sync music between your phone and PC

### Exceptional sound performance

- Bluetooth music streaming from Android powered device
- Digital Sound Processing for lifelike sound without distortion
- Optimal acoustic volume to match speakers' requirements
- Precisely tuned bass pipes for deep, tight bass reproduction

### Chic and classy

- Smartly designed FlexiDock to fit/charge Android phone
- Sensually curved back for elegance and precise sound

### Advanced intuitive control

- Discover, share music and more features via DockStudio app
- Songbird to discover, play and sync music between your PC and Android
- Charge your second mobile device via USB
- Remote control complements speaker design and finishing

# PHILIPS

# Highlights

## FlexiDock



The Philips FlexiDock is perfect for Android powered phones. Its unique design cleverly docks most Android powered phones - whether the phone's connection socket is at the bottom, on the side or even on the top. This extreme flexibility is the first of its kind, catering to Android powered phones that are made by different manufacturers with no standardised position and orientation for the micro USB connection socket. The dock is also adjustable to hold the phone in both portrait and landscape positions, letting you position your Android powered phone at the centre of the speaker.

## DockStudio app for Android



The free Philips DockStudio app brings a myriad of unique features to your docking speakers. You can listen to thousands of Internet radio stations worldwide, browse your music collection and share what you are listening to with friends via Facebook, or photos of the artist on Flickr. The app comes with Songbird music function, so you can discover, play and sync media seamlessly


between PC and Android powered devices. In Clock mode, the app lets you set multiple customised music alarms and gives updated weather reports. Completely free, the app can be downloaded from Google play.

## Bluetooth music streaming



Listen to all your favourite songs on a speaker that delivers fabulous sound. This Philips docking speaker plays music from your Android-powered devices via Bluetooth. Simply download the free Philips DockStudio app and the Bluetooth will automatically be turned on and connect once your device is docked. You get to enjoy powerful and outstanding sound, with unbeatable convenience. Hardly anything else sounds as good.

## Songbird music network

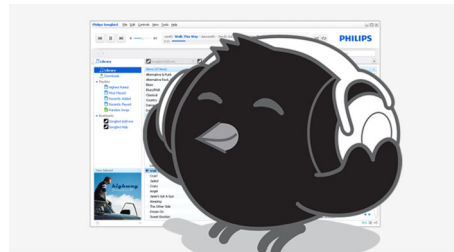


Songbird is a simple, easy-to-use PC program and Android app. It lets you discover and play all your media and sync it seamlessly with your PC. Its intuitive and powerful music management features let you discover new artists and music styles directly in the program

through music and media shops, services and websites. Play your own library and media from the Internet and seamlessly sync all of it from your PC to your Android devices.

## Curved back for better sound

The clean lines and sensuality of the curved back cover not only looks fabulous – it also creates a more effective structure for acoustics. Carefully designed, the curve increases the stiffness of the speaker cabinet, dramatically reducing internal resonance and resulting in more precise and natural sound reproduction. You get to enjoy both lovely looking speakers and sensational sound.

## Digital Sound Processing

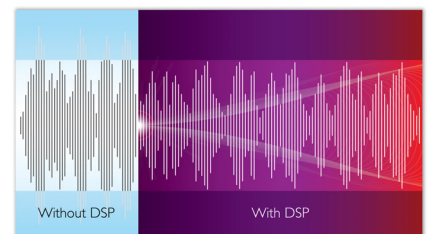

Advanced sound processing technology enhances the reproduction of your music so that each note resonates with crystal-clear accuracy, and each pause is sealed with pristine silence. Philips' proprietary Digital Sound Processing technology optimises the performance of compact speaker boxes, delivering sound that is clear, detailed and powerful without any distortion.

# Specifications

## Android device compatibility

- Android version 2.1 or above
- Bluetooth version 2.1 or above
- Micro USB
- Check out: [www.philips.com/FlexiDock](http://www.philips.com/FlexiDock) for more details and the latest compatibility information

## DockStudio App for Android

- App name: DockStudio, Free download from Android Market
- Compatibility: Philips docking speaker for Android
- Music playback: Songbird Android App
- Bluetooth connection: between Android phone and docking speaker. Fully automatic connection when docked
- Internet radio: Tuneln with over 7000 stations
- Sound settings: 5 band equalizer, DBB, DSC-Flat, Pop, Rock, Jazz, Classic
- Clock: Analogue display, Digital display
- Alarm: Multiple alarms, Sleep timer, Wake up to music, Wake up to nature sounds, Wake up to photos

## Sound

- Output power (RMS): 2 x 15 W
- Sound System: Stereo
- Loudspeaker types: Bass Reflex Speaker System
- Volume Control: Volume Control up/down

## Audio Playback

- Cradle playback mode: Play and Pause, Next and Previous track, Charging Android phone

## Loudspeakers

- Speaker Drivers: 2 x 3" full range woofers

## Convenience

- Backlight
- Remote Control: Multi-functional

## Connectivity

- Bluetooth version: 2.1
- Bluetooth profiles: A2DP, AVRCP, SPP
- Bluetooth range: line of sight, 10 m or 30 ft
- Aux in

## Accessories

- Included accessories: AC Power Cord, Remote Control, 3.5 mm stereo line-in cable, Warranty certificate, World Wide Warranty leaflet, Quick install guide, User Manual

## Dimensions

- Product dimensions (W x H x D):  
421 x 157 x 140 mm

## Power

- Power supply: 100-240 VAC, 50/60 Hz



Issue date 2017-04-05

Version: 6.2.5

12 NC: 8670 000 81554  
EAN: 87 12581 61952 7

© 2017 Koninklijke Philips N.V.  
All Rights reserved.

Specifications are subject to change without notice.  
Trademarks are the property of Koninklijke Philips N.V.  
or their respective owners.

[www.philips.com](http://www.philips.com)