

Quick Start Guide



What's in the Box?

You should find these items upon opening the box.


Step A Connect

Step B Setup

Step C Enjoy



Remote control

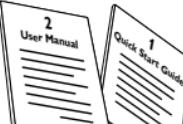

User Manual
Quick Start Guide



AC power adaptor



1 x MP3 link cable




1 x Mini USB cable

PHILIPS

Step A Connect

1

Connect the AC power adaptor to the DC350 and the wall socket.

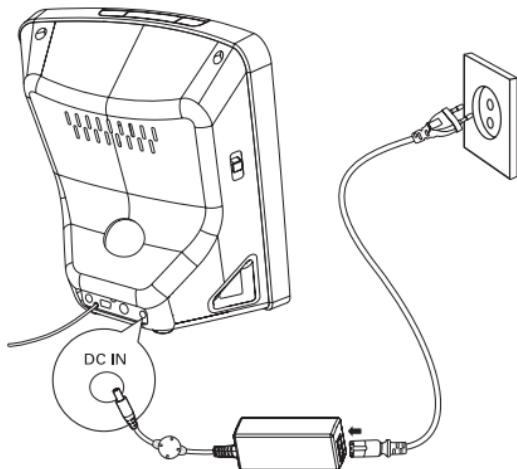

Step B Setup

Set clock and date

1

Press and hold **SET TIME** for 2 seconds.

2

Press **▶▷** repeatedly to select 12 hour or 24 hour format.

3

Press **SET TIME** to confirm.

→ The hour digits are displayed and begin to blink.

4

Press **◀◀/▶▶** to set the hour.

5

Press **SET TIME** to confirm.

→ The minute digits are displayed and begin to blink.

6

Repeat steps 4-5 to set minute, year, month and day.



Step C | Enjoy

Play from iPod/iPhone

1

With the connectors facing each other, place the iPod/iPhone in the dock.

2

Turn the tilt adjustment control to adjust the angle at which the iPod/iPhone tilts.

→ When the DC350 is connected to power, the docked iPod/iPhone begins to charge.



3

Press **iPod/iPhone** to select iPod/iPhone source.

→ The connected iPod/iPhone plays automatically.

Listen to radio

1

Press **TUNER** to select FM.

2

Press and hold **◀▶** for more than 2 seconds.

→ The radio tunes to a station with strong reception automatically.

3

Press and hold **PROG** for 2 seconds to activate program mode.

→ "PR01" blinks on the display.

4

Press **PRESET +/-** to allocate a number (1 to 40) to this radio station, then press **PROG** to confirm.

5

Repeat the steps 2-4 to program other stations.

6

Press **PRESET +/-** to select a preset number.

Step C | Enjoy

Use Bluetooth devices

Note:

The operational range between this DC350 and a bluetooth device is approximate 10 meters (30 feet).

Connect a device for the first time

1

Press **BLUETOOTH** to select the Bluetooth source.

→ [BT] (Bluetooth) is displayed.

2

Press and hold **PAIRING** for more than 3 seconds.

→ [PAIRING] (Pairing) is displayed, and the Bluetooth indicator blinks.

3

On the device, set up the Bluetooth connection:

→ Enable Bluetooth to search for other Bluetooth devices. (Refer to the user manual on how to enable the function.)

→ When “PHILIPS DC350” is recognized and displayed, select it to start to connect.

→ When prompted for a password, enter “0000”.

4

Wait until you hear a double beep from the DC350.

→ The connection is completed, and the Bluetooth indicator turns on.

Receive a phone call

Note:

You can receive phone calls through this DC350 with devices that support the HFP or HSP profile.

1

Connect the Bluetooth device.

Step C | Enjoy

2

When a call is received, you hear the incoming call alert tone. Press **PAIRING** to accept the call.
→ To reject the call, press .

3

Speak into the **MIC** located on the front panel.
→ To select to hear the audio from the device or from the DC350, press **PAIRING**.

4

Press to end the call.

Listen to music

Note:

You can listen to audio through this DC350 from devices that support A2DP or AVRCP.

1

Connect the Bluetooth device.

2

On the Bluetooth device, start play.
→ You hear the music through this DC350.

Tip:

Refer to the supplied user manual for more details.



© Royal Philips Electronics N.V. 2008
All rights reserved.

<http://www.philips.com>



PDCC-JH/ZYL-0845