




Philips  
wireless portable speaker

Bluetooth® aptX, AAC and NFC

USB port for charging  
Built-in microphone for calls  
20W, rechargeable battery

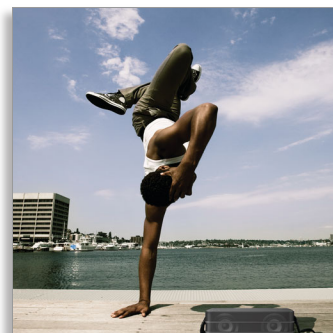

SB8600

## Powerful · Ground-breaking · Transportable

The Philips SHOQBOX XL delivers phenomenal sound big enough to fill any space. The SB8600 supports easy wireless streaming over Bluetooth, and even comes with a strap for convenient carrying.

### Sound that blows you away

- Digital Sound Processing for lifelike, distortion-less music
- Bass Reflex Speaker System delivers a powerful, deeper bass
- 2 selectable sound settings tuned for Outdoor and Indoor use
- Outdoor mode for bigger and louder music
- Indoor mode for deep bass and clarity for high quality sound

### Advanced intuitive control

- One-Touch with NFC-enabled smartphones for Bluetooth pairing
- Wireless music streaming via Bluetooth
- High fidelity Bluetooth® (aptX® and AAC) music streaming

### Easy to use

- USB port for charging other devices
- Built-in microphone for speaker phone conversation
- Comes with a strap for you to carry around
- Built-in rechargeable battery for even better portability


# PHILIPS

wireless portable speaker

Bluetooth® aptX, AAC and NFC USB port for charging, Built-in microphone for calls, 20W, rechargeable battery


# Highlights

## NFC technology

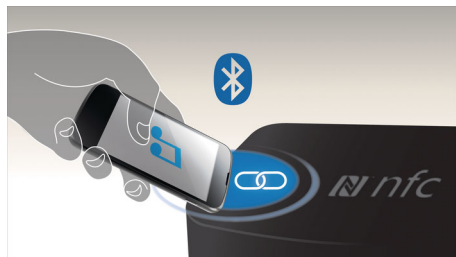

Pair Bluetooth devices easily with one-touch NFC (Near Field Communications) technology. Just tap the NFC enabled smartphone or tablet on the NFC area of a speaker to turn the speaker on, start Bluetooth pairing, and begin streaming music.

## Wireless music streaming

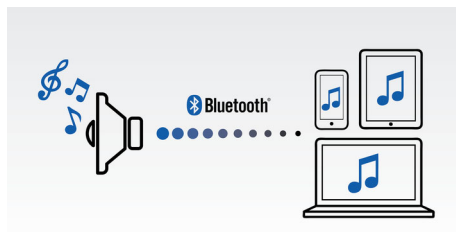


Bluetooth is a short range wireless communication technology that is both robust and energy-efficient. The technology allows easy wireless connection to iPod/iPhone/iPad or other Bluetooth devices, such as smartphones, tablets or even laptops. So you can enjoy your favorite music, sound from video or game wireless on this speaker easily.

## High fidelity Bluetooth®



With advanced technology, sound streamed via Bluetooth® is brought to the next level. Standard Bluetooth® audio uses SBC codec that is built for basic audio transmission, leaving listeners sometimes disappointed and dissatisfied. The Philips speaker, however, is armed with high fidelity (aptX® and AAC) Bluetooth® wireless technology – giving you rich, powerful and crystal clear sound. Compatible with both latest Android™ and Apple iOS smartphones, tablets and other devices, Philips now delivers the audio quality you have come to expect. Wireless music never sounded this good.

## Digital Sound Processing

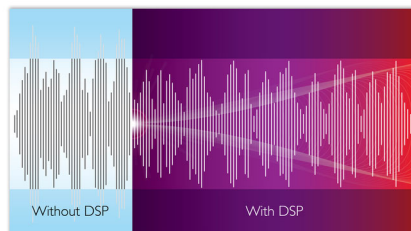

Advanced sound processing technology enhances the reproduction of your music so that each note resonates with crystal-clear accuracy, and each pause is sealed with pristine silence. Philips' proprietary Digital Sound Processing technology optimizes the performance of compact speaker boxes, delivering sound that is clear, detailed and powerful without any distortion.

SB8600/10

## 2 selectable sound settings

Two sound settings designed for your convenience and greater versatility, indoor mode and outdoor mode. Use Indoor mode when you want strong bass and crystal clear sound and Outdoor mode when you need maximum loudness and power in the open air.

## Bass Reflex Speaker System

Bass Reflex Speaker System delivers a deep bass experience from a compact loudspeaker box system. It differs from a conventional loudspeaker box system in the addition of a bass pipe that is acoustically aligned to the woofer to optimize the low frequency roll-off of the system. The result is deeper controlled bass and lower distortion. The system works by resonating the air mass in the bass pipe to vibrate like a conventional woofer. Combined with the response of the woofer, the system extends the overall low frequency sounds to create a whole new dimension of deep bass.

## Built-in microphone

Built-in microphone for speaker phone conversation

## AUDIO-IN (3.5mm)



Make one easy connection and enjoy all your music from portable devices and computers. Simply plug your device to the AUDIO-IN (3.5 mm) port on your Philips set. With computers, the connection is typically made from the headset output. Once linked, you can enjoy your entire music collection directly, on a set of superior speakers. Philips simply delivers better sound.



wireless portable speaker

Bluetooth® aptX, AAC and NFC USB port for charging, Built-in microphone for calls, 20W, rechargeable battery

SB8600/10

# Specifications

## Compatibility

- iPad: iPad 1, iPad 2, new iPad, iPad mini, iPad with Retina display
- iPhone: iPhone 3, iPhone 3GS, iPhone 4, iPhone 4S, iPhone 5
- iPod touch: 3rd generation or later
- Android tablets & smartphones: with Android 2.1 and Bluetooth 2.1 or above
- work with: Bluetooth 4.0 or below
- other Bluetooth-enabled device

## Connectivity

- NFC: for easy Bluetooth pairing with NFC-enabled Android phones
- Bluetooth profiles: A2DP, AVRCP, HFP
- Bluetooth range: Line of sight, 10M or 30FT
- Audio in (3.5mm)

## Convenience

- Built-in microphone: for speaker conference

## Sound

- Output power (RMS): 2 x 10W
- Sound System: Stereo
- Volume control: up/down

## Loudspeakers

- Speaker drivers: 2 x 3"

## Accessories

- Included accessories: AC Power Cord, carrying strap, Quick install guide, Warranty certificate, World Wide Warranty leaflet

## Power

- Power supply: 100-240VAC, 50/60Hz
- Battery type: Lithium-ion (built-in)
- Operating time on battery: 8 hr



Issue date 2020-07-08

Version: 1.0.6

12 NC: 8670 001 06177  
EAN: 87 12581 69651 1

© 2020 Koninklijke Philips N.V.  
All Rights reserved.

Specifications are subject to change without notice.  
Trademarks are the property of Koninklijke Philips N.V.  
or their respective owners.

[www.philips.com](http://www.philips.com)