



Philips
Blu-ray Disc/DVD player

Netflix and YouTube

USB2.0 Media Link
DVD video upscaling
Built-in Wi-Fi

BDP2205



Enjoy wireless online entertainment

with Netflix and YouTube

With the BDP2205, movies have never looked better. Incredibly sharp images in full HD 1080p are delivered from Blu-ray discs, and DVD upscaling offers near-HD video quality. Enjoy the best of the Internet on your TV with Netflix and YouTube.

See more

- Blu-ray Disc playback for sharp images in full HD 1080p
- DivX Plus HD Certified for high-definition DivX playback
- Netflix-Streaming TV Episodes and Movies over the Internet
- DVD video upscaling to 1080p via HDMI for near-HD images
- Subtitle Shift for widescreen without any missing subtitles
- Access your favourite YouTube videos and Picasa photos easily

Hear more

- Dolby TrueHD for high fidelity sound

Engage more

- USB 2.0 plays video/music from USB flash/hard disk drive
- Built-in Wi-Fi-n for faster, wider wireless performance
- EasyLink to control all HDMI CEC devices via a single remote
- BD-Live (Profile 2.0) to enjoy online Blu-ray bonus content

PHILIPS

Highlights

Blu-ray Disc playback




Blu-ray Discs have the capacity to carry high definition data, along with pictures in the 1920 x 1080 resolution that defines full high definition images. Scenes come to life as details leap at you, movements smoothen and images turn crystal clear. Blu-ray also delivers uncompressed surround sound — so your audio experience becomes unbelievably real. The high storage capacity of Blu-ray Discs also allows a host of interactive possibilities to be built in. Seamless navigation during playback and other exciting features such as pop-up menus bring a whole new dimension to home entertainment.

DVD video upscaling



HDMI 1080p upscaling delivers images that are crystal clear. DVD movies in standard definition can now be enjoyed in high definition resolution - ensuring more details and more true-to-life pictures. Progressive Scan (represented by "p" in "1080p") eliminates the line structure prevalent on TV screens, again ensuring relentlessly sharp images. To top it off, HDMI makes a direct digital connection that can carry uncompressed digital HD video as well as digital multi-channel audio, without conversions to analogue - delivering perfect picture and sound quality, completely free from noise.

Dolby TrueHD

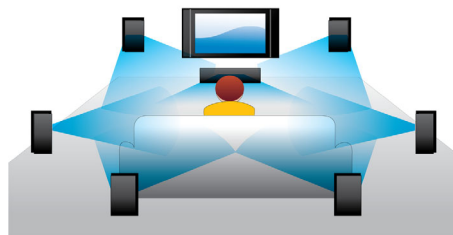

Dolby TrueHD delivers the finest sound from your Blu-ray Discs. Audio reproduced is virtually indistinguishable from the studio master, so you hear what the creators intended for you to hear. Dolby TrueHD completes your high definition entertainment experience.

Wi-Fi-n



Wi-Fi-n, also known as IEEE 802.11n, is the new wireless network standard. It includes many new options to improve the quality of the wireless link, offering faster speed and wider range compared to previous Wi-Fi standards. Wi-Fi-n also features backwards compatibility, which makes it possible for this player to transmit to and receive from routers that operate on older Wi-Fi standards.

EasyLink

EasyLink lets you control multiple devices like DVD players, Blu-ray players, soundbar speakers, Home theatre systems and TVs etc. with one remote. It uses HDMI CEC industry-standard protocol to share functionality between devices through the HDMI cable. With one touch of a button, you can operate all your connected HDMI CEC-enabled equipment simultaneously. Functions like standby and play can now be carried out with absolute ease.

DivX Plus HD Certified



DivX Plus HD on your Blu-ray player and/or DVD player offers the latest in DivX technology to let you enjoy HD videos and movies from the Internet directly on your Philips HDTV or PC. DivX Plus HD supports the playback of DivX Plus content (H.264 HD video with high-quality AAC audio in an MKV file container) while also supporting previous versions of DivX video up to 1080p. DivX Plus HD for true HD digital video.

Netflix video streaming

NETFLIX

Instantly watch TV episodes and movies as often as you want on your TV. All you need is an Internet connection (either Wi-Fi or Ethernet) and a Netflix membership package that includes streaming*, and you are ready to go.

Subtitle Shift

Subtitle Shift is an enhancement feature that lets users manually adjust a movie's subtitle positioning on the television or computer screen. Using the remote control, users can shift the subtitles up and down on the screen. On widescreen displays, such as 21:9 cinema and projectors, the subtitles sometimes get cut off. In order to see them clearly, the user has to change the display aspect ratio, which defeats the purpose of the widescreen. With the Subtitle Shift feature, the user can retain the correct display aspect ratio and have the subtitles ideally positioned on the screen.



Specifications

Accessories

- Included accessories: 2 x AAA Batteries, Product Registration Card, Quick start guide, Remote Control, User Manual
- User Manual: English

Audio Playback

- Compression format: AAC, MP3, PCM, WAV, WMA

Still Picture Playback

- Compression format: GIF, JPEG, JPEG HD, JPEG Progressive, PNG
- Picture Enhancement: Rotate, Slideshow with music playback, Zoom

Video Playback

- BD Region Code: B
- DVD Region Code: 2
- Compression formats: DivX Plus™ HD, H.264, MPEG1, MPEG2, XviD, MPEG4 (AVC)
- Disc Playback Modes: A-B Repeat, Angle, Disc Menu, Pause, Repeat, Resume Playback from Stop, Search forward/reverse, Skip, Slow Forward, Standard Play, Zoom
- Video Enhancement: Deep Colour, Progressive Scan, Video Upscaling, x.v. Colour

File Format

- Audio: aac, mka, mp3, wma
- Picture: GIF, JPEG, JPG
- Video: avi, DivX, m2ts, mkv, mp4, mpeg, mpg

Optical Playback Media

- Playable Discs: AVCHD, BD, BD R/BD RE, CD, CDDA, CD-R/CD-RW, DVD, DVD +R/+RW, DVD -R/-RW, SVCD, VCD

Connectivity

- Front Connections: USB 2.0
- Integrated Connections: Wi-Fi
- Rear Connections: Digital coaxial out, Ethernet, HDMI output

Convenience

- BD-Live (1 GB USB memory needed)
- Child Protection: Parental Control
- EasyLink (HDMI-CEC): 21:9 format subtitle support, One touch play, One touch standby, Remote Control-Passthrough
- Firmware upgradeable: Firmware upgradeable via USB, Online firmware upgrade
- On-Screen Display languages: English
- Online services: Netflix, Picasa, YouTube

Dimensions

- Product (W x H x D): 310 x 40 x 217 mm

- Product weight: 1.2 kg
- Packaging (W x H x D): 365 x 87 x 299 mm
- Weight incl. Packaging: 1.56 kg

Picture/Display

- Aspect ratio: 4:3, 16:9, 21:9
- Picture enhancement: High Def (720p, 1080i, 1080p), Progressive scan, Video upscaling
- D/A converter: 12 Bit/148 MHz

Power

- Power consumption: 11 W
- Power supply: 220-230 V, 50 Hz
- Standby power consumption: < 1 W

Sound

- Sound Enhancement: Night Mode
- Sound System: Dolby Digital Plus, Dolby True HD, DTS 2.0 + Digital out

Packaging dimensions

- Packaging dimensions (W x H x D): 36.5 x 29.9 x 8.7 cm
- Packaging dimensions (W x H x D): 14.4 x 11.8 x 3.4 inch
- EAN: 87 12581 71891 6
- Gross weight: 1.56 kg
- Gross weight: 3.439 lb
- Net weight: 1.2 kg
- Net weight: 2.646 lb
- Number of products included: 1
- Packaging type: Carton
- Tare weight: 0.36 kg
- Tare weight: 0.794 lb
- Type of shelf placement: Laying

Outer Carton

- EAN: 87 12581 71891 6
- Gross weight: 3.439 lb
- Gross weight: 1.56 kg
- Outer carton (L x W x H): 14.4 x 11.8 x 3.4 inch
- Outer carton (L x W x H): 36.5 x 29.9 x 8.7 cm
- Net weight: 2.646 lb
- Net weight: 1.2 kg
- Number of consumer packages: 1
- Tare weight: 0.794 lb
- Tare weight: 0.36 kg

Product dimensions

- Product dimensions (W x H x D): 12.2 x 1.6 x 8.5 inch
- Product dimensions (W x H x D): 31 x 3.95 x 21.7 cm
- Weight: 1.02 kg
- Weight: 2.249 lb



Issue date 2016-09-20

Version: 2.0.6

12 NC: 8670 001 13968
EAN: 08 71258 17189 16

© 2016 Koninklijke Philips N.V.
All Rights reserved.

Specifications are subject to change without notice.
Trademarks are the property of Koninklijke Philips N.V.
or their respective owners.

www.philips.com