



Philips  
Blu-ray Disc/ DVD player

3D Blu-ray Disc playback

Miracast™  
Netflix & Youtube  
Built-in WiFi

**BDP2385**

## Immerse in 3D and wireless online entertainment

### 3D Blu-ray playback

Stunning 3D effect in picture depth and action that both leap off the screen, and draw you deep into the experience. Enjoy the best of internet on your TV with Netflix, YouTube and Miracast.

#### Engage more

- USB 2.0 plays video/music from USB flash/hard disk drive
- EasyLink to control all HDMI CEC devices via a single remote
- BD-Live (Profile 2.0) to enjoy online Blu-ray bonus content
- Built-in WiFi-n for faster, wider wireless performance

#### Hear more

- Dolby TrueHD for high fidelity sound
- DTS2.0 Digital Out

#### See more

- Blu-ray 3D Disc playback for a full HD 3D experience at home
- Netflix-Streaming TV Episodes and Movies over the Internet
- DVD video upscaling to 1080p via HDMI for near-HD images
- Unleash your Miracast™- certified device content on your TV

#### Connect and enjoy all your entertainment

- Watch YouTube videos directly on your big screen TV\*

# PHILIPS


# Highlights

## Blu-ray 3D Disc playback



Full HD 3D provides the illusion of depth for a heightened, realistic cinema viewing experience at home. Separate images for the left and right eyes are recorded in 1920 x 1080 full HD quality and alternately played on screen at a high speed. By watching these images through special glasses that are timed to open and close the left and right lenses in synchronization with the alternating images, the full-HD 3D viewing experience is created.

## Dolby TrueHD

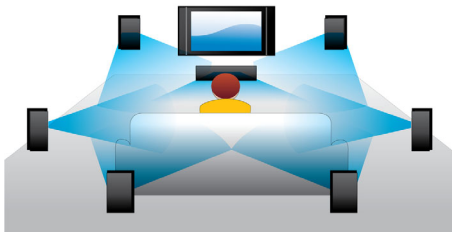

Dolby TrueHD deliver the finest sound from your Blu-ray Discs. Audio reproduced is virtually indistinguishable from the studio master, so you hear what the creators intended for you to hear. Dolby TrueHD complete your high definition entertainment experience.

## DVD video upscaling



HDMI 1080p upscaling delivers images that are crystal clear. DVD movies in standard definition can now be enjoyed in high definition resolution - ensuring more details and more true-to-life pictures. Progressive Scan (represented by "p" in "1080p") eliminates the line structure prevalent on TV screens, again ensuring relentlessly sharp images. To top it off, HDMI makes a direct digital connection that can carry uncompressed digital HD video as well as digital multi-channel audio, without conversions to analog - delivering perfect picture and sound quality, completely free from noise.

## EasyLink

EasyLink lets you control multiple devices like DVD players, Blu-ray players, soundbar speaker, Home theater and TV's etc. with one remote. It uses HDMI CEC industry-standard protocol to share functionality between devices through the HDMI cable. With one touch of a button, you can operate all your connected HDMI CEC enabled equipment simultaneously. Functions like standby and play can now be carried out with absolute ease.

## WiFi-n



WiFi-n, also known as IEEE 802.11n, is the new wireless network standard. It includes many

new options to improve the quality of the wireless link, offering faster speed and wider range compared to previous WiFi standards. WiFi-n also features backward compatibility, which makes it possible for this player to transmit to and receive from routers that operate on older WiFi standards.

## Netflix video streaming

# NETFLIX

Instantly watch TV episodes and movies as often as you want on your TV. All you need is an internet connection (either Wi-Fi or Ethernet) and a Netflix membership package that includes streaming\*, and you are ready to go.

## Miracast™



Miracast™ is a peer-to-peer wireless screencasting standard formed via Wi-Fi Direct connections. Simplified user interface likes screen-mirroring the portable device screen to bigger screen via Miracast™ certified device, no limit by pre-build codec for decoding.

# Specifications

## Picture/Display

- Aspect ratio: 16:9, 21:9, 4:3
- D/A converter: 12Bit/148MHz
- Picture enhancement: High Def (720p, 1080i, 1080p), Progressive scan, Video upscaling

## Sound

- Sound Enhancement: Night Mode
- Sound System: Dolby Digital Plus, Dolby True HD, DTS 2.0 + Digital out

## Video Playback

- BD Region Code: B
- Compression formats: DivX Plus™ HD, H.264, MPEG2, MPEG4 (AVC), XviD, MPEG1
- Disc Playback Modes: A-B Repeat, Angle, Disc Menu, Pause, Repeat, Resume Playback from Stop, Search forward/reverse, Skip, Slow Forward, Standard Play, Zoom
- DVD Region Code: 2
- Video Enhancement: Deep Color, Progressive Scan, Video Upscaling, x.v. Color

## Audio Playback

- Compression format: AAC, MP3, PCM, WAV, WMA

## Still Picture Playback

- Compression format: GIF, JPEG, JPEG HD, JPEG Progressive, PNG
- Picture Enhancement: Rotate, Slideshow with music playback, Zoom

## File Format

- Audio: aac, mka, mp3, wma
- Picture: GIF, JPEG, JPG
- Video: avi, divx, m2ts, mkv, mp4, mpeg, mpg

## Optical Playback Media

- Playable Discs: AVCHD, BD, BD R / BD RE, CD, CDDA, CD-R/CD-RW, DVD, DVD +R/+RW, DVD -R/-RW, SVCD, VCD

## Connectivity

- Front Connections: USB 2.0
- Integrated Connections: Wi-Fi
- Network connections: 802.11 b/g/n, Built-in WiFi
- Rear Connections: Digital coaxial out, Ethernet, HDMI output

## Convenience

- BD-Live(1GB USB memory needed)
- Child Protection: Parental Control
- EasyLink (HDMI-CEC): 21:9 format subtitle support, One touch play, One touch standby, Remote Control-Passthrough

- Firmware upgradeable: Firmware upgradeable via USB, Online firmware upgrade
- Online services: Netflix, YouTube
- On-Screen Display languages: English

## Power

- Power consumption: 11 W
- Power supply: 220-230V, 50Hz
- Standby power consumption: < 1W

## Dimensions

- Packaging (W x H x D): 315 x 81 x 259 mm
- Product (W x H x D): 270 x 41 x 199 mm
- Product weight: 1.02 kg
- Weight incl. Packaging: 1.3 kg

## Accessories

- Included accessories: 2 x AAA Batteries, CD-R (User Manual), Product Registration Card, Quick start guide, Remote Control

## Product dimensions

- Product dimensions (W x H x D): 27 x 4.1 x 19.93 cm
- Product dimensions (W x H x D): 10.6 x 1.6 x 7.8 inch
- Weight: 0.91 kg
- Weight: 2.006 lb

## Packaging dimensions

- Packaging type: Carton
- Number of products included: 1
- Type of shelf placement: Laying
- Packaging dimensions (W x H x D): 31.5 x 25.9 x 8.1 cm
- Packaging dimensions (W x H x D): 12.4 x 10.2 x 3.2 inch
- Gross weight: 1.3 kg
- Nett weight: 1.02 kg
- Tare weight: 0.28 kg
- Gross weight: 2.866 lb
- Nett weight: 2.249 lb
- Tare weight: 0.617 lb
- EAN: 48 95185 60548 7

## Outer Carton

- Number of consumer packagings: 1
- Outer carton (L x W x H): 31.5 x 25.9 x 8.1 cm
- Outer carton (L x W x H): 12.4 x 10.2 x 3.2 inch
- Gross weight: 1.3 kg
- Nett weight: 1.02 kg
- Tare weight: 0.28 kg
- Gross weight: 2.866 lb
- Nett weight: 2.249 lb
- Tare weight: 0.617 lb
- EAN: 48 95185 60548 7



Issue date 2015-08-07

Version: 2.1.5

12 NC: 8670 001 21952  
EAN: 48 95185 60548 7

© 2015 Koninklijke Philips N.V.  
All Rights reserved.

Specifications are subject to change without notice.  
Trademarks are the property of Koninklijke Philips N.V.  
or their respective owners.

[www.philips.com](http://www.philips.com)