

Philips
Home cinema speakers
with Ambisound



HTS7111



Add superior 5.1 surround sound to your TV

Obsessed with sound

Add superior surround sound to your TV without the clutter. Philips SoundBar with Ambisound allows you to enjoy amazing TV and movie entertainment with your Blu-ray or DVD player in cinema-like multi channel surround sound.

Great listening experience

- Ambisound for surround sound from fewer speakers
- Dolby Digital and DTS for great surround sound
- 300W RMS power delivers great sound for movies and music

Designed to enhance your cinema at home

- SoundBar design best fitting a 102cm (40") flat TV or larger
- Touch panel for intuitive playback and volume control
- Flexible placement on the wall, tabletop or stand

Simply enjoy all your entertainment

- HDMI Hub to connect HDMI devices for great sound and picture
- Easily connect your TV via a single HDMI cable
- Audio in to enjoy music from iPod/iPhone/MP3 player




2012

PHILIPS


Highlights

Ambisound

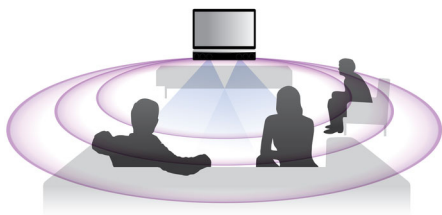

Ambisound technology produces truly embracing multi-channel surround sound from fewer speakers. It delivers an immersive 5.1 sound experience without the constraints of sitting position, room shape or size, and without the clutter of multiple speakers and cables. Through the combined effect of psychoacoustic phenomena, array processing and precisely angled driver positioning, Ambisound delivers more sound from fewer speakers.

Dolby Digital and DTS

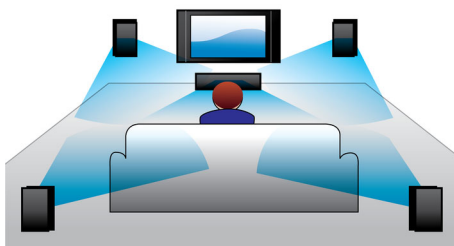


Go digital and get the most out of your music and movies. Even stereo music sounds great because Dolby Digital and DTS Digital Surround enhance digital music and videos, pumping it up so you get truly immersive surround sound out of your home cinema speaker.

300W RMS power




300W RMS power delivers great sound for movies and music

Touch panel for playback

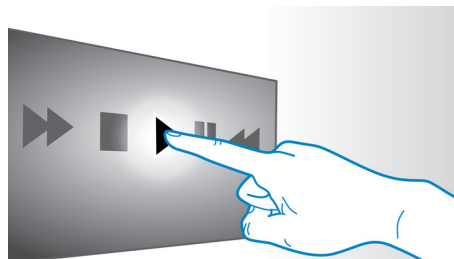


Intuitive touch panel controls allows you to control the volume as well as other playback options by simply pressing the touch sensitive controls on the front panel.

Flexible placement

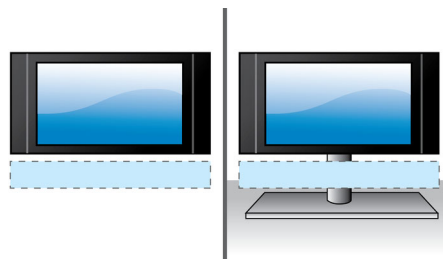


Enjoy the versatility of this home theater system that allows you to place it where you will. Whether on a TV stand, on a table or mounted on a wall, the product looks sensational and functions without compromise. For once, you get to control how your home looks without giving up an incredible home theater experience.

HDMI Hub

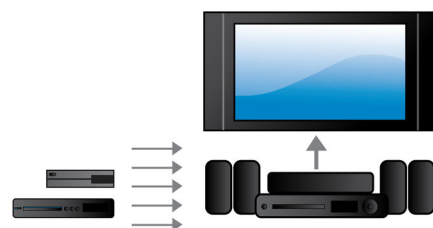

HDMI Hub provides additional HDMI ports to allow you to connect other devices such as your game console or HD set-top box to your home theater conveniently. By connecting your devices through the HDMI Hub, you can enjoy high-definition sound and picture for all your entertainment.

Easily connect your TV

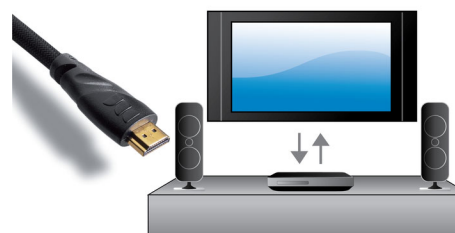


Easily connect your TV via a single HDMI cable



Perfect match to Philips 7000 series TV*

Perfect match to Philips 7000 series TV
Intensify your cinematic experience at home with a matching Philips 7000 series 2011 TV. The 3D TVs combine powerful LED pictures and Ambilight to deliver an immersive 3D movie experience. Both TV and home theater can be operated with only one remote control and the combined set ensures the best picture and sound performance with Philips Easylink via HDMI. In addition they are both designed with same materials and finishing for a perfect visual match!

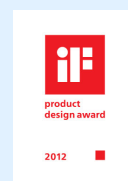

iF design awards 2012

Established in 1953, the iF Design Award is the most coveted product design prize today.

SoundBar Home theater with Ambisound HTS7111 brings home entertainment in style. It splendidly delivers more sound from fewer speakers - thanks to Ambisound. Its stunningly thin bar also matches perfectly with any flat screen TV. With touch controls, a brushed metal finish, curved metal grilles and chrome plated driver rings, it lends a seductively sleek look to the home.

Specifications

Accessories

- Compatible accessories: 2.5cm Screw x 8, DCK3060 Dock for iPod/iPhone, STS1100 Table top stand, STS1300 Floor stand, Wall plug x 8
- Included accessories: 2 x AAA Batteries, Music iLINK Cable, Power cord, Quick start guide, Remote Control, User Manual, Wall mount bracket, World Wide Warranty leaflet

Matching Philips Televisions*

- 7000 Series 2D: 42PFL7406
- 7000 Series 3D: 42PFL7606, 47PFL7606, 55PFL7606

Connectivity

- Front / Side connections: Music iLINK
- Rear Connections: AUX in, Digital coaxial in, Digital optical in, HDMI IN 1, HDMI IN 2, HDMI 1.4 output (ARC), iPod/iPhone Dock Jack

Convenience

- EasyLink (HDMI-CEC): Audio Return Channel, Automatic audio input mapping, One touch standby, Remote Control-Passthrough, System standby

Dimensions

- Main Unit (W x H x D): 945 x 108 x 86 mm
- Main Unit Weight: 3.8 kg
- Subwoofer (W x H x D): 192 x 447 x 253 mm
- Subwoofer Weight: 4.4 kg
- Subwoofer cable length: 3 m
- Packaging (W x H x D): 1010 x 248 x 452, mm
- Weight incl. Packaging: 13 kg

Loudspeakers

- Loudspeaker types: 2 Integrated center speakers, 4 Integrated surround speakers
- Drivers per Center speaker: 1 x 2.5" Full range woofer
- Center speaker freq range: 150 - 20k Hz
- Center speaker impedance: 6 ohm
- Drivers per Surround speaker: 2 x 2.5" Full range woofers
- Surround speaker freq range: 150 - 20k Hz
- Surround speaker impedance: 3 ohm
- Subwoofer type: Passive
- Subwoofer driver: 1 x 6.5" woofer
- Subwoofer freq range: 20 - 150 Hz
- Subwoofer impedance: 6 ohm

Power

- Power consumption: 55 W
- Power supply: 110-127V / 220-240V, ~50-60Hz, 50Hz
- Standby power consumption: <1 W

Sound

- Equalizer settings: Gaming, Movie, Music, News, Original
- Sound Enhancement: Ambisound, Auto Volume Leveler, Dialog Enhancement, Dolby Digital Prologic II, DoubleBass, FullSound, Night Mode, Treble, Mid and Bass Control
- Sound System: Dolby Digital 5.1, DTS Digital Surround
- Center speaker output power: 40 W x 2
- Surround speaker output power: 35 W x 4
- Subwoofer output power: 80 W
- Total Power RMS @ 30% THD: 300 W



Issue date 2020-07-08

Version: 8.2.9

12 NC: 8670 000 71586
EAN: 87 12581 58040 7

© 2020 Koninklijke Philips N.V.
All Rights reserved.

Specifications are subject to change without notice.
Trademarks are the property of Koninklijke Philips N.V.
or their respective owners.

www.philips.com

* The home theater can also be matched with all other Philips TVs.