



Philips Fidelio SoundBar
Home theater

4.1 CH wireless surround sound

Bluetooth®
2 HDMI In & HDMI out ARC
Aluminium

SoundBar



HTL7180

Cinematic surround sound, wirelessly

with detachable speakers

HTL7180 is Philips' first soundbar with real surround sound from wireless detachable speakers. Enjoy the freedom of casual and temporary placement of the surround speakers only when you need.

Richer sound for watching TV and movies

- Surround on Demand - detachable wireless surround speakers
- Wireless subwoofer for clutter free placement
- Virtual Surround Sound for a realistic movie experience
- Dolby Digital and Pro Logic II surround sound

Designed to enhance your living space

- Orientation sensor ensures the best sound in any placement
- Minimalistic chic design to suit a modern decor


Connect and enjoy all your entertainment

- Connect to HDMI x 2 for great picture and sound quality
- Wireless music streaming via Bluetooth

PHILIPS
Fidelio


Highlights

HDMI x 2

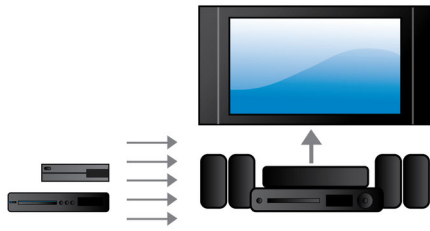

Enjoy larger-than-life 3D playback and crystal-clear 5.1 or 7.1 audio by simply plugging our player's audio HDMI x 2 output to the connection in your non-3D AV receiver.


Virtual Surround Sound

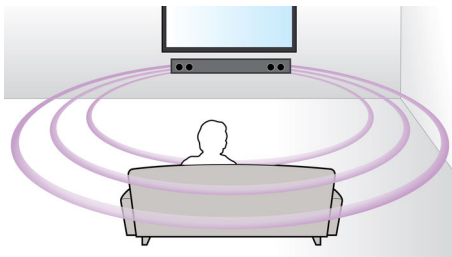

Philips Virtual Surround Sound produces rich and immersive surround sound from less than

five-speaker system. Highly advanced spatial algorithms faithfully replicate the sonic characteristics that occur in an ideal 5.1-channel environment. Any high quality stereo source is transformed into true-to-life, multi-channel surround sound. No need to purchase extra speakers, wires or speaker stands to appreciate room-filling sound.


Bluetooth

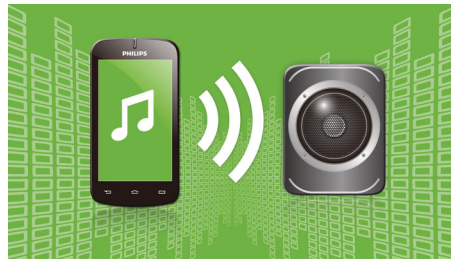

Bluetooth is a short range wireless communication technology that is both stable and energy efficient. The technology allows for easy wireless connection to other Bluetooth devices, so you can play your favorite music from any smartphone, tablet or laptop,

including the iPod or iPhone with a Bluetooth-enabled speaker.

Orientation sensor

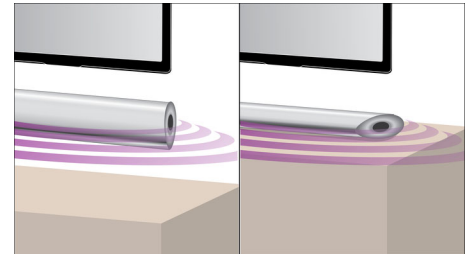

The quality of your sound experience is determined by how the soundbar is positioned in a room. Luckily, this system comes with a smart auto-orientation sensor that instantly optimizes audio quality once it detects whether your soundbar is placed horizontally or vertically. So, whether you choose to sit your soundbar on a shelf or mount it on a wall, you can be sure you'll always have a superb audio experience.

Specifications

Sound

- Sound Enhancement: Double Bass Sound, Night Mode, Treble and Bass Control
- Sound System: Dolby Digital 5.1, DTS Digital Surround
- Speaker output power: 120
- Subwoofer output power: 90
- Total Power RMS @ 30% THD: 210 W

Loudspeakers

- Loudspeaker types: Integrated with main unit
- Drivers per Surround speaker: 1 x 2.5" Full range woofer
- Speaker Impedance: 8 ohm
- Subwoofer driver: 1 x 6.5" woofer
- Subwoofer freq range: 20-150 Hz
- Subwoofer impedance: 4 ohm
- Subwoofer type: Wireless subwoofer

Connectivity

- Integrated Connections: Bluetooth
- iPod/iPhone: via 3.5mm Audio In
- Rear Connections: AUX in, Digital coaxial in, Digital optical in, HDMI 1.4 output (ARC), HDMI IN 1, HDMI IN 2
- Side Connections: Audio In (3.5mm)

Convenience

- EasyLink (HDMI-CEC): Audio Return Channel, Automatic audio input mapping, One touch standby, Remote Control-Passthrough
- HDMI Features: Audio Return Channel (ARC), Content Type

Design

- Wall mountable

Power

- Power supply: 120 V (US), 60Hz
- Standby power consumption: <0.5 W

Sustainability

- Packaging: 80% recycled corrugated board, Soya based ink

Dimensions

- Main Unit (W x H x D): 1035 x 70 x 156 mm
- Main Unit Weight: 4 kg
- Subwoofer (W x H x D): 200 x 200 x 510 mm
- Subwoofer Weight: 5 kg
- Packaging (W x H x D): 765 x 260 x 371 mm
- Weight incl. Packaging: 16 kg

Accessories

- Included accessories: 2 x AAA Batteries, Power cord, Remote Control, Safety & Legal Leaflet, Trademarks Sheet, User Manual, World Wide Warranty leaflet

Packaging dimensions

- UPC: 6 09585 23524 3
- Packaging dimensions (W x H x D): 75.7 x 35.7 x 25.2 cm
- Gross weight: 12.29 kg
- Nett weight: 9.584 kg
- Number of products included: 1
- Packaging type: Carton
- Tare weight: 2.706 kg
- Type of shelf placement: Laying

Outer Carton

- Gross weight: 12.29 kg
- Outer carton (L x W x H): 75.7 x 25.2 x 35.7 cm
- Nett weight: 9.584 kg
- Number of consumer packagings: 1
- Tare weight: 2.706 kg
- UPC: 6 09585 23524 3

Product dimensions

- Product dimensions (W x H x D): 103.48 x 7.26 x 15.55 cm
- Weight: 4.47 kg



Issue date 2020-07-08

Version: 5.0.5

12 NC: 8670 001 05336
UPC: 6 09585 23524 3

© 2020 Koninklijke Philips N.V.
All Rights reserved.

Specifications are subject to change without notice.
Trademarks are the property of Koninklijke Philips N.V.
or their respective owners.

www.philips.com
