

Philips Immersive Sound
Home theater

DVD

HTS6543



Cinematic surround sound with 3D Angled Speakers

Obsessed with Sound

Bring the power of the cinema into your home! Pump up your home entertainment experience with dynamic 3D Directional Angled Speakers offering powerful 1000W surround sound and extra large subwoofer.

Great listening experience

- 1000W RMS power delivers great sound for movies and music
- Dolby Digital for ultimate movie experience
- 3D Angled Speakers disperse sound evenly around the room

Designed to enhance your cinema at home

- Touch panel for intuitive playback and volume control
- Wireless rear speakers option for clutter free placement
- Compact design that fits anywhere

Simply enjoy all your entertainment

- EasyLink to control all HDMI CEC devices via a single remote
- HDMI for high definition movies and picture quality
- Plays DVD, VCD, CD and USB devices

PHILIPS

Highlights

1000W RMS power



1000W RMS power delivers great sound for movies and music

3D Angled speakers




3D Angled Speakers feature angled drivers to deliver sound not only towards the front but also to the sides, creating a wider sweet spot so you can enjoy more immersive and cinematic surround sound.

Compact design



Compact design that fits anywhere

Dolby Digital

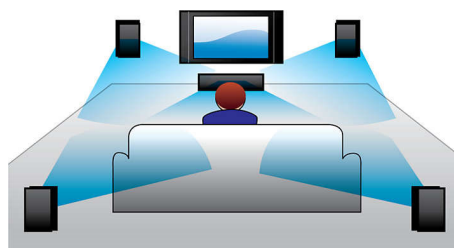

Because Dolby Digital, the world's leading digital multi-channel audio standards, make use of the way the human ear naturally processes sound, you experience superb quality surround sound audio with realistic spatial cues.

EasyLink



EasyLink lets you control multiple devices like DVD players, Blu-ray players, soundbar speaker, Home theater and TV's etc. with one remote. It uses HDMI CEC industry-standard protocol to share functionality between devices through the HDMI cable. With one touch of a button, you can operate all your connected HDMI CEC enabled equipment simultaneously. Functions like standby and play can now be carried out with absolute ease.

HDMI for HD movies



HDMI is a direct digital connection that can carry digital HD video as well as digital multichannel audio. By eliminating the conversion to analog signals it delivers perfect


picture and sound quality, completely free from noise. Movies in standard definition can now be enjoyed in true high definition resolution - ensuring more details and more true-to-life pictures.

Plays it all




Play virtually any disc and any media devices you want - whether they be DVDs, VCDs, CDs or USB devices. Experience the unbeatable convenience of great playability, and the luxury of sharing media files on your TV or home theater system.

Touch panel for playback

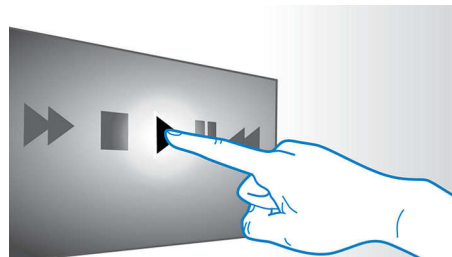

Intuitive touch panel controls allows you to control the volume as well as other playback options by simply pressing the touch sensitive controls on the front panel.

Wireless rear speakers option

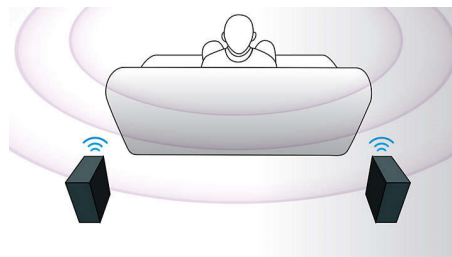

Wireless rear speakers give you scalability and mobility in speaker placement. Developed using interference-free technology, wireless speakers provide full surround sound without unsightly wire connections.



Specifications

Sound

- Sound Enhancement: Dolby Digital Prologic II, Night Mode
- Sound System: Dolby Digital 5.1, DTS Digital Surround
- Subwoofer output power: 166 W
- Equalizer settings: Gaming, Movie, Music, News, Original
- Center speaker output power: 166 W
- Tallboy speaker output power: 2 x 166 W
- Satellite speaker output power: 2 x 166 W
- Total Power RMS @ 30% THD: 1000 W

Loudspeakers

- Loudspeaker types: 1 x Centre speaker, 2 x Satellite speakers, 2 x Tallboy speakers
- Center speaker drivers: 2 x 3" full range woofers
- Satellite speaker freq range: 150 - 20k Hz
- Satellite speaker impedance: 4 ohm
- Subwoofer freq range: 20 - 150 Hz
- Center speaker impedance: 4 ohm
- Subwoofer driver: 1 x 8" woofer
- Subwoofer type: Passive
- Center speaker freq range: 150 - 20k Hz
- Drivers per Satellite speaker: 2 x 3" full range woofers
- Subwoofer impedance: 4 ohm
- Drivers per Tallboy speaker: 2 x 3" Full range woofers
- Tallboy speaker freq range: 150 - 20k Hz
- Tallboy speaker impedance: 4 ohm

Connectivity

- Front Connections: Hi-Speed USB, Music iLINK
- Rear Connections: AUX IN 1, AUX IN 2, Click-fit Speaker Connectors, Composite video (CVBS) output, Digital coaxial in, Digital optical in, FM Antenna Socket, HDMI 1.4 output (ARC), Wireless Rear Audio

Tuner/Reception/Transmission

- Tuner Bands: FM
- Number of Preset Channels: 40

Convenience

- EasyLink (HDMI-CEC): Audio Return Channel, Automatic audio input mapping, One touch play, One touch standby, Remote Control-Passthrough
- HDMI Features: Audio Return Channel (ARC)

Power

- Power consumption: 105 W
- Power supply: 220-240V, 50Hz
- Standby power consumption: < 0.5 W

Accessories

- Compatible accessories: RWSS5512 Wireless Rear module
- Included accessories: 2 x AAA Batteries, FM antenna, HDMI cable, Power cord, Quick start guide, Remote Control, Safety & Legal Leaflet, Trademarks Sheet, User Manual, World Wide Warranty leaflet

Dimensions

- Main Unit (W x H x D): 435 x 45 x 330 mm
- Weight incl. Packaging: 23 kg
- Main Unit Weight: 3.69 kg
- Packaging (W x H x D): 1100 x 400 x 400 mm
- Center Speaker (W x H x D): 280 x 95 x 92 mm
- Center Speaker Weight: 1.4 kg
- Centre Speaker cable length: 2 m
- Front Speaker (W x H x D): 100 x 280 x 104 mm
- Subwoofer (W x H x D): 196 x 395 x 342 mm
- Front Speaker Weight: 1.03 kg
- Subwoofer Weight: 4.8 kg
- Front Speaker cable length: 3 m
- Rear Tallboy Speaker (WxHxD): 260 x 1101x 260 mm
- Rear Speaker Weight: 3.8 kg
- Rear Speaker cable length: 10 m
- Subwoofer cable length: 3 m

Audio Playback

- Compression format: MP3, WMA
- MP3 bit rates: 32 - 320kbps

File Format

- Audio: mp3, wma
- Video: avi, divx, mpeg, mpg
- Picture: JPEG

Picture/Display

- Picture enhancement: HD (720p, 1080i, 1080p/24fps), Progressive scan, Video upscaling

Optical Playback Media

- Playable Discs: CD, CDDA, CD-R/CD-RW, DVD, DVD +R/+RW, DVD -R/-RW, SVCD, VCD

Still Picture Playback

- Compression format: JPEG, JPEG HD
- Picture Enhancement: Rotate, Slideshow with music playback, Zoom

Video Playback

- Compression formats: DivX Ultra, MPEG1, MPEG2, MPEG4



Issue date 2024-05-02

Version: 3.1.5

EAN: 87 12581 63215 1

© 2024 Koninklijke Philips N.V.
All Rights reserved.

Specifications are subject to change without notice.
Trademarks are the property of Koninklijke Philips N.V.
or their respective owners.

www.philips.com