

Philips Immersive Sound
Home theater with 3D
Angled speakers

DVD

Immersive Sound



HTS6543

Cinematic surround sound with 3D Angled Speakers

Obsessed with Sound

Bring the power of the cinema into your home! Pump up your home entertainment experience with dynamic 3D Directional Angled Speakers offering powerful 1000W surround sound and extra large subwoofer.

Great listening experience

- 1000W RMS power delivers great sound for movies and music
- 3D Angled Speakers disperse sound evenly around the room
- Dolby Digital for ultimate movie experience

Simply enjoy all your entertainment

- Plays DVD, VCD, CD and USB devices
- HDMI for high definition movies and picture quality
- EasyLink to control all HDMI CEC devices via a single remote

Designed to enhance your cinema at home

- Touch panel for intuitive playback and volume control
- Wireless rear speakers option for clutter free placement
- Compact design that fits anywhere

PHILIPS

Highlights

1000W RMS power




1000W RMS power delivers great sound for movies and music

3D Angled speakers




3D Angled Speakers feature angled drivers to deliver sound not only towards the front but also to the sides, creating a wider sweet spot so you can enjoy more immersive and cinematic surround sound.

Compact design

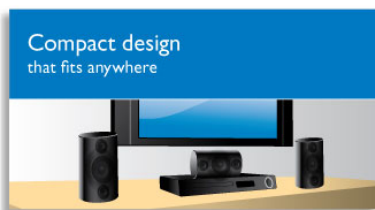

Compact design that fits anywhere

Dolby Digital

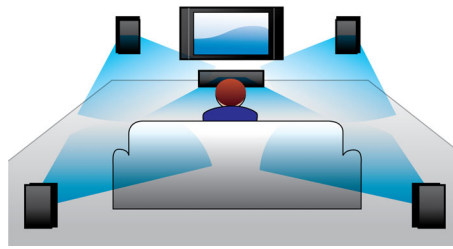

Because Dolby Digital, the world's leading digital multi-channel audio standards, make use of the way the human ear naturally processes sound, you experience superb quality surround sound audio with realistic spatial cues.

EasyLink



EasyLink lets you control multiple devices like DVD players, Blu-ray players, soundbar speaker, Home theater and TV's etc. with one remote. It uses HDMI CEC industry-standard protocol to share functionality between devices through the HDMI cable. With one touch of a button, you can operate all your connected HDMI CEC enabled equipment simultaneously. Functions like standby and play can now be carried out with absolute ease.

HDMI for HD movies



HDMI is a direct digital connection that can carry digital HD video as well as digital multichannel audio. By eliminating the conversion to analog signals it delivers perfect


picture and sound quality, completely free from noise. Movies in standard definition can now be enjoyed in true high definition resolution - ensuring more details and more true-to-life pictures.

Plays it all




Play virtually any disc and any media devices you want - whether they be DVDs, VCDs, CDs or USB devices. Experience the unbeatable convenience of great playability, and the luxury of sharing media files on your TV or home theater system.

Touch panel for playback

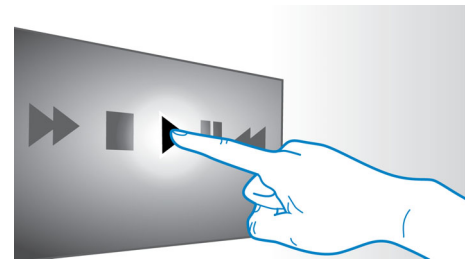

Intuitive touch panel controls allows you to control the volume as well as other playback options by simply pressing the touch sensitive controls on the front panel.

Wireless rear speakers option

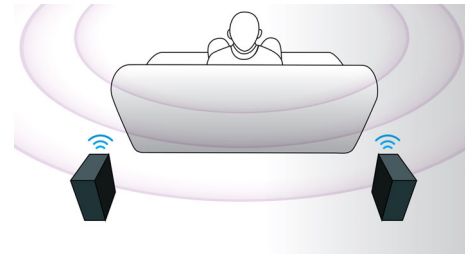

Wireless rear speakers give you scalability and mobility in speaker placement. Developed using interference-free technology, wireless speakers provide full surround sound without unsightly wire connections.

Specifications

Sound

- Equalizer settings: Gaming, Movie, Music, News, Original
- Sound Enhancement: Dolby Digital Prologic II, Night Mode
- Sound System: Dolby Digital 5.1, DTS Digital Surround
- Center speaker output power: 166 W
- Satellite speaker output power: 2 x 166 W
- Tallboy speaker output power: 2 x 166 W
- Subwoofer output power: 166 W
- Total Power RMS @ 30% THD: 1000 W

Loudspeakers

- Loudspeaker types: 1 x Centre speaker, 2 x Satellite speakers, 2 x Tallboy speakers
- Center speaker drivers: 2 x 3" full range woofers
- Center speaker freq range: 150 - 20k Hz
- Center speaker impedance: 4 ohm
- Drivers per Satellite speaker: 2 x 3" full range woofers
- Satellite speaker freq range: 150 - 20k Hz
- Drivers per Tallboy speaker: 2 x 3" Full range woofers
- Tallboy speaker freq range: 150 - 20k Hz
- Tallboy speaker impedance: 4 ohm
- Subwoofer type: Passive
- Subwoofer driver: 1 x 8" woofer
- Subwoofer freq range: 20 - 150 Hz
- Subwoofer impedance: 4 ohm

Connectivity

- Front Connections: Hi-Speed USB, Music iLINK
- Rear Connections: AUX IN 1, AUX IN 2, Click-fit Speaker Connectors, Composite video (CVBS) output, Digital coaxial in, Digital optical in, FM Antenna Socket, HDMI 1.4 output (ARC), Wireless Rear Audio

Convenience

- EasyLink (HDMI-CEC): Audio Return Channel, Automatic audio input mapping, One touch play, One touch standby, Remote Control-Passthrough
- HDMI Features: Audio Return Channel (ARC)

Tuner/Reception/Transmission

- Tuner Bands: FM
- Number of Preset Channels: 40

Optical Playback Media

- Playable Discs: CD, CDDA, CD-R/CD-RW, DVD, DVD +R/+RW, DVD -R/-RW, SVCD, VCD

File Format

- Audio: mp3, wma
- Picture: JPEG
- Video: avi, divx, mpeg, mpg

Audio Playback

- Compression format: MP3, WMA
- MP3 bit rates: 32 - 320kbps

Video Playback

- Compression formats: DivX Ultra, MPEG1, MPEG2, MPEG4

Still Picture Playback

- Compression format: JPEG, JPEG HD
- Picture Enhancement: Rotate, Slideshow with music playback, Zoom

Picture/Display

- Picture enhancement: HD (720p, 1080i, 1080p/24fps), Progressive scan, Video upscaling

Power

- Power consumption: 105 W
- Power supply: 220-240V, 50Hz
- Standby power consumption: < 0.5 W

Dimensions

- Main Unit (W x H x D): 435 x 45 x 330 mm
- Main Unit Weight: 3.69 kg
- Center Speaker (W x H x D): 280 x 95 x 92 mm
- Center Speaker Weight: 1.4 kg
- Centre Speaker cable length: 2 m
- Front Speaker (W x H x D): 100 x 280 x 104 mm
- Front Speaker Weight: 1.03 kg
- Front Speaker cable length: 3 m
- Rear Tallboy Speaker (WxHxD): 260 x 1101x 260 mm
- Rear Speaker Weight: 3.8 kg
- Rear Speaker cable length: 10 m
- Subwoofer (W x H x D): 196 x 395 x 342 mm
- Subwoofer cable length: 3 m
- Subwoofer Weight: 4.8 kg
- Packaging (W x H x D): 1100 x 400 x 400 mm
- Weight incl. Packaging: 23 kg

Accessories

- Compatible accessories: RWSS5512 Wireless Rear module
- Included accessories: 2 x AAA Batteries, FM antenna, HDMI cable, Power cord, Quick start guide, Remote Control, Safety & Legal Leaflet, Trademarks Sheet, User Manual, World Wide Warranty leaflet



Issue date 2015-08-07

Version: 3.1.5

12 NC: 8670 000 86493
EAN: 87 12581 63215 1

© 2015 Koninklijke Philips N.V.
All Rights reserved.

Specifications are subject to change without notice.
Trademarks are the property of Koninklijke Philips N.V.
or their respective owners.

www.philips.com