



Philips
HD camcorder



CAM200BL



Simply swipe your great moments on TV or the Web

via built-in WiFi

The Philips ESee CAM200 lets you take videos and photos with ease, and brings sharing to a whole new level of simplicity. Swipe on the 3" touchscreen to share your shots on TV or the Internet - instantly, wirelessly.

Take quick and easy videos in full HD quality

- Relive memories in great detail with full HD videos
- Up to 10 megapixel resolution for high quality photos
- 3" touch-screen for smooth and intuitive control
- Shoot clearer and steadier videos with advanced anti-shake
- Flash, auto focus, face & smile detection

Swipe to share your favorite moments wirelessly

- Built-in Wi-Fi for sharing without wires or PC
- Swipe to share videos or photos on TV
- Direct Wi-Fi upload to Facebook, YouTube, Twitter without PC
- Wirelessly save your videos & photos on your computer
- Go Live for wireless video broadcast to website via UStream

Bring it with you anywhere

- Small and slim design to fit easily into your pocket
- Extra long battery life lets you shoot more

PHILIPS


Highlights

Full HD (1080p) videos



Capture and enjoy videos in full high definition quality (full HD 1080p). "1080" refers to the display resolution, in terms of the number of horizontal lines on screen. "p" stands for progressive scan, or the sequential appearance of the lines in each frame. 1080p gives video quality that is superior to that found in typical mobile phones and digital cameras. In addition, the camcorder uses the same video format as Blu-ray players and discs – H.264. This highly sophisticated format delivers superb HD picture quality, letting you savor crystal clear memories on video.

Advanced anti-shake

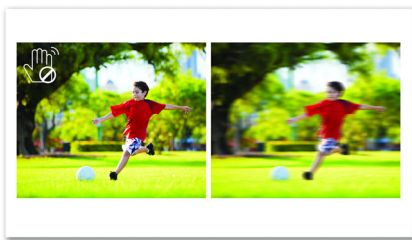

Advanced anti-shake lets you take great videos that you will always be proud to share. Steady and undistorted videos are ensured by gyro sensors that are armed with advanced algorithms. The sensors take measurements of the distance between the ground and the camera lens, and make the necessary corrections whenever the camcorder wobbles. This advanced technology gives you blur-free pictures every time, letting you capture the best moments in life in amazing videos.

Built-in Wi-Fi

The camcorder has built-in Wi-Fi, letting you share your photos and videos instantly –

without a computer and without wires. The camcorder connects wirelessly to Philips SimplyShare devices and DLNA compatible TVs, Blu-ray players, network media players, home cinema systems and photo frames, letting you enjoy your favourite moments on a bigger screen. You can also upload your shots and footages onto internet sites, with easy-to-use built-in applications for Facebook, Twitter, YouTube and Picassa. Philips ESee make sharing truly simple.

SimplySwipe



Simply swipe on the ESee camcorder's touchscreen to share photos and videos. As you browse through pictures and footages on your camcorder, you can decide what to share by simply swiping across the shot. Watch favorites directly on your Philips SimplyShare devices or DLNA compatible TVs, Blu-ray players, network media players and home cinema systems. You can even swipe and share your shots on Philips photo frames and tablets.

Instant upload to Facebook



Uploading directly from the camcorder to internet sites like YouTube, Facebook, Tweeter and Picassa is a breeze – all you have to do is swipe on the camcorder's touchscreen to share photos and videos to the selected social network and they will be uploaded wirelessly.

Go Live



Broadcast events live with the Esee camcorder, and share all that is happening, as they are happening. All you have to do is make a Wi-Fi connection and select 'Go Live'. What you are recording will then start streaming onto the UStream website where it can be viewed by family and friends wherever they are. Let loved ones take part in your experiences and share all of life's greatest moments as they take place.

Up to 10 megapixel photos



Up to 10 megapixel resolution for high quality photos

3" touch-screen



3" touch-screen for smooth and intuitive control

Specifications

Video Quality

- Resolution: Full HD(1920x1080p) at 30 fps, Sport Mode(1280x720p) at 60fps, HD (1280 x 720) at 30 fps
- Photo Resolution: 10 MP, 8 MP
- Formats: H.264 video compression, AAC Audio compression, MP4 files format, Still: JPEG
- Scene Mode: Auto, Snow/Beach, Night, Back-light, Sunset, Fine-Skin
- Effects: Normal, Sepia, Black & White, Negative, Seventies, Analogue, Colour filter
- White Balance: Automatic white balance
- Exposure: Automatic exposure control

Lens & Sensor

- Lens: Auto Focus (0.1m to infinity)
- Aperture: F2.8
- Zoom: Fast multi-step 5x digital
- Sensor: 1:3.2 inch, 8MP CMOS sensor

Camcorder features

- SimplySwipe: to share videos or photos to TV, digital photo frame or Internet
- Enhancement: Autofocus, Face tracking, Smile detection
- Flash Light: LED Flash for dark environment
- 3 Second Pre-Recording
- Power-up Time: 2 seconds
- Auto Shut-Down: 3 minutes
- Tripod Mount

Wireless Sharing

- WiFi: 802.11b/g/n WiFi
- SimplyShare: compatible with DLNA devices
- Go Live: live broadcasting to online site UStream
- Social media sharing: YouTube, Facebook, Twitter, Picasa

Battery

- Type: Li-ion Battery
- Life: 120 Minutes
- Charge Time: 3 hrs. via adaptor, 4 hrs. via computer USB

Philips Arcsoft software

- Easy Sharing: direct upload to Facebook, direct upload to YouTube, upload button for websites, upload button for email
- Video Editing: add titles, music and credits, create movies, cut video

Display

- 3 inch LCD (diagonal)
- 960 by 240 pixel resolution

Capacity

- Recording Media: Micro SD Card (up to 32 GB)
- Recording Time: 1 hour @ 4 GB for Full HD, 1 hour @ 2 GB for HD, 2 hours @ 1 GB for SD

Input and Output

- TV Out: HDMI
- USB: Mini-USB port
- Audio-out: via HDMI
- Speaker: Built-in Speaker
- Microphone: Stereo directional microphone

Dimensions

- Product dimensions (W x H x D):
107 x 54 x 19.5 mm

Minimum Requirements

- Windows: Windows XP, Windows Vista, Windows 7, Internet Explorer 6.0, PENTIUM 4 - 2.8 GHz processor, 1GB RAM and 64 MB Video RAM
- MAC: MACINTOSH 10.4, MACINTOSH 10.5, MACINTOSH 10.6, MAC 1.66 Ghz Intel Core Duo, Safari 1.1
- Other: 1024 x 768 display resolution, 300 MB free hard disc space, USB v1.1

Accessories included

- USB cable
- Wrist Strap
- Soft protective case
- Quick Start Guide
- Philips Arcsoft Software: .



Issue date 2014-03-14

Version: 2.5.5

12 NC: 8670 000 83253
EAN: 87 12581 62418 7

© 2014 Koninklijke Philips N.V.
All Rights reserved.

Specifications are subject to change without notice.
Trademarks are the property of Koninklijke Philips N.V.
or their respective owners.

www.philips.com