

Philips MP3 Mini Hi-Fi System

FWM143

# Listen to your favourite MP3-CD music in rich sound

Get the most out of your music with the Philips FWM143 Mini Hi-Fi System, featuring 2-way Bass Reflex Speaker System for rich sound. Optimise your sound settings by adjusting the balance for different music genres with Digital Sound Control.

# **Enrich your sound experience**

- 2 x 20 W RMS total output power
- 2-Way Bass Reflex Speaker System for powerful sound

# Continuous enjoyment of your favourite music

- 10 hours of MP3-CD music
- AM/FM tuner
- Stereo cassette deck

# Personalised sound settings

- Dynamic Bass Boost for deep and dramatic sound
- Digital Sound Control for optimised music style settings



# Highlights

# 2-Way Bass Reflex System



2-Way Bass Reflex Speaker System for powerful sound

# 10 hours of MP3-CD music




MP3 stands for "MPEG 1 Audio layer-3".MP3 is a revolutionary compression technology by which large digital music files can be made up to 10 times smaller without radically degrading their audio quality. MP3 has become the standard audio compression format used on the Internet, allowing quick and easy audio file transfer.

# **AM/FM** tuner



AM/FM tuner

#### Stereo cassette deck

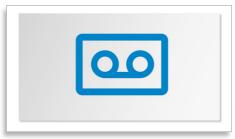

Stereo cassette deck

# **Dynamic Bass Boost**



Dynamic Bass Boost maximises your music enjoyment by emphasising the bass content of

the music throughout the range of volume settings - from low to high – at the touch of a button! Bottom-end bass frequencies usually get lost when the volume is set at a low level. To counteract this, Dynamic Bass Boost can be switched on to boost bass levels, so you can enjoy consistent sound even when you turn down the volume.

# **Digital Sound Control**



Digital Sound Control offers you a choice of pre-set Jazz, Rock, Pop and Classical controls you can use to optimise the frequency ranges for different musical styles. Each mode uses graphic equalizing technology to automatically adjust the sound balance and enhance the most important sound frequencies in your chosen music style. Ultimately, Digital Sound Control makes it easy for you get the most out of your music by precisely adjusting the sound balance to match the type of music you are playing.







# Specifications

#### Sound

- Total Sound Power (RMS): 40 W
- Output Power: 800 W PMPO
- Sound Enhancement: Dynamic Bass Boost, Digital Sound Control

# Loudspeakers

- Main Speaker: 4" woofer, Piezo tweeter, 2-way, Bass Reflex Speaker System
- Number of Loudspeakers: 2

# **Audio Playback**

- · Loader Type: Tray
- Number of Discs: 1
- Playback Media: CD, CD-R, CD-RW, MP3-CD
- Disc Playback Modes: Next/Previous Track Search, Fast Forward/Reverse, 20-Track Programmable, Repeat Play, Shuffle Play
- · Cassette Deck Technology: Mechanical
- Number of decks: 1

# **Audio Recording**

· Recording Media: Tape

# Tuner/Reception/Transmission

• Tuner Bands: FM, FM Stereo, MW

# **Connectivity**

· Audio Connections: RCA Aux in

- Headphones: 3.5 mm
- Other connections: AM Antenna

# **Convenience**

- · Clock: On main display
- Display Type: LCD
- Alarms: CD Alarm, Radio Alarm, Sleep timer

# **Accessories**

- User Manual: 16 languages
- Included Accessories: AM antenna, Remote Control, \*Flat pin adapter, FM/MW Antenna
- · Guarantee booklet: Global version
- Quick start guide
- Remote control: 20-key
- Standard Package Includes: International Guarantee

# **Dimensions**

- Set dimensions (W x H x D): 220 x 292 x 285 mm
- Main speaker dimensions (W x H x D): 190 x 292 x 183 mm
- Packaging dimensions (W x H x D): 510 x 350 x 416 mm
- Weight incl. Packaging: 9.5 kg

# **Power**

- Power supply: 200-240 V
- Standby power consumption: 1 W



Issue date 2009-09-04

Version: 1.0.2

Specifications are subject to change without notice. Trademarks are the property of Koninklijke Philips Electronics N.V. or their respective owners.

12 NC: 8670 000 38014 EAN: 87 12581 40373 7

www.philips.com