

Philips
5.1 3D Blu-ray Home
theater

HDMI ARC & USB
1000W



HTB3540

Powerful cinematic surround sound with deep bass

Pump up your home entertainment experience with the Philips home cinema system HTB3510. Exposed speakers drivers offering powerful 1000W with double basspipes and immersive 3D Blu-ray Disc playback.

Great listening experience

- Powerful speakers with double basspipes for great sound
- 1000W RMS power delivers great sound for movies and music
- Dolby TrueHD and DTS-HD for high fidelity surround sound

Simply enjoy all your entertainment

- Full HD 3D Blu-ray for a truly immersive 3D movie experience
- Turn your Smartphone into a remote for Philips AV products
- SimplyShare to connect & stream all entertainment wirelessly
- DivX Plus HD Certified for high definition DivX playback
- EasyLink to control all HDMI CEC devices via a single remote
- HDMI for high definition movies and picture quality
- Audio in to enjoy music from iPod/iPhone/MP3 player
- Karaoke for endless singing entertainment at home

Designed to enhance your cinema at home

- Modern design to complement your home environment

PHILIPS

Highlights

Full HD 3D Blu-ray




Be enthralled by 3D movies in your own living room on a Full HD 3D TV. Active 3D uses the latest generation of fast switching displays for real life depth and realism in full 1080x1920 HD resolution. By watching these images through special glasses with right and left lenses that are timed to open and close in synchrony with alternating images, the full HD 3D viewing experience is created in your home cinema. Premium 3D movie releases on Blu-ray offer a wide, high quality selection of content. Blu-ray also delivers uncompressed surround sound for an unbelievably real audio experience.

1000W RMS power



1000W RMS power delivers great sound for movies and music

Dolby TrueHD and DTS-HD

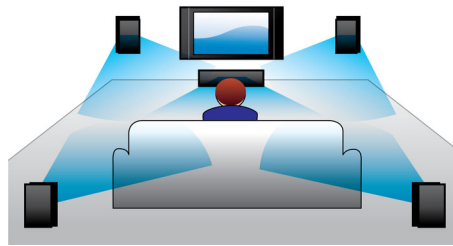

Dolby TrueHD and DTS-HD Master Audio Essential deliver the finest sound from your Blu-ray Discs. Audio reproduced is virtually indistinguishable from the studio master, so you hear what the creators intended for you to hear. Dolby TrueHD and DTS-HD Master Audio Essential complete your high definition entertainment experience.

Double Bass Sound



Powerful speakers with a bass-reflex system and double basspipes enhance the lower frequencies and deliver rock-solid, deep bass sounds. You'll be able to hear the lowest murmur or the deepest roar.

HDMI for HD movies



HDMI is a direct digital connection that can carry digital HD video as well as digital

multichannel audio. By eliminating the conversion to analog signals it delivers perfect picture and sound quality, completely free from noise. Movies in standard definition can now be enjoyed in true high definition resolution - ensuring more details and more true-to-life pictures.

Philips MyRemote



The Philips MyRemote app lets you use your smartphone or tablet as a remote to control your Philips AV products that are connected to your home Wi-Fi network, and gives you instant control from anywhere in your home. It also comes with useful functions such as SimplyShare to connect and stream all entertainment wirelessly; and MySound to customize your listening preferences.

Audio in



Audio in allows you to easily play your music directly from your iPod/iPhone/iPad, MP3 player, or laptop via a simple connection to your home cinema. Simply connect your music device to the Audio in jack to enjoy your music with the superior sound quality of the Philips home cinema system.



Specifications

Accessories

- Included accessories: 2 x AAA Batteries, Power cord, Quick start guide, Remote Control, Safety & Legal Leaflet, Trademarks Sheet, World Wide Warranty leaflet, User Manual, FM antenna, HDMI cable

Audio Playback

- Compression format: AAC, FLAC, MP3, Ogg Vorbis, WAV, WMA, DTS
- MP3 bit rates: 32 - 320kbps

Still Picture Playback

- Compression format: GIF, JPEG, JPEG HD, JPEG Progressive, PNG
- Picture Enhancement: Rotate, Zoom

Video Playback

- Compression formats: AVCHD, DivX Plus HD, MPEG1, MPEG2, MPEG4, H.264, ISO, WMV 9

Optical Playback Media

- Playable Discs: AVCHD, BD, BD R / BD RE, CD, CDDA, CD-R/CD-RW, DVD, DVD +R/+RW, DVD -R/-RW, SVCD, VCD

File Format

- Audio: aac, mka, mp3, wma
- Picture: GIF, JPEG, JPG
- Video: avi, divx, mkv, mp4, mpeg, mpg, wmv

Connectivity

- Rear Connections: AUX in, Composite video (CVBS) output, Digital coaxial in, Digital optical in, Easy-Fit Speaker Jacks, Ethernet, HDMI 1.4 output (ARC), Fixed FM Antenna, USB (For VOD/BD-LIVE only)
- Front Connections: Audio in, Hi-Speed USB, Microphone In

Convenience

- EasyLink (HDMI-CEC): Audio Return Channel, Automatic audio input mapping, One touch play, One touch standby, Remote Control-Passthrough, 21:9 format subtitle support, Dynamic Lipsync, System standby
- HDMI Features: 3D, Audio Return Channel (ARC), Content Type, Deep color

Loudspeakers

- Loudspeaker types: 1 x Centre speaker, 2 x Satellite speakers, 2 x Tallboy speakers
- Center speaker drivers: 1 x 3" Full range woofer
- Center speaker freq range: 150 - 20k Hz
- Center speaker impedance: 4 ohm
- Drivers per Satellite speaker: 1 x 3" Full range woofer
- Satellite speaker freq range: 150 - 20k Hz
- Satellite speaker impedance: 4 ohm
- Subwoofer type: Passive
- Subwoofer driver: 1 x 8" woofer
- Subwoofer freq range: 20 - 150 Hz
- Subwoofer impedance: 4 ohm

Picture/Display

- Picture enhancement: HD (720p, 1080i, 1080p/24fps), Progressive scan, Video upscaling

Power

- Power consumption: 160 W
- Standby power consumption: < 0.5 W
- Power supply: 220-240V, 50Hz

Sound

- Total Power RMS @ 30% THD: 1000 W
- Equalizer settings: Gaming, Movie, Music, News, Original
- Sound Enhancement: Night Mode, Auto Volume Leveler, Double Bass Sound, Treble and Bass Control
- Sound System: Dolby Digital Plus, Dolby True HD, DTS-HD Master Audio Essential
- Center speaker output power: 166W
- Satellite speaker output power: 4X166W
- Subwoofer output power: 166W

Tuner/Reception/Transmission

- Number of Preset Channels: 40
- Tuner Bands: FM
- RDS: Station Name

Outer Carton

- EAN: 87 12581 68405 1
- Gross weight: 16.31 kg
- Outer carton (L x W x H): 66.9 x 40 x 43 cm
- Nett weight: 14.69 kg
- Number of consumer packagings: 1
- Tare weight: 1.62 kg

Packaging dimensions

- Packaging dimensions (W x H x D): 66.9 x 43 x 40 cm
- EAN: 87 12581 68405 1
- Gross weight: 16.31 kg
- Nett weight: 14.69 kg
- Number of products included: 1
- Packaging type: Carton
- Tare weight: 1.62 kg
- Type of shelf placement: Laying

Dimensions

- Center Speaker (W x H x D): 223 x 102 x 80 mm
- Center Speaker Weight: 0.65 kg
- Centre Speaker cable length: 2 m
- Front Speaker (W x H x D): 90 x 185 x 82 mm
- Front Speaker cable length: 3 m
- Front Speaker Weight: 0.53 kg
- Main Unit (W x H x D): 435X56.3X286.5 mm
- Subwoofer (W x H x D): 178 x 303 x 343 mm
- Subwoofer cable length: 3 m
- Subwoofer Weight: 3.66 kg
- Rear Speaker cable length: 10 m
- Rear Speaker Weight: 2.72 kg
- Rear Tallboy Speaker (WxHxD): 100 x 1092 x 65 mm
- Main Unit Weight: 2.66 kg



Issue date 2020-05-12

Version: 5.0.2

12 NC: 8670 001 02002
EAN: 08 71258 16840 51

© 2020 Koninklijke Philips N.V.
All Rights reserved.

Specifications are subject to change without notice.
Trademarks are the property of Koninklijke Philips N.V.
or their respective owners.

www.philips.com

* To check whether Video on Demand is available in your country, please visit www.philips.com/blu-ray.
* DivX, DivX Certified, and associated logos are trademarks of DivXNetworks, Inc. and are used under license.
* Dolby and the double-D symbol are registered trademarks of Dolby Laboratories Inc.