



Philips Streamium  
Wi-Fi component Hi-Fi  
system

**Streamium**



**MCI900**



## Feel the emotions of a live performance

### Obsessed with sound

This Philips MCI900/12 Streamium Wi-Fi component Hi-Fi system with SoundSphere speakers, for sound so natural you'll think the artists are performing in front of you. 160 GB HDD, Internet radio, colour display and easy navigation.

#### Authentic sound that comes alive

- SoundSphere for a natural, deeper and wider sound impression
- Aluminium speakers for fidelity sound from optimal rigidity
- FullSound enriches your music with fuller bass and clarity

#### Superb performance

- Gold-plated speaker connector for finest signal transmission
- 2 x 50 W RMS Hi-Fi sound with Class "D" Digital Amplifier
- HDMI 1080p upscales to high definition for sharper pictures

#### All your music on one wireless system

- 160 GB hard disk to store up to 2000 music albums
- Thousands of free Internet Radio Stations
- Wirelessly stream or transfer your PC/MAC music and photos

#### Enrich your experience

- Colourful LCD display for convenient control
- Play DVD, DivX<sup>®</sup>, MP3, Non-DRM AAC, WMA, FLAC, OGG and JPG



**PHILIPS**

# Highlights

## SoundSphere




Bask in the glory and energy of music as SoundSphere gives you each note as the artist intended. Delivering clear and natural audio, SoundSphere creates a sound impression that is deeper and wider. The result is life-like audio that will make you believe the artists are performing in front of you. Each SoundSphere speaker features a tweeter that hangs above the speaker box. The tweeter is able to emit sound more clearly and in all directions. Precise audio crossover engineering and careful positioning of the woofer to embrace the tweeter ensures minimised interference and even more natural sound.

## Aluminium speakers



Let nature bring you its best. Natural materials have proven themselves unbeatable as acoustic building components. Speakers made with aluminium are more rigid, forming a more ideal enclosure that naturally impedes vibrations, optimises soundwave propagation and produces sound with more fidelity. The result is gorgeous looking speakers that give you sound that stays true to the original recording.

## FullSound

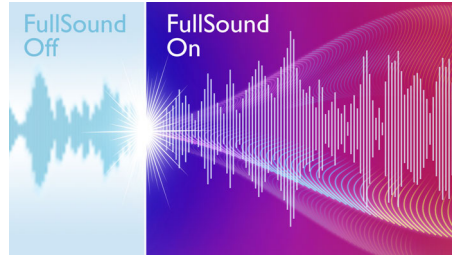

Philips' innovative FullSound technology faithfully restores sonic details to compressed music, dramatically enriching and enhancing it, so you can experience music without any distortion. Based on an audio post-processing algorithm, FullSound combines Philips' renowned expertise in music reproduction with the power of the latest generation Digital Signal Processor (DSP). The result is fuller bass with more depth and impact, boosted voice, improved instrument clarity and rich detail. Rediscover your compressed music in true-to-life sound that will touch your soul and move your feet.

## Free Internet radio stations



Streamium comes with thousands of free Internet radio stations. Now you can stay abreast of all kinds of music worldwide. Connect your Streamium to the Internet and listen to your favourite online programmes on your audio system without having to turn on your PC.

## 160 GB hard disk/2000 albums



The 160-GB hard disk of this Philips sound system provides a very large capacity for you to store your PC/MAC digital music files, easily holding up to 2000 music albums. Space saving, smart music collection management, easy access and all in one place.



## EISA Award 2010-2011

European Compact System  
This Streamium Wi-Fi audio, complete with SoundSphere speakers, will play DVD and DivX movie files and FLAC and WAV music files, and offers UPnP capability to stream MP3 music from a PC. It also plays files from its USB-connected additional 160 GB hard drive, while Ethernet or Wi-Fi connection allows you to have access to the Internet. The partnering aluminium SoundSphere speakers are driven from a 2 x 50 W Class D amplifier and combine an upward-firing bass/mid unit with a separate tweeter.



# Specifications

## Sound

- Equalizer settings: Neutral
- Sound Enhancement: Treble and Bass Control, Class "D" Digital Amplifier
- Volume Control: up/down
- Output Power: 2 x 50 W RMS

## Loudspeakers

- Main Speaker: SoundSphere, 2-way, Speaker grilles detachable

## Storage Media

- Hard Disk Capacity: 160 GB
- Type: USB HDD (External)

## Audio Playback

- Compression format: MP3, WMA, non DRM AAC (m4A), eAAC+, FLAC, Ogg Vorbis
- Playback Media: CD, CD-R, CD-RW, MP3-CD, WMA-CD, USB flash drive
- Loader Type: Tray, Motorised
- Sample frequencies: 8-48 kHz (MP3)
- PC Link playback mode: MP3 streaming via network, Wi-Fi wireless connection
- USB Direct Modes: Play/Pause, Previous/Next, Repeat, Shuffle, Stop
- Disc Playback Modes: Fast Forward/Reverse, Next/Previous Track Search, Repeat Play, Shuffle Play
- Hard Disk Playback Mode: Album, All tracks, Genre, Playlist, Same Artist, Same Genre
- ID3-tag support
- Internet Radio
- MP3 bit rates: 8-320 kbps and VBR
- WMA bit rates: up to 192 kbps, CBR/VBR

## Tuner/Reception/Transmission

- Auto digital tuning
- RDS: Programme Type, Radio Text, RDS Clock Set, Station Name
- Tuner Bands: FM Stereo
- Tuner Enhancements: Auto Store

## Picture/Display

- Picture enhancement: Video upsampling, Video upscaling, High Def (720p, 1080i, 1080p)

## Video Playback

- Disc Playback Modes: A-B Repeat, Angle, Disc Menu, Fast Reverse, Fast Forward, OSD, Resume Playback from Stop, Slow Motion, Zoom
- Playback Media: DivX, DVD+R/+RW, DVD-R/-RW, DVD-Video, Picture CD, Video CD/SVCD

## Still Picture Playback

- On-device display: JPEG from USB, Streaming from PC

- Playback Media: Picture CD to TV
- Picture Compression Format: JPEG

## Connectivity

- Other connections: Ethernet, Digital audio coaxial out
- Headphones: 3.5 mm
- Wireless connections: Wireless LAN (802.11 g), Wireless LAN (802.11b), Wireless LAN (802.11 n)
- Wireless Universal Plug and Play: UPnP client, UPnP server
- LAN wired: Ethernet (RJ 45) 1 x
- Encryption/security: WEP 128 bit, WEP 64 bit, WPA, WPS-PBC, WPS-PIN, WPA2
- Antenna: FM Dipole
- Audio Connections: Analogue Audio In (L/R), Analogue Audio Out (L/R)
- USB: USB host
- Video Output - Analogue: Component Y Pb Pr (cinch), Composite CVBS (yellow cinch)
- Video output — Digital: HDMI

## Convenience

- Display Type: LCD
- Backlight colour: White
- On-Screen Display languages: English, Dutch, French, German, Italian, Spanish, Portuguese, Swedish
- Eco Power Standby: 1 watt
- Headphone jack
- Clock: On main display, Internet time
- Alarms: Buzzer Alarm, CD Alarm, Radio Alarm, Sleep timer, HDD alarm
- Display Enhancements: Brightness Control
- Indications: DIM mode

## Accessories

- Included accessories: AC Power Cord, Composite video cable (Y), FM antenna, World Wide Warranty leaflet
- Batteries: 2 x AAA
- Quick start guide: English, French, German, Spanish, Italian, Dutch, Norwegian, Swedish, Finnish, Portuguese, Danish, Russian
- Remote control: 1-way Remote
- User Manual: English, French, German, Spanish, Italian, Dutch, Norwegian, Swedish, Finnish, Portuguese, Danish, Russian (in HDD)

## Dimensions

- Main speaker dimensions (W x H x D): 175 x 354 x 202 mm
- Set dimensions (W x H x D): 251 x 202 x 251 mm
- Set weight: 12.50 kg

## Power

- Power supply: 50 Hz, 200-240 V



Issue date 2017-04-07

Version: 19.1.6

12 NC: 8670 000 51221  
EAN: 87 12581 47491 3

© 2017 Koninklijke Philips N.V.  
All Rights reserved.

Specifications are subject to change without notice.  
Trademarks are the property of Koninklijke Philips N.V.  
or their respective owners.

[www.philips.com](http://www.philips.com)

\* Napster is available only in Germany and the United Kingdom.