

Philips SoundBar
HD Home theatre with
Ambisound

Blu-ray Disc playback

SoundBar

HTS8161B



High Definition surround sound without the clutter

Bring cinema home

Indulge in cinema-like multi channel surround sound without speakers and wires all around you. Philips SoundBar with Ambisound incorporates a complete home theatre system, including high definition Blu-Ray Disc Playback in a single unit.

Ultimate listening experience

- Ambisound technology for surround sound from fewer speakers
- HD speakers for the finest details with superb clarity
- Dolby TrueHD and DTS-HD for high fidelity 7.1 surround sound
- DoubleBASS technology for fuller and deeper bass
- FullSound™ to bring your MP3 music to life

Designed to enhance your living space


- Touch panel for intuitive playback and volume control
- Stylish design with aluminium finish and glass panels

Connect and enjoy all your entertainment

- BD-Live (Profile 2.0) to enjoy online Blu-ray bonus content
- Blu-ray Disc playback for sharp images in full HD 1080p
- Deep Color for vivid images in over a billion colours
- x.v.Colour brings more natural colours to HD camcorder videos
- Optional dock for convenient playback from your iPod


Highlights

Ambisound technology

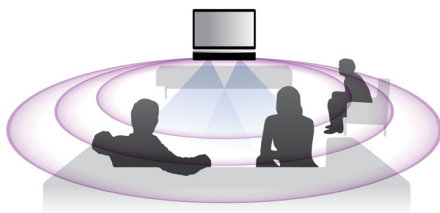


Ambisound technology produces truly embracing multi-channel surround sound from fewer speakers. It delivers an immersive 5.1 sound experience without the constraints of sitting position, room shape or size, and without the clutter of multiple speakers and cables. Through the combined effect of psychoacoustic phenomena, array processing and precisely angled driver positioning, Ambisound delivers more sound from fewer speakers.

HD speakers

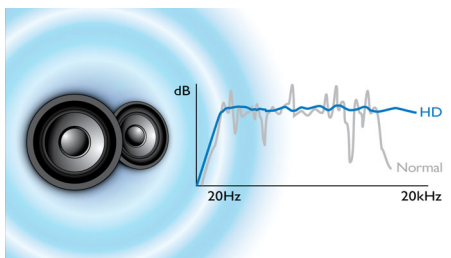


Designed to support our Ambisound technology, these HD speaker cones are geometrically designed to control the optimal directivity pattern. Using newly developed compact dense fibre-treated speaker cones, the speakers are able to reproduce the finest details from the most demanding HD sources. Now you can enjoy distortion-less and crystal clear sound from all sources.

Dolby TrueHD and DTS-HD

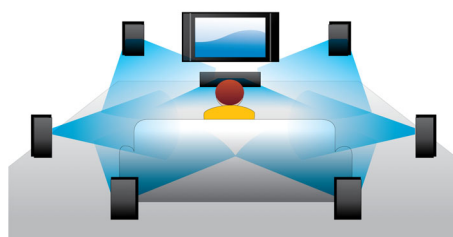


Dolby TrueHD delivers 7.1 channels and DTS-HD High Resolution Audio of the finest sound from your Blu-ray Discs. Audio reproduced is virtually indistinguishable from the studio master, so you hear what the creators intended you to hear. Dolby TrueHD and DTS-HD High Resolution Audio complete your high definition entertainment experience.

Blu-ray Disc playback

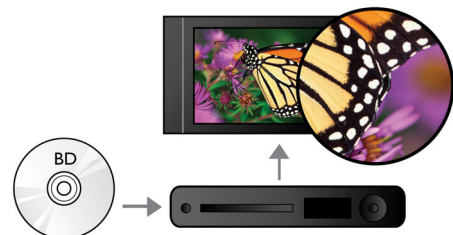

Blu-ray Discs have the capacity to carry high definition data, along with pictures in the 1920 x 1080 resolution that defines full high definition images. Scenes come to life as details leap at you, movements smoothen and images turn crystal clear. Blu-ray also delivers uncompressed surround sound — so your audio experience becomes unbelievably real. The high storage capacity of Blu-ray Discs also allows a host of interactive possibilities to be built in. Seamless navigation during playback and other exciting features such as pop-up menus bring a whole new dimension to home entertainment.

Deep Color

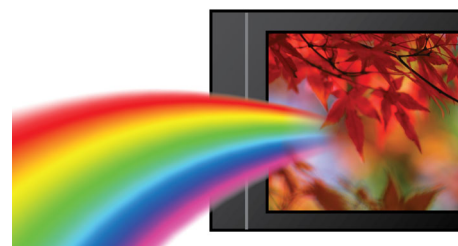

The real world is not limited by colours — practically any hue can occur in any shade, in any luminosity. What you see on your TV screen is a different matter, so images often don't look true to life. Deep Color recreates the natural world on your TV screen, bringing to you the millions and millions of colours that occur in reality — and taking your viewing experience to new heights.

Optional dock



Attach this dock to your home theatre system and you can enjoy your music, videos and pictures from your iPod devices. Dock is sold as an optional accessory.

FullSound™

Philips' innovative FullSound technology faithfully restores sonic details to compressed MP3 music, dramatically enriching and enhancing it, so you can experience CD music without any distortion. Based on an audio post-processing algorithm, FullSound combines Philips' renowned expertise in music reproduction with the power of the latest generation Digital Signal Processor (DSP). The result is fuller bass with more depth and impact, boosted voice and instrument clarity, and rich detail. Rediscover your compressed MP3 music in true-to-life sound that will touch your soul and move your feet.

Specifications

Picture/Display

- Picture enhancement: High Def (720p, 1080i, 1080p), Video upscaling

Sound

- Sound System: Ambisound, Dolby Digital, Dolby Prologic II, DTS, Stereo, Dolby True HD, DTS HD (Advanced Digital Out)
- Sound Enhancement: Smart Surround, DoubleBass, Treble and Bass Control, ClearVoice, FullSound
- Equalizer settings: Action, Rock, Concert, Classic, Drama, Jazz, Gaming, Party, News, Sports

Loudspeakers

- Loudspeaker types: Integrated with main unit
- Speaker Drivers: 6 X 51 mm (2") Full Range Drivers
- Speaker impedance: 8 ohm
- Subwoofer type: Active
- Subwoofer driver: 1 x 6.5" Long Throw woofer
- Subwoofer impedance: 4 ohm
- Subwoofer freq range: 35-200 Hz

Video Playback

- Compression formats: DivX Ultra, MPEG1, MPEG2, AVCHD, avi, MKV, MPEG4, WMV, XviD
- Playback Media: DVD-Video, DVD+R/+RW, DVD-R/-RW, Video CD/SVCD, CD-R/CD-RW, BD Video, BD-R/RE 2.0
- Video disc playback system: PAL, NTSC

Audio Playback

- Compression format: MP3, WMA
- Playback Media: Audio CD, CD-R/RW, USB flash drive, BD Video, DivX (Ultra)-CD, DVD+R/+RW, DVD-R/-RW, MP3-CD, Video CD/SVCD, WMA-CD, DVD-Video, Picture CD, DVD+R/-R DL
- MP3 bit rates: 32-256 kbps and VBR

Still Picture Playback

- Picture Compression Format: JPEG, GIF, HD JPEG

- Playback Media: CD-R/RW, DVD+R/+RW, USB flash drive, DVD-R/-RW
- Picture Enhancement: Slideshow with music playback, Rotate, Zoom

Tuner/Reception/Transmission

- Tuner Bands: FM
- RDS: Station Name

Connectivity

- Front/Side connections: USB, MP3 Line-in
- Rear Connections: HDMI output, Component Video output, TV in (audio, cinch), Easy-Fit Speaker Connectors, Interconnect (to Power Box), AUX in, Coaxial Digital Input, Composite video (CVBS) output, Dock connector, Ethernet, Optical Digital Input
- Subwoofer (Power Box): FM Antenna, AUX In (cinch, 2 pairs), Interconnect (to Main Unit)

Dimensions

- Set dimensions (W x H x D): 999 x 189 x 159 mm
- Set weight: 11.5 kg
- Subwoofer dimensions (W x H x D): 322 x 425 x 322 mm
- Subwoofer Weight: 12.7 kg
- Packaging dimensions (W x H x D): 1130 x 396 x 617 mm
- Weight incl. Packaging: 29 kg

Accessories

- Included accessories: Quick start guide, User Manual, Remote Control, Batteries for remote control, HDMI cable, MP3 Line-in cable, FM antenna, Interconnect cable, Power cord, Wall mounting bracket, World Wide Warranty leaflet, Coax digital audio cable

Power

- Power supply: 220-240 V, 50 Hz
- Standby power consumption: <0.3 W



Issue date 2017-04-04

Version: 4.0.8

12 NC: 8670 000 52373
EAN: 87 12581 48143 8

© 2017 Koninklijke Philips N.V.
All Rights reserved.

Specifications are subject to change without notice.
Trademarks are the property of Koninklijke Philips N.V.
or their respective owners.

www.philips.com