



Philips
Linea V design cordless
phone

25 min answering machine
1.8" display/white backlight
Handset speakerphone



M3551B

The finest line to connect

Design takes centre stage with the precision-engineered Philips LINEA V, with edgy form harmonising with an iconic silhouette. Elegant architecture supports smart functions and comfort, making the LINEA V a must-have masterpiece.

Exquisite design with high quality execution

- Slender design and compact footprint for space efficiency
- Calibrated, seamlessly integrated keys for precise dialling
- Charge handset either way around

Ultimate calling experience

- High-contrast 4.6 cm (1.8") 2 line reverse display
- HQ-Sound: high quality acoustic engineering for superb sound
- Handset speakerphone allows you to talk hands-free
- Save up to 50 of your favourite contacts in your phonebook
- Privacy settings: call block and call barring
- Enjoy 10 hours of talk time on a single charge
- Up to 25 minutes of messages on your answering machine
- Stay connected during power cuts via micro-USB power bank

Eco-conscious product

- Zero power emission when ECO+ mode is activated

PHILIPS

Highlights

4.6 cm (1.8") reverse display



High-contrast, white-on-black reverse LCD display ensures easy reading and also blends well with the overall sleek design language.

50-name phone book

Save up to 50 favourite contacts in your phonebook.

Calibrated keypad



The calibrated keypad allows you to clearly feel every keystroke whenever you are dialling a number or entering a contact from your phonebook. Detailed study of keypad materials and structures, as well as extensive user tests, have resulted in the right balance between key pressing force and key response to ensure precise dialling.

Compact footprint



Slender design and compact footprint for space efficiency

ECO+ mode



Philips phones are energy efficient and designed to be respectful to the environment. When ECO mode is activated the emitted radiation is reduced by up to 60%, and up to 95% when the phone is charging. With ECO+ mode activation the radiation drops to zero.


Handset speakerphone

Hands-free mode uses a built-in loudspeaker to amplify the voice of the caller, allowing you to speak and listen during a call without holding the phone to your ear. This is especially useful if you want to share the call with others or simply multitask.

Hassle-free charging

Charge handset either way around

HQ-Sound

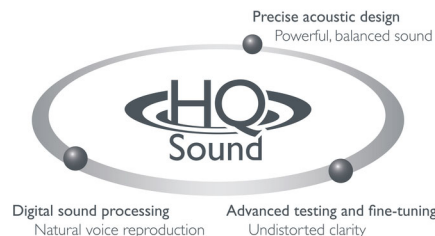

HQ-Sound: high-quality acoustic engineering for superb sound reproduction. We build upon decades of experience and breakthrough innovations in developing Hi-Fi audio products and high-end headphones to deliver excellent voice clarity on our DECT phones. When it comes to improving sound quality, our acoustics engineers and architects have thought of everything — high-quality components, digital signal processing, precise

acoustic design, advanced testing and fine-tuning. The result is sound that is crisp, clear and authentic. Sound so good and natural, it is almost like being there in person.

Micro-USB connector

The integrated micro-USB connector socket on the base unit ensures that the phone can stay powered via a pre-charged power bank, allowing you to make calls even if there is a power cut. The power bank charging feature supports most power bank products which are able to provide a minimum output current below 85 mA without automatic shutdown. Power bank sold separately.

Privacy settings

Value your privacy and quiet time at home? Black List restricts specific numbers or those starting with certain digits, protecting you from receiving unwanted calls. You can choose to block up to 4 sets of numbers. Each set can consist of 1 to 24 digits. If the number of an incoming call starts with any of these number sets or are the exact numbers that you choose to block, your phone will not ring. With Call Barring, you can avoid the surprise of expensive phone bills by blocking calls from specific numbers starting with certain digits (for example, pay per call numbers).

Up to 10 hours' talk time

Enjoy 10 hours of talk time on a single charge

Up to 25 min. recording

With up to 25 minutes' recording time on your answering machine, you'll never miss an important message.

Specifications

Convenience

- Menu structure in the handset: List Menu
- Speakerphone — talk hands-free
- Signal strength indicator: 3 bar indicator
- Battery level indicator: 3 bar battery icon
- Date/Time display
- Battery charge indication
- Signal strength indication
- Programmable hot keys: Key 1
- Call Management: Call Waiting*, Caller ID*, Microphone mute, Missed Calls, Received Calls, Dialed calls
- Keypad lock
- Key tone on/off
- Auto hang up
- Multi-base capability: 1
- Backlit keypad: Soft Amber
- Up to 180 hrs standby time
- Charge time: 8 hours
- Line cord length: 1.8 m
- Power cord length: 1.8 m
- Range: Open field <300 m; indoor <50 m
- Alarms: Alarm Clock
- Base Station keys: Paging key
- Block callers/Blacklist*: Restrict the phone from ringing on specific incoming numbers
- Call barring: Restrict the phone from making specific outgoing calls
- Event notifications: For events status
- Illuminated keypad
- Number of keys: 20
- Up to 10 hrs' talk time

Sound

- Ringtones on handset: 10 polyphonic
- HQ-Sound
- Volume control on handset

Picture/Display

- Display size: 4.6 cm/1.8"
- Display type: 1-line dot matrix + 1-line numeric + hard icons
- Backlight: Yes
- Backlight colour: White

Answering Machine

- Recording time capacity: Up to 25 minutes
- Pre-recorded OGM
- Answering Machine control: from handset only
- Answering machine control
- Call screening: Yes, from handset

Memory Capacity

- Phonebook: 50 names and numbers
- Redial List Capacity: 10 entries
- Call log entries: 20 entries
- Phonebook store in the base

Power

- Battery Capacity: 300 mAh
- Battery type: 2 x AAA NiMH Rechargeable
- Mains power: AC 100-240 V ~50/60 Hz
- Power Consumption: <0.75 W

Security

- Transmission encryption: Yes

Network Features

- Compatible: GAP

SAR Value

- Philips handsets: <0.1 W/kg

Eco Design

- Eco+

Packaging dimensions

- Packaging type: Carton
- Number of products included: 1
- Type of shelf placement: Laying
- Packaging dimensions (W x H x D): 12.1 x 22.5 x 10.1 cm
- Gross weight: 0.498 kg
- Net weight: 0.344 kg
- Tare weight: 0.154 kg
- EAN: 69 51613 99951 6

USB Charging

- Yes



Issue date 2022-07-20

Version: 4.2.4

12 NC: 8670 001 46723
EAN: 69 51613 99951 6

© 2022 Koninklijke Philips N.V.
All Rights reserved.

Specifications are subject to change without notice.
Trademarks are the property of Koninklijke Philips N.V.
or their respective owners.

www.philips.com

* *This feature requires additional subscription to Caller ID service.
Please check with your local network operator for details.