



Philips  
Portable DVD Player

18cm/ 7" digital LCD  
6-hr playtime

PD7060



## Superior picture quality

with 16.7 million true colors LCD

Enjoy movies and more on the go with the Philips Portable DVD player PD7060. The 7"/18cm digital true color LCD display brings images to life. Display and share your digital photos easily. Lightweight and compact with up to 6hrs playback.

### Play your movies, music and photos on the go

- DVD, DVD+/-R, DVD+/-RW, (S)VCD, CD compatible
- DivX Certified for standard DivX video playback
- View JPEG images from picture disc
- Play MP3/WMA-CD, CD and CD-RW

### Easily display your digital photos

- 17.8 cm (7") high density (800x480 pixels) LCD display
- 180-degree swivel screen for improved viewing flexibility
- Display photos and photo slideshows
- View photos directly from memory cards, DVDs and CDs

### Extra touches for your convenience

- Enjoy up to 6 hours continuous non-stop playback\*
- SD/SDHC card slot for music, photo and video playback
- Brightness automatically adjusts to ambient light
- Smart Car Mount for ease-of-use



asimpleswitch.com


# PHILIPS

# Highlights

## 17.8 cm (7") HD LCD display

The high resolution (800 x 480 pixel) color LCD display brings images to life, showing off your treasured photos, favorite movies and music with the same 'real life' rich detail and vibrant colors as high quality prints.

## Display photos

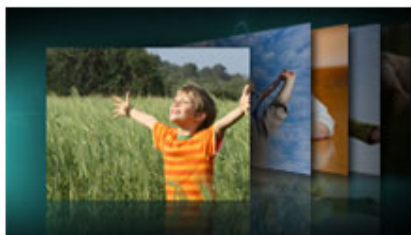

Simply insert your disc or memory card into the player and your digital photos will be played directly on the device.

## Up to 6 hrs movies playback



This Philips player comes with a compact built-in rechargeable battery for long-lasting power. Up to 6 hours of continuous movie, photo and music playback enjoyment can be achieved on a single charge. Just plug in the power cable to recharge the player - it's that simple.

## 180-degree swivel screen



The screen swivels 180° to give you the optimum viewing angle for watching movies

and photos. Rotate the screen or adjust it up and down to cut down on glare and get the best viewing angle possible.

## Play MP3/WMA-CD, CD and CD-RW



Audio compression technology allows large digital music files to be reduced up to 10 times in size without radically degrading their audio quality. MP3 or WMA are two of the compression formats that let you enjoy a world of digital music on your Philips player. Download MP3 or WMA songs from authorized music sites on the Internet or create your own MP3 or WMA music files by ripping your audio CDs and transferring them onto your player.

## Smart Car Mount



To enjoy entertainment on the go, why not bring your portable DVD player from home on the road with you? A unique Car Mount system ensures ease-of-use, with a quick-release arm that facilitates easy removal of the player when not in use. You can bring the portable DVD player with you, leaving just the Mount behind in the car.

## DivX Certified

With DivX® support, you are able to enjoy DivX encoded videos and movies from the Internet, including purchased Hollywood films.

The DivX media format is an MPEG-4 based video compression technology that enables you to save large files like movies, trailers and music videos on media like CD-R/RW and DVD recordable discs, USB storage and other memory cards for playback on your DivX Certified® Philips device.

## SmartBright

SmartBright is an exclusive Philips feature that employs a built-in sensor to automatically adjust display settings, delivering the very best viewing experience, reduced energy consumption and prolonged monitor life while eliminating bright-screen-dark-room and dark-screen-bright-room eyestrain fatigue - all without the bother of manually adjusting display brightness as room lighting conditions change.



[asimpleswitch.com](http://asimpleswitch.com)

## Philips Green Logo

Philips Green Products can reduce costs, energy consumption and CO2 emissions. How? They offer a significant environmental improvement in one or more of the Philips Green Focal Areas – Energy efficiency, Packaging, Hazardous substances, Weight, Recycling and disposal and Lifetime reliability.



# Specifications

## Picture/Display

- Diagonal screen size: 7 inch / 18 cm
- Resolution: 800(w)x480(H)x3(RGB)
- Display screen type: LCD TFT
- LCD panel type: Anti-glare polarizer

## Sound

- Output Power: 600mW RMS(built-in speakers)
- Output power (RMS): 5mW RMS(earphone)
- Signal to noise ratio: >80dB(line out), >76dB(earphone), >62dB(built-in speakers)

## Video Playback

- Playback Media: DVD, Picture CD, SVCD, Video CD, DVD-R/-RW, MP3-CD, CD-R/CD-RW, DVD+R/+RW, CD, WMA
- Disc Playback Modes: A-B Repeat, Angle, Disc Menu, Fast Backward, Fast Forward, OSD, Repeat, Shuffle Play, Zoom, Resume Playback from Stop
- Video disc playback system: PAL, NTSC
- Compression formats: Divx, MPEG4

## Audio Playback

- MP3 bit rates: 32 - 320 kbps
- Compression format: Dolby Digital, MP3, WMA
- WMA bit rates: 32 - 192 kbps
- Playback Media: CD, CD-RW, MP3-CD, CD-R, WMA-CD
- File systems supported: ISO-9660, Joliet

## Connectivity

- DC in: 9V, 1.5A

- Headphone jack: 3.5mm Stereo Headphone x 2
- AV output: Composite (CVBS) x1
- SD/MMC card slot: SD/SDHC card slot

## Convenience

- Battery charging indication
- Shock proof

## Accessories

- AC/DC Adaptor: DC 9V, 1.5A, 110-240v, 50/60Hz
- Cables: 1 x AV Cables
- Remote control: AY5509 slim remote
- User Manual: Multi languages
- Car kit: cigarette outlet adaptor, 12vDC
- Smart car mount

## Power

- Battery Type: Built-in battery
- Battery lifetime: Up to 6 hours\*

## Dimensions

- Master carton dimensions: 225 x 270 x 245 mm
- Master carton quantity: 3
- Master carton weight: 4.87 kg
- Packaging dimensions (W x H x D): 235 x 255 x 70 mm
- Product dimensions (W x H x D): 197 x 31 x 166 mm
- Product weight: 0.83 kg
- Packaging type: D-box



Issue date 2017-04-05

Version: 1.1.7

12 NC: 8670 000 59228  
EAN: 87 12581 52057 1

© 2017 Koninklijke Philips N.V.  
All Rights reserved.

Specifications are subject to change without notice.  
Trademarks are the property of Koninklijke Philips N.V.  
or their respective owners.

[www.philips.com](http://www.philips.com)

\* DivX, DivX Certified, and associated logos are trademarks of DivXNetworks, Inc. and are used under license.  
\* Windows Media and the Windows logo are trademarks, or registered trademarks of Microsoft Corporation in the United States and/or other countries.  
\* Rechargeable batteries have a limited number of charge cycles and may eventually need to be replaced. Battery life and number of charge cycles vary by use and settings.  
\* Battery life varies by use and settings.  
\* Battery life of playtime is approximate and may vary depending on application condition. To optimize battery life, user should turn LCD backlight to minimum, connect to headphones (not built-in speakers) and listen at medium volume level, and use the product at room temperature.